

manuals.plus /

- > [Philips](#) /
- > [Philips SRP2003/27 Universal Remote Control Instruction Manual](#)

Philips SRP2003/27

Philips SRP2003/27 Universal Remote Control Instruction Manual

Model: SRP2003/27

INTRODUCTION

This manual provides instructions for the Philips SRP2003/27 Universal Remote Control. This 3-in-1 remote is designed to control your television, DVD player, and cable/satellite box, simplifying your home entertainment experience. It features large buttons for improved readability and an ergonomic design for comfortable handling.





Image: Philips SRP2003/27 Universal Remote Control, angled view showing all buttons and ergonomic shape.

PACKAGE CONTENTS

- Philips SRP2003 Universal Remote Control
- User Manual (this document)

SETUP

1. Battery Installation

The remote control requires four (4) AAA batteries (not included). Ensure correct polarity when inserting the batteries.

1. Open the battery compartment cover on the back of the remote control.
2. Insert four new AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Device Programming (SimpleSetup)

The Philips SRP2003/27 features SimpleSetup for quick device configuration. In some cases, your devices may respond automatically without manual programming. If not, follow these steps:

1. Turn on the device you wish to program (e.g., TV, DVD player, Cable box).
2. Press and hold the corresponding device button on the remote (e.g., **TV**, **DVD**, **CBL**). The indicator light on the remote will illuminate.
3. While holding the device button, enter the four-digit code for your device's brand. A comprehensive list of codes can be found in the included user manual or on the dedicated Philips universal remote control website.
4. Release the device button. The indicator light should turn off.
5. Point the remote at your device and press the **POWER** button. If the device turns off, the code is correct.
6. If the device does not turn off, repeat steps 2-5, trying the next code listed for your brand until the device responds.

This remote is compatible with over 650 devices, including various models of TVs, DVD players, Blu-Ray players, DVRs, DTVs, SAT devices, and CABLE devices.





Image: Front view of the Philips SRP2003/27 Universal Remote Control, highlighting the large, clearly labeled buttons.

OPERATING THE REMOTE CONTROL

Once programmed, the remote control allows you to operate your selected devices. The buttons are intuitively laid out for ease of use.

- **Device Buttons (TV, DVD, CBL, SAT, VCR, INPUT)** Select the device you wish to control. The remote will operate functions for the currently selected device.
- **POWER:** Turns the selected device on or off.
- **VOL +/-:** Adjusts the volume of the selected device.
- **CH +/-:** Changes channels on the selected device.
- **MUTE:** Mutes the audio of the selected device.
- **Number Pad (0-9):** For direct channel entry or other numerical inputs.
- **Navigation Pad (Arrows, OK):** Used for menu navigation and selection.
- **MENU, GUIDE, INFO, EXIT:** Accesses specific functions on your device, such as on-screen menus, program guides, information displays, and exiting menus.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls playback functions for DVD players, DVRs, or other media devices.

The ergonomic design and large buttons enhance operability and readability, making it comfortable to hold and easy to use.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or the indicator light fails to

illuminate. Always replace all four AAA batteries at the same time with new ones.

- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding to device:**
 - Ensure fresh batteries are correctly installed.
 - Verify that the correct device button (e.g., TV, DVD) is selected on the remote.
 - Confirm that the remote is pointed directly at the device and there are no obstructions.
 - Re-enter the programming code for your device. If the first code does not work, try other codes listed for your brand.
- **Some functions not working:**
 - Not all functions of your original remote may be supported by the universal remote.
 - Ensure the correct device button is selected.
 - Try alternative codes for your device, as some codes may offer better compatibility with specific functions.
- **Indicator light not illuminating:**
 - Replace the batteries.
 - Check battery polarity.

SPECIFICATIONS

| | |
|-------------------------------|--|
| Model Number | SRP2003/27 |
| Dimensions (L x W x H) | 10.8 x 4.5 x 1 inches |
| Weight | 1.22 ounces |
| Color | Black |
| Batteries Required | 4 x AAA (not included) |
| Compatible Devices | TVs, DVD players, Blu-Ray players, DVRs, DTVs, SAT devices, Cable boxes (over 650 devices) |
| Special Features | Ergonomic design, Universal compatibility, Large buttons, SimpleSetup |

WARRANTY INFORMATION

The Philips SRP2003/27 Universal Remote Control is backed by a one-year limited warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Philips support resources.

SUPPORT

For additional assistance, programming codes, or troubleshooting, please visit the dedicated Philips universal remote control website. This resource provides comprehensive support and updated code lists for various devices.

Note: Specific website addresses are not provided in this manual. Please refer to the packaging or original documentation for direct links.

