

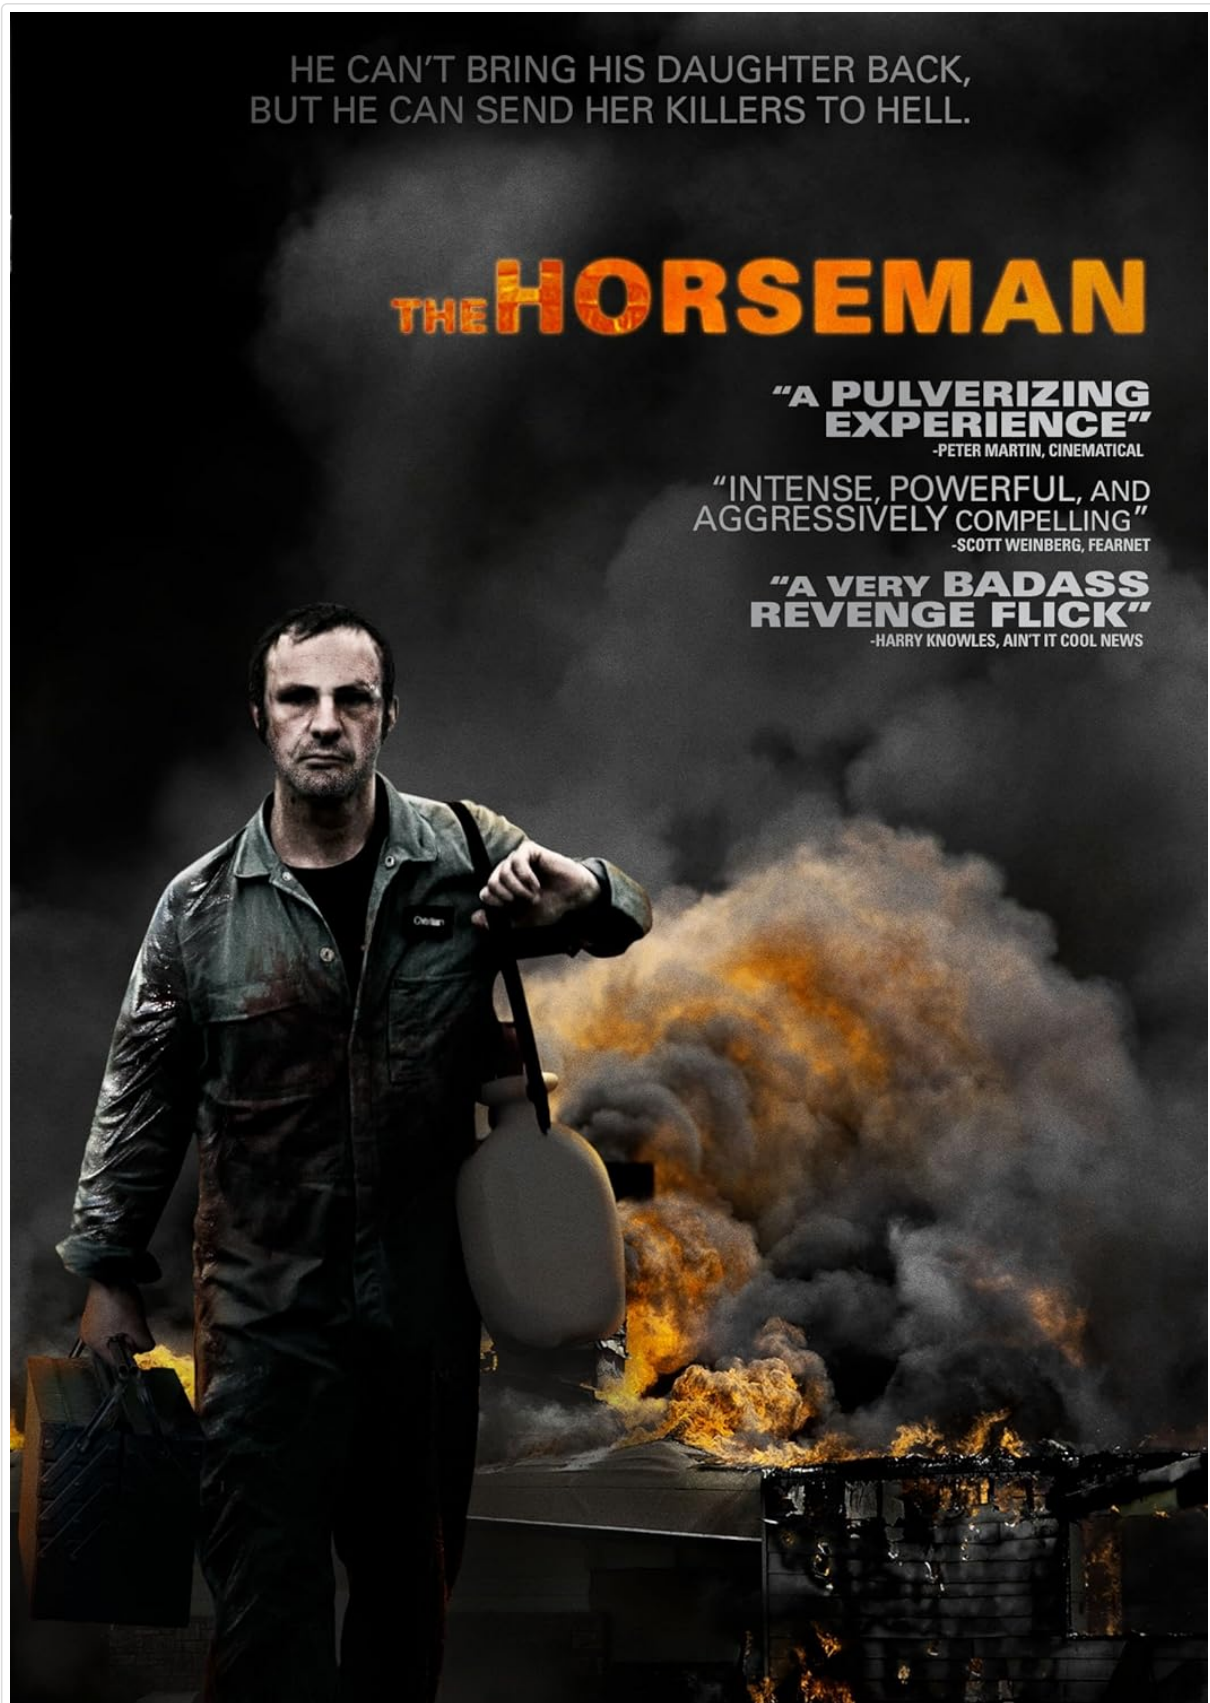 
Screen Media SCMD801053DVD

The Horseman DVD Instruction Manual

Model: SCMD801053DVD

INTRODUCTION

This manual provides essential information for the proper use and care of your 'The Horseman' DVD. It covers setup, playback, maintenance, and troubleshooting to ensure an optimal viewing experience. Please read this guide thoroughly before using the product.



This image displays the official DVD cover art for 'The Horseman'. It features the film's protagonist, Christian, portrayed by Peter Marshall, standing amidst smoke and fire, symbolizing the intense and vengeful nature of the film's narrative. The title 'The Horseman' is prominently displayed at the top.

1. SETUP

1. **Unpack the DVD:** Carefully remove the DVD disc from its packaging. Handle the disc by its edges to avoid fingerprints on the playing surface.

2. **Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and is powered on. Refer to your DVD player's manual for specific connection instructions.
3. **Insert the Disc:** Open the disc tray or slot on your DVD player. Place the 'The Horseman' DVD disc into the tray with the label side facing up. Close the disc tray or gently push the disc into the slot.
4. **Select Input:** On your television or display device, select the correct input source (e.g., HDMI 1, AV, Component) that corresponds to your DVD player's connection.
5. **Power On:** The DVD player should automatically detect the disc and display the main menu or begin playback. If not, press the 'Play' button on your DVD player or remote control.

2. OPERATING INSTRUCTIONS

2.1 Main Menu Navigation

Upon disc insertion, the main menu will typically appear. Use the arrow keys on your remote control to navigate between options such as 'Play Movie', 'Scene Selection', 'Special Features', and 'Setup'. Press 'Enter' or 'OK' to select an option.

2.2 Playback Controls

- **Play/Pause:** Press the 'Play' button to start playback or resume from a pause. Press 'Pause' to temporarily stop the movie.
- **Stop:** Press the 'Stop' button to end playback and return to the main menu or the beginning of the disc.
- **Fast Forward/Rewind:** Use the 'FF' (Fast Forward) and 'RW' (Rewind) buttons to quickly scan through the movie.
- **Skip:** Use the 'Skip Forward' or 'Skip Back' buttons (often represented by double arrows) to jump to the next or previous chapter/scene.

2.3 Special Features

The 'The Horseman' DVD includes the following special features:

- **Short Film with Commentary:** Access a short film related to the main feature, accompanied by an audio commentary track.
- **Director and Cast Commentary:** Listen to an audio commentary track featuring the director, Steven Kastrissios, and members of the cast, including Peter Marshall, providing insights into the film's production.

Navigate to the 'Special Features' section from the main menu to access these options.

2.4 Language and Subtitle Selection

If available, language and subtitle options can usually be selected from the main menu's 'Setup' or 'Audio/Subtitles' section, or by pressing the 'Audio' or 'Subtitle' button on your remote during playback. This DVD includes English subtitles.

3. MAINTENANCE AND CARE

- **Handling:** Always hold the DVD disc by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (such as a microfiber cloth) from the center outwards. Do not use abrasive materials or harsh cleaning solvents. For

stubborn marks, a specialized DVD cleaning solution can be used sparingly.

- **Storage:** Store the DVD disc in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, high humidity, and dust. Proper storage prevents scratches and prolongs disc life.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

4. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|--|---|
| Disc does not play or load. | Disc inserted incorrectly, dirty disc, incompatible player, or player malfunction. | Ensure disc is inserted label-side up. Clean the disc. Verify your player supports DVD format. Try another DVD to check player functionality. |
| Movie skips or freezes. | Scratched or dirty disc, or player lens issue. | Clean the disc thoroughly. Inspect for deep scratches. If the problem persists with other discs, the player's lens may need cleaning or servicing. |
| No audio or video during playback. | Incorrect TV input, loose cables, or player settings. | Check that your TV is on the correct input source. Ensure all audio/video cables between the DVD player and TV are securely connected. Verify player's audio/video output settings. |
| Cannot access special features. | Incorrect menu selection. | From the main menu, navigate specifically to the 'Special Features' section and select the desired option. |

5. SPECIFICATIONS

Title: The Horseman
Brand: Screen Media
Model Number: SCMD801053DVD
ASIN: B003DT198C
Format: DVD (AC-3, Color, Dolby, Multiple Formats, NTSC, Subtitled, Widescreen)
Aspect Ratio: 1.77:1
MPAA Rating: R (Restricted)
Run Time: 1 hour and 35 minutes
Release Date: June 15, 2010
Director: Steven Kastrissios
Actors: Peter Marshall
Language: English
Subtitles: English
Number of Discs: 1
Product Dimensions: 0.7 x 7.5 x 5.4 inches; 2.72 ounces
Genre: Drama

6. WARRANTY INFORMATION

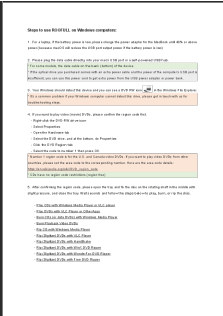 
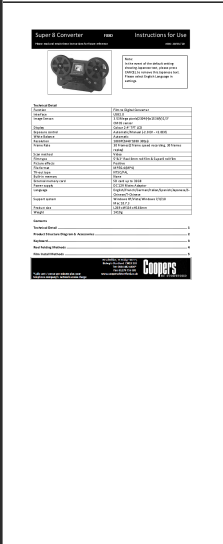 

Specific warranty details for 'The Horseman' DVD are typically provided by the retailer at the time of purchase or by the manufacturer, Screen Media, within the product packaging. Please refer to your purchase receipt or the DVD case for any applicable warranty terms and conditions regarding defects or damage.


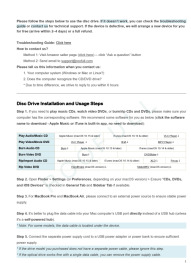 

7. CUSTOMER SUPPORT

For technical assistance or inquiries regarding 'The Horseman' DVD, please contact the retailer from whom the product was purchased. For general information about Screen Media products, you may visit their official website or refer to the contact information provided on the DVD packaging.

© 2023 Screen Media. All rights reserved.

Related Documents - SCMD801053DVD

| | |
|---|---|
|  | <p>ROOFULL External Drive: Guide to Using on Windows Computers</p> <p>Comprehensive guide on how to connect, play, burn, and rip CDs and DVDs using your ROOFULL external drive on Windows. Includes software recommendations like VLC, HandBrake, and detailed step-by-step instructions.</p> |
|  | <p>Super 8 Converter F880: User Manual and Instructions</p> <p>Comprehensive instructions for the Coopers of Stortford Super 8 Converter F880, detailing setup, operation, safety guidelines, and maintenance for digitizing Super 8 and 8mm films.</p> |
|  | <p>3M™ Scotchcal™ Paint Film Series Product Catalog</p> <p>Comprehensive catalog detailing the 3M™ Scotchcal™ Paint Film Series, including PF Series, CPG Series, and BSPC films for signage, graphics, architectural, and vehicle applications. Features product specifications, application suitability, and installation guides.</p> |

| | |
|---|---|
|  | <p>SUNSHINE SS-890C mini Film Cutting Machine User's Manual</p> <p>User's manual for the SUNSHINE SS-890C mini film cutting machine, covering machine parts, basic operation, Wi-Fi and Bluetooth software connectivity, material placement, and recharge procedures.</p> |
|  | <p>ROOFULL External CD/DVD Drive User Manual for Mac: Installation, Playback, Burning, and Ripping Guide</p> <p>This comprehensive guide details the installation, usage, and troubleshooting for the ROOFULL external CD/DVD drive on macOS. It covers playing audio CDs and video DVDs using various software like Apple Music, iTunes, VLC, IINA, and MPV Player, as well as instructions for burning CDs and DVDs and ripping discs using tools such as Burn App, DVDStyler, HandBrake, MakeMKV, XLD, and Fre:ac.</p> |
|  | <p>Towond 100-Inch Portable Projector Screen Installation Manual</p> <p>Step-by-step guide for setting up the Towond 100-inch portable projector screen, including accessory identification and assembly instructions.</p> |