

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Presto](#) /

> [Presto 85716 Electric Griddle Handle Set Instruction Manual](#)

Presto 85716

Presto 85716 Electric Griddle Handle Set Instruction Manual

Model: 85716

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of your Presto 85716 Electric Griddle Handle Set. This set includes two replacement handles designed to fit specific Presto electric griddle models, ensuring safe and convenient handling of your appliance.

1.1 What's Included

- Two (2) Presto 85716 Electric Griddle Handles

1.2 Compatible Models

The Presto 85716 Handle Set is compatible with the following Presto electric griddle models:

- WeeFry Skillet 01/WFS1
- FullFry Skillet 0652101
- Liddle Griddle 0704202
- Liddle Griddle 0721101
- Liddle Griddle 0721001
- Liddle Griddle 01/LG1

2. SETUP AND INSTALLATION

Before installing the new handles, ensure your electric griddle is unplugged and completely cool. The handles are designed for easy attachment and removal, facilitating cleaning and compact storage.

2.1 Attaching the Handles

1. Locate the handle attachment points on the underside of your Presto electric griddle. These points typically feature screws or a spring-loaded mechanism.
2. Align one of the new handles with the attachment points.

3. Secure the handle by tightening the screws or engaging the spring mechanism. Ensure the handle is firmly attached and does not wobble.
4. Repeat the process for the second handle on the opposite side of the griddle.



Figure 1: Presto Electric Griddle with the handle set installed. The handles provide a secure grip for moving the griddle.

2.2 Removing the Handles (for cleaning or storage)

1. Ensure the griddle is unplugged and cool.
2. Locate the screws or spring mechanism securing the handles on the underside of the griddle.
3. Loosen the screws or disengage the spring mechanism to release the handle.
4. Gently pull the handle away from the griddle.
5. Repeat for the other handle.

3. OPERATING YOUR GRIDDLE WITH NEW HANDLES

The Presto 85716 handles are designed to provide a secure and comfortable grip when moving or positioning your electric griddle. Always ensure handles are firmly attached before use.

- **Safe Handling:** Use the handles to safely transport the griddle when it is cool. Avoid touching the griddle surface or heating element when hot.

- **Stability:** The handles contribute to the overall stability of the griddle during use and when moving.
- **Griddle Features:** Your Presto electric griddle features a non-stick surface for easy cooking and consistent heating across the entire cooking area. The handles support the convenient use of these features by allowing easy placement and storage.

4. CARE AND MAINTENANCE

Proper care extends the life of your handle set and ensures continued safe operation of your griddle.

4.1 Cleaning the Handles

- The handles can be wiped clean with a damp cloth and mild detergent.
- For thorough cleaning, the handles can be easily removed from the griddle (refer to Section 2.2) and washed by hand.
- Do not immerse the griddle's electrical components in water.
- Ensure handles are completely dry before reattaching them to the griddle.

4.2 Storage

The removable design of the handles allows for more compact storage of your griddle. Once removed, the griddle can fit into standard depth cabinets.

5. TROUBLESHOOTING

If you encounter issues with your Presto 85716 Electric Griddle Handle Set, please refer to the following common solutions:

Problem	Possible Cause	Solution
Handles feel loose after installation.	Screws not fully tightened or mechanism not fully engaged.	Ensure all screws are securely tightened or the spring mechanism is properly locked into place.
Handles do not fit the griddle.	Incorrect model compatibility.	Verify your griddle model number against the list of compatible models in Section 1.2. If your model is not listed, these handles may not be suitable.

6. SPECIFICATIONS

- **Model:** Presto 85716
- **Special Feature:** Handle Set
- **Color:** Black
- **Material:** Plastic
- **Included Components:** Two (2) Handles
- **Package Dimensions:** 9.57 x 7.09 x 2.99 inches
- **Item Weight:** 9.6 ounces
- **UPC:** 744539017220
- **ASIN:** B003EMFY8Y
- **Date First Available:** March 30, 2010

Note: Specifications related to wattage, voltage, and number of settings pertain to the electric griddle itself, not the handle set.

7. WARRANTY AND SUPPORT

7.1 Limited Warranty

This Presto 85716 Electric Griddle Handle Set is covered by a limited warranty. For specific terms and conditions of the warranty, please refer to the documentation included with your original Presto electric griddle or contact Presto customer service directly.

7.2 Customer Support

For further assistance, replacement parts, or inquiries not covered in this manual, please contact Presto customer service. Contact information can typically be found on the official Presto website or on the packaging of your product.