

Manuals.plus /

› Wahl Professional /

› Wahl Professional Standard Snap-On Blade Instruction Manual for Peanut and Bullet Trimmers

Wahl Professional I0019966

Wahl Professional Standard Snap-On Blade Instruction Manual

Model: I0019966

1. PRODUCT OVERVIEW

The Wahl Professional Standard Snap-On Blade is designed for precise and efficient trimming. This replacement blade ensures sharp performance and is engineered for easy maintenance and quick changes, providing a smooth and comfortable trimming experience across all hair types.



Image: Wahl Professional Peanut/Bullet Blade, Model 02068-1001, highlighting blade geometry, skin safety, and quick-detach feature.

2. COMPATIBILITY

This Standard Snap-On Blade (Model I0019966) is specifically designed for use with Wahl Professional Peanut and Bullet trimmers. Ensure your device model matches the compatible units listed below for proper fit and function.

- Wahl Black Peanut Trimmer (Model 08655-200)
- Wahl Sterling Bullet Trimmer (Model 08035)
- Wahl Peanut (Clipper/Trimmer)

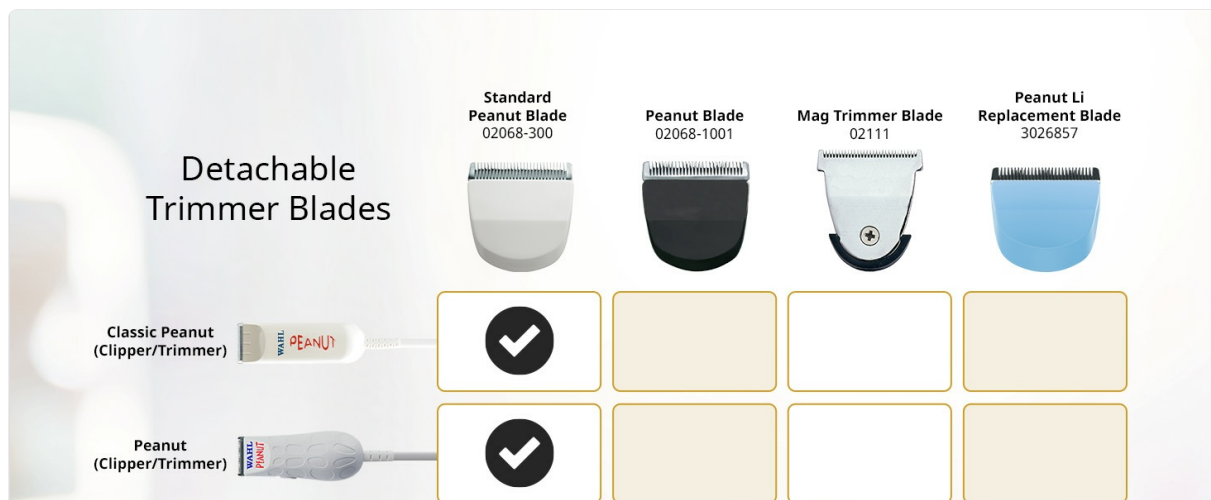


Image: Compatibility of the blade with Wahl Black Peanut and Bullet trimmers.



Image: Compatibility chart for detachable trimmer blades.

3. INSTALLATION

The snap-on design allows for easy and quick installation of the blade. Follow these steps to replace or install your blade:

1. Ensure the trimmer is turned off and unplugged from any power source.
2. Gently push the old blade assembly forward and away from the trimmer body to detach it.
3. Align the new snap-on blade with the trimmer's blade slot.
4. Press the blade firmly until it clicks securely into place.
5. Verify that the blade is properly seated and does not wobble before use.

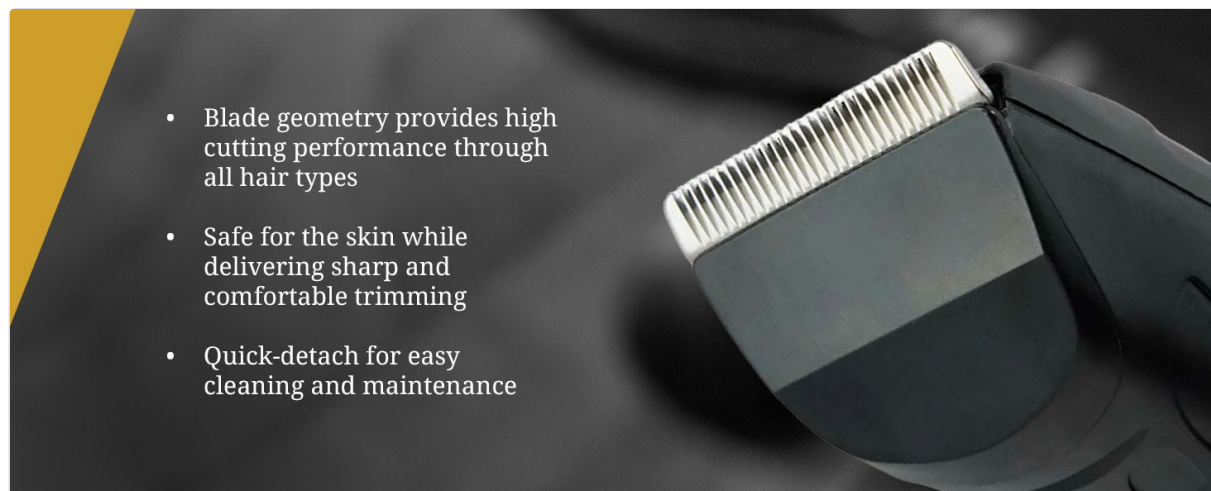


Image: Demonstration of quick blade replacement on a Wahl Peanut trimmer.

4. MAINTENANCE

Regular maintenance is crucial for extending the life and performance of your blade. Keep your blade clean and lubricated.

Cleaning

- After each use, brush away loose hair from the blade.
- For thorough cleaning, detach the blade as described in the installation section.
- Use a blade cleaning spray, such as Wahl Clini-Clip Spray, to disinfect and clean the blade. Follow the product instructions for the spray.
- Ensure the blade is dry before reattaching or storing.

Lubrication

- Apply a few drops of Wahl Clipper Oil to the teeth and heel of the blade after each cleaning or regularly, depending on usage.
- Turn on the trimmer for a few seconds to allow the oil to distribute evenly across the blade surfaces.
- Wipe off any excess oil with a clean cloth.



Wahl Clini-Clip Spray: Disinfectant and cleaner for clipper blades.



Wahl Oil: To maintain optimal blade lubrication.

5. SPECIFICATIONS

Feature	Detail
Product Name	Standard Snap-On Bullet/Bullet Unplugged Blade
Brand	Wahl Professional
Model Number	I0019966
Product Dimensions	3 x 2 x 3 inches
Item Weight	0.01 ounces
UPC	043917206813, 885311937821
ASIN	B003EMLDYI
Manufacturer	WAHL

6. TROUBLESHOOTING

If you experience issues with your Wahl Professional Standard Snap-On Blade, consider the following:

- **Poor Cutting Performance:** Ensure the blade is clean and properly oiled. A dull blade may require replacement.
- **Blade Not Attaching Securely:** Check for any debris in the blade slot or on the blade itself. Ensure the blade is aligned correctly and pressed firmly until it clicks into place.
- **Excessive Noise/Vibration:** This could indicate improper blade seating or lack of lubrication. Re-seat the blade and apply oil.

For further assistance, please refer to the support resources provided by Wahl Professional.

7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please visit the official Wahl Professional website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Official Website: wahlpro.com