

GPX D200B

GPX D200B Progressive Scan DVD Player User Manual

Model: D200B

INTRODUCTION

This user manual provides essential information for the setup, operation, and maintenance of your GPX D200B Progressive Scan DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your viewing and listening experience.

The GPX D200B is a slim, 2-channel DVD player designed to integrate seamlessly into your home entertainment system. It supports progressive scan output and is compatible with a variety of disc formats including DVD-R/RW, DVD+R/RW, CD/CD-R/RW, and JPEG discs. Key features include a multi-language on-screen display, NTSC/PAL system conversion, and versatile audio/video output options.

SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent electric shock, fire, or damage to the unit:

- Do not expose this unit to rain or moisture.
- Ensure proper ventilation; do not block any ventilation openings.
- Do not place the unit on unstable surfaces.
- Avoid placing objects filled with liquids, such as vases, on the unit.
- Clean only with a dry cloth.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in the package:

- GPX D200B Progressive Scan DVD Player
- Full Function Remote Control (batteries not included)
- Audio/Video Hookup Cables (RCA)
- User Manual (this document)

PRODUCT OVERVIEW

Front Panel



Image: Front view of the GPX D200B DVD Player, showing the disc tray, Open/Close, Play/Pause, Stop, and Power buttons.



Image: Angled view of the GPX D200B DVD Player, highlighting its slim design and front panel controls.

The front panel features the disc tray, along with essential control buttons: **OPEN/CLOSE** for the disc tray, **PLAY/PAUSE** for media playback control, **STOP** to halt playback, and the **POWER** button to turn the unit on or off.

Rear Panel Connections



NO HDMI

Image: Rear panel of the GPX D200B DVD Player, displaying the various audio and video output ports, including component video (Y, Pb, Pr), composite video, stereo audio (L/R), and digital coaxial output. Note: This model does not feature an HDMI output.

The rear panel provides all necessary connections for audio and video output. These include Y, Pb, Pr (component video) for progressive scan, standard composite video (yellow RCA), 2-channel stereo audio (red and white RCA), and a digital coaxial output for audio.

Remote Control





Image: The full-function remote control for the GPX D200B DVD Player, featuring buttons for power, mute, numeric input, navigation, volume, playback controls, and various setup options.

The included full-function remote control allows for convenient operation of all DVD player features from a distance. It requires 2 AAA batteries (not included).

SETUP

Connecting to a Television

The GPX D200B offers multiple ways to connect to your television. Choose the connection type that best suits your TV's available inputs.

Component Video (Y, Pb, Pr) Connection for Progressive Scan:

- Connect the green (Y), blue (Pb), and red (Pr) component video cables from the DVD player's "PROGRESSIVE SCAN OUTPUT" jacks to the corresponding "COMPONENT VIDEO INPUT" jacks on your TV.

- Connect the red (R) and white (L) audio cables from the DVD player's "AUDIO OUT" jacks to the "AUDIO INPUT" jacks on your TV or audio receiver.
- Select the correct component video input on your TV.

Composite Video Connection:

- Connect the yellow (VIDEO) cable from the DVD player's "VIDEO OUT" jack to the "VIDEO INPUT" jack on your TV.
- Connect the red (R) and white (L) audio cables from the DVD player's "AUDIO OUT" jacks to the "AUDIO INPUT" jacks on your TV or audio receiver.
- Select the correct composite video input on your TV.

Note: This DVD player does not have an HDMI output.

Power Connection

The GPX D200B has a built-in AC power cord. Simply plug the power cord into a standard AC wall outlet (120V~60Hz).

Remote Control Battery Installation

Open the battery compartment on the back of the remote control. Insert two (2) AAA batteries, ensuring correct polarity (+/-). Close the compartment securely.

OPERATING INSTRUCTIONS

Basic Disc Playback

1. Ensure the DVD player is connected to your TV and powered on.
2. Press the **OPEN/CLOSE** button on the front panel or remote control to open the disc tray.



Image: The DVD player with its disc tray open and empty, ready for disc insertion.

3. Place a compatible disc (DVD, CD, JPEG) onto the disc tray with the label side facing up.



Image: A DVD disc placed correctly in the open disc tray of the player.

4. Press the **OPEN/CLOSE** button again to close the disc tray.
5. The player will automatically begin reading the disc. If it's a DVD, playback should start automatically. For CDs or JPEG discs, you may need to select tracks or files using the remote control.
6. Use the **PLAY/PAUSE**, **STOP**, **SKIP**, and **FAST FORWARD/REWIND** buttons on the remote for playback control.

Disc Compatibility

The GPX D200B supports the following disc formats:

- DVD-R/RW
- DVD+R/RW
- CD
- CD-R/RW
- JPEG discs

Note: Some discs may not play due to recording quality, format, or physical condition.

On-Screen Display and Language Settings

Access the system setup menu using the **SETUP** button on the remote control. From this menu, you can adjust various settings including:

- **Language:** Set the language for the on-screen display (English, French, Spanish).
- **Audio:** Adjust audio output settings.
- **Video:** Configure video output options, including aspect ratio (4:3/16:9).
- **NTSC/PAL System Converter:** This player includes a built-in converter to ensure compatibility with different regional video standards.

MAINTENANCE

Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure no liquids enter the unit.

Disc Care

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Clean discs with a soft, lint-free cloth, wiping gently from the center outwards.
- Store discs in their cases to protect them from dust and scratches.
- Avoid exposing discs to direct sunlight or extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your GPX D200B DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cord not securely plugged in.	Check power cord connection to the wall outlet and the unit.
No Picture	Incorrect video cable connection; TV input not selected correctly.	Ensure video cables (yellow, Y/Pb/Pr) are connected properly. Select the correct input source on your TV.
No Sound	Audio cables not connected; TV/receiver volume too low or muted.	Check red and white audio cable connections. Increase volume on TV/receiver; check mute function.
Disc Not Playing	Disc is dirty, scratched, or incompatible format; disc inserted incorrectly.	Clean the disc. Check for scratches. Ensure disc is compatible (DVD, CD, JPEG). Insert disc with label side up.
Remote Control Not Working	Batteries are dead or inserted incorrectly; obstruction between remote and player.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure you are within range and pointing directly at the player's sensor.

For further assistance, please refer to the full user manual PDF available on the GPX support website or contact GPX customer support.

SPECIFICATIONS

Feature	Detail
Model Number	D200B
Brand	GPX
Disc Compatibility	DVD-R/RW, DVD+R/RW, CD, CD-R/RW, JPEG
Audio Channels	2-channel stereo
Video Output	Progressive Scan (Y, Pb, Pr), Composite Video (RCA)
Audio Output	2-channel L/R (RCA), Digital Coaxial

Feature	Detail
Aspect Ratio Conversion	4:3 / 16:9
System Converter	NTSC/PAL
Power Source	Built-in AC power cord
Dimensions (L x W x H)	9.45 x 8.27 x 1.5 inches
Weight	1.9 pounds (approx. 862 grams)

WARRANTY AND SUPPORT

GPX products are designed for reliability and performance. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official GPX website for details.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact GPX customer service. Contact information can typically be found on the GPX website or in the product packaging.

You can also find additional resources, including a downloadable PDF version of this user manual, on the [GPX support page](#).

© 2024 GPX. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

