

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [RCA](#) /
- › [RCA RCRN04GBE 4-Device Universal Remote Control User Manual](#)

## RCA RCRN04GBE

# RCA RCRN04GBE 4-Device Universal Remote Control User Manual

Model: RCRN04GBE | Brand: RCA

## PRODUCT OVERVIEW

The RCA RCRN04GBE is a versatile 4-device universal remote control designed to simplify your home entertainment experience. It allows you to control up to four different audio/video components, such as TVs, satellite/cable boxes, DVD/VCR players, and streaming devices, from a single remote. Its ergonomic and thin design ensures comfortable handling, while the green backlit keypad enhances visibility in low-light conditions.



Image: RCA RCRN04GBE 4-Device Universal Remote Control, front view.

### Key Features:

- Controls up to four devices: TV, SAT/CBL/DTC/DVD/VCR.
- Green backlit keypad with distinct red, blue, yellow, and green keys for advanced functions.
- Ergonomic and thin design for comfortable use.
- Includes codes for various streaming players.
- Features an auto code search function for easy setup.
- Supports a wide range of major brands.
- Requires 2 AAA batteries (not included).

## WHAT'S IN THE BOX

---

- 1 x RCA RCRN04GBE 4-device Green Backlit Universal Remote Control

## SETUP INSTRUCTIONS

---

### 1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two new AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.



Image: Rear view of the remote control with the battery cover removed, showing the battery slots.

### 2. Programming Your Remote Control

The RCA RCRN04GBE can be programmed using either direct code entry or auto code search. Refer to the included code list for your specific device brands.

#### Direct Code Entry:

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **SETUP** button until the red indicator light stays on.
3. Press the device button you want to program (e.g., **TV**, **DVD**). The indicator light will blink once and remain on.
4. Enter the 4-digit code for your device brand from the code list. The indicator light will turn off if the code is valid.
5. Test the remote by pressing the **POWER** button. If the device turns off, the remote is programmed. If not, repeat the steps with the next code for your brand.

#### Auto Code Search:

1. Turn on the device you wish to control.
2. Press and hold the **SETUP** button until the red indicator light stays on.
3. Press the device button you want to program. The indicator light will blink once and remain on.
4. Point the remote at the device and press the **POWER** button repeatedly (approximately every 2 seconds) until the device turns off.
5. Once the device turns off, press the **ENTER** button to save the code.
6. Test the remote's functions. If some functions do not work, repeat the auto code search to find a more compatible code.

Your browser does not support the video tag.

Video: A user demonstrating the programming process for a universal remote control, highlighting button presses and setup steps.

## OPERATING INSTRUCTIONS

---

After successfully programming your RCA RCRN04GBE universal remote, you can begin controlling your devices. Ensure the remote is pointed directly at the device you wish to control.

### 1. Selecting a Device

To control a specific device, press the corresponding device button at the top of the remote (**TV**, **STR** for streaming, **AUD** for audio, etc.). The indicator light will briefly illuminate to confirm your selection.



Image: A hand holding the RCA RCRN04GBE remote, highlighting the device selection buttons at the top.

### 2. Basic Controls

- **POWER:** Turns the selected device on or off.
- **VOL +/-:** Adjusts the volume of the selected device.
- **CH +/-:** Changes channels on the selected device.
- **MUTE:** Mutes or unmutes the audio.

- **OK / Arrow Buttons:** Navigates menus and confirms selections.

### 3. Advanced Functions (Colored Keys)

The red, blue, yellow, and green keys provide access to advanced functions specific to certain devices, such as cable box features, satellite functions, or Blu-ray player controls. Their specific functions may vary depending on the device and its programming.



Image: A hand holding the RCA RCRN04GBE remote, focusing on the colored function buttons.

## SPECIFICATIONS

<b>Product Dimensions</b>	4.5 x 1.8 x 11 inches
<b>Item Weight</b>	5.8 ounces
<b>Manufacturer</b>	RCA
<b>Model Number</b>	RCRN04GBE
<b>Batteries Required</b>	2 AAA batteries (sold separately)
<b>Special Feature</b>	Backlit, Ergonomic, Universal
<b>Color</b>	Gloss Black

<b>Max Number of Supported Devices</b>	4
<b>Compatible Devices</b>	TV, SAT/CBL/DTC, DVD/VCR, Streaming Players

## MAINTENANCE

---

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

### Remote Not Operating Device:

- Ensure the remote is pointed directly at the device and there are no obstructions.
- Check if the correct device button (e.g., TV, DVD) is selected.
- Verify that the batteries are fresh and inserted with correct polarity.
- Try reprogramming the remote using a different code for your device brand.

### Indicator Light Not Illuminating:

- Replace the batteries with new ones.
- Ensure the battery compartment is closed properly.

### Some Functions Not Working:

- Some advanced functions may not be supported by all devices or may require a different code. Try reprogramming with an alternative code for your device.
- Ensure the device is capable of the function you are trying to use.

## WARRANTY AND SUPPORT

---

This RCA RCRN04GBE Universal Remote Control comes with a one-year warranty from the date of purchase. For technical support, troubleshooting assistance, or warranty claims, please refer to the contact information provided in the product packaging or visit the official RCA support website.

Please retain your proof of purchase for warranty validation.