

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kichler](#) /

› [Kichler Sarabella 5-Light Chandelier \(Model 42510LZ\) Instruction Manual](#)

Kichler 42510LZ

Kichler Sarabella 5-Light Chandelier (Model 42510LZ) Instruction Manual

Model: **42510LZ** | Brand: **Kichler**

INTRODUCTION

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your Kichler Sarabella 5-Light Chandelier, Model 42510LZ. This chandelier features a Legacy Bronze finish and Wispy Umber Crackle glass shades. Please read all instructions carefully before beginning installation and retain this manual for future reference.



Image: Kichler Sarabella 5-Light Chandelier, Model 42510LZ.

SAFETY INFORMATION

- Always turn off the electrical supply at the main fuse box or circuit breaker before installation or maintenance.

- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are made in accordance with local codes, ordinances, and the National Electric Code (NEC).
- This fixture is rated for dry locations only. Do not install in areas exposed to moisture.
- Use only the specified bulb type and wattage to avoid overheating.

SETUP AND INSTALLATION

Professional installation is recommended for this chandelier.

1. **Unpack Contents:** Carefully remove all components from the packaging. Verify that all parts are present according to the packing list (not provided in this manual, refer to product packaging).
2. **Prepare for Installation:** Turn off power at the circuit breaker. Secure the mounting bracket to the junction box in the ceiling.
3. **Wiring:** Connect the fixture's electrical wires to the household wiring according to standard electrical codes. Typically, connect the black wire from the fixture to the black wire from the ceiling, the white wire from the fixture to the white wire from the ceiling, and the ground wire to the ground wire from the ceiling.
4. **Assemble Fixture:** Attach the chandelier body to the mounting bracket. The fixture is supplied with 72 inches of chain and 54 inches of extra lead wire, allowing for adjustable hanging height. Adjust the chain length as desired before securing.
5. **Install Glass Shades:** Carefully attach the Wispy Umber Crackle glass shades to the fixture arms.
6. **Install Bulbs:** Insert five (5) 100-watt maximum, medium base (E26) incandescent bulbs (not included) into the sockets. Do not exceed the maximum wattage.
7. **Final Check:** Ensure all connections are secure and the fixture is properly mounted. Restore power at the circuit breaker.



Image: Side view of the Kichler Sarabella Chandelier.

OPERATING INSTRUCTIONS

Once installed, the Kichler Sarabella Chandelier operates via a standard wall switch (not included). The fixture is designed to be dimmable when used with a compatible standard incandescent dimmer switch (not included).

- **Turning On/Off:** Use the wall switch connected to the fixture to turn the lights on or off.
- **Dimming Function:** If a compatible dimmer switch is installed, adjust the dimmer control to achieve the desired light intensity.

MAINTENANCE

Regular maintenance ensures the longevity and appearance of your chandelier.

- Cleaning:** To clean the fixture, turn off the power and allow it to cool. Wipe the Legacy Bronze finish with a soft, dry cloth. Do not use abrasive cleaners, polishes, or solvents, as these may damage the finish.
- Glass Shades:** The Wispy Umber Crackle glass shades can be gently wiped with a damp cloth. For more thorough cleaning, remove the shades and wash them in mild soapy water, then rinse and dry thoroughly before reattaching.
- Bulb Replacement:** Ensure power is off before replacing bulbs. Allow old bulbs to cool before removal. Replace with five (5) 100-watt maximum, medium base (E26) incandescent bulbs.

TROUBLESHOOTING

If your chandelier is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Bulb is loose or faulty.	Check circuit breaker and wall switch. Ensure bulbs are screwed in tightly and are not burnt out. Replace if necessary.
Lights flicker.	Loose bulb connection. Incompatible dimmer switch.	Tighten bulbs. Ensure dimmer switch is compatible with incandescent bulbs.
Humming noise from fixture.	Incompatible dimmer switch.	Replace dimmer switch with one specifically designed for incandescent lighting.

SPECIFICATIONS

Feature	Detail
Brand	Kichler
Model Number	42510LZ
Dimensions (Body)	26 inches (Diameter) x 28 inches (Height)
Overall Height (with chain)	Up to 102 inches
Item Weight	13.66 pounds
Material	Glass
Finish	Legacy Bronze
Number of Lights	5
Bulb Type	Incandescent, Medium Base (E26)
Max Wattage per Bulb	100W

Feature	Detail
Voltage	120 Volts
Power Source	Corded Electric
Special Feature	Dimmable
Mounting Type	Ceiling Mount
Safety Rating	UL Listed (Dry Locations)
UPC	783927315135

WARRANTY INFORMATION

Kichler Lighting warrants its products to be free from defects in material and workmanship for one (1) year following the date of shipment from the seller. If any warranted products are found to be defective, Kichler will, at its sole option and cost, replace, repair, or refund the product less an amount directly attributable to consumer's prior use. This warranty is not transferable.

This warranty does not cover labor or other costs or expenses to remove or install any defective, repaired, or replaced product. It also does not apply to products subjected to misuse, mishandling, misapplication, connected voltage more than 5% above standard North American voltage, neglect (including improper maintenance), accident, improper installation, improper packaging of returned products, modification (including unauthorized parts or attachments), or adjustment or repair.

To pre-arrange a return or for warranty claims, please contact Kichler Lighting customer service at **1-888-659-8809**.

MANUFACTURER INFORMATION

Kichler Lighting has been providing lighting solutions since 1938, offering a variety of styles and quality products.

Your browser does not support the video tag.

Video: Kichler Brand Story. This video provides an overview of the Kichler brand and its commitment to lighting design and quality.

SUPPORT

For additional support, technical assistance, or to view other Kichler products, please visit the official Kichler website or contact their customer service department.

Kichler Lighting Customer Service: **1-888-659-8809**

You can also visit the [Kichler Store on Amazon](#) for more information.