

Manuals.plus /

› Arachnid /

› Arachnid CricketPro 650 Electronic Dartboard Instruction Manual

## Arachnid E650ARA

# Arachnid CricketPro 650 Electronic Dartboard Instruction Manual

Model: E650ARA

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Arachnid CricketPro 650 Electronic Dartboard. Please read this manual thoroughly before using the product to ensure proper function and longevity.



**Figure 1:** Arachnid CricketPro 650 Electronic Dartboard. This image displays the full dartboard, highlighting its regulation-size target area, the digital score display, and control buttons.

## FEATURES

---

The Arachnid CricketPro 650 Electronic Dartboard is designed for an enhanced dart-playing experience, offering a variety of games and player options.

- **8 Player Score Display:** Accommodates up to eight players with individual score tracking.
- **24 Games / 132 Options:** Includes a wide selection of dart games and variations.
- **5 Cricket Games:** Features Quick Cricket, Cricket Cut Throat, Cricket Scram, Cricket Double Only, and Cricket.
- **LED Display:** Clear LED display for player game and cricket scores.
- **Tournament Spider:** Trademarked tournament colors for the spider.
- **Regulation 15.5" Target Area:** Standard size for competitive play.
- **Micro Thin Segment Dividers:** Significantly reduces bounce-outs for more accurate scoring.
- **NylonTough Segments:** Enhances playability and durability of the dartboard.
- **Play On and Ranking Feature:** Allows for continuous play and player ranking.
- **Single In/Out, Double In/Out Features:** Provides options for game starts and finishes.
- **Voice Prompt:** Guides players on their turn.
- **Solo Play Feature:** Enables single-player practice or enjoyment.
- **Player Handicap Feature:** Balances gameplay for players of different skill levels.
- **Sleep Mode and Reset Feature:** For power saving and game reset.

## INCLUDED ACCESSORIES

---

The following items are included with your Arachnid CricketPro 650 Electronic Dartboard:

- 6 Soft-Tip Darts and Extra Tips
- AC Adapter
- Mounting Hardware
- Game Instructions
- Operation Manual (this document)

## SETUP

---

### Unpacking

Carefully remove all components from the packaging. Verify that all included accessories are present before proceeding with installation.

### Mounting the Dartboard

Select a suitable location for mounting the dartboard. Ensure the wall is sturdy enough to support the weight of the dartboard and withstand impacts from darts. The standard height for the center of the bullseye is 5 feet 8 inches (1.73 meters) from the floor. The throwing line should be 7 feet 9.25 inches (2.37 meters) from the face of the dartboard.

1. Using the provided mounting hardware, securely attach the dartboard to the wall. Refer to the specific instructions included with the mounting hardware for detailed steps.
2. Ensure the dartboard is level and firmly affixed to prevent movement during play.

### Power Connection

Connect the supplied AC adapter to the dartboard's power input jack. Plug the AC adapter into a standard electrical outlet. The dartboard should power on, and the display will illuminate.

## OPERATING INSTRUCTIONS

---

### Basic Operation

- **Power On/Off:** Use the designated power button to turn the dartboard on or off.
- **Game Selection:** Use the "Game" button to cycle through available games.
- **Player Selection:** Use the "Player" button to select the number of players (up to 8).
- **Start Game:** Press the "Start" button to begin a selected game.
- **Voice Prompt:** The dartboard will announce whose turn it is.
- **Scoring:** Scores are automatically registered when darts hit the segments.

### Game List

The CricketPro 650 offers 24 games with 132 options. Some popular games include:

- Cricket (Quick Cricket, Cut Throat, Scram, Double Only)
- 301, 501, 601, 701, 801, 901 (X01 games)
- GOTCHA!
- Forty-One
- All Fives
- Double Down
- Hi-Score
- Ace Killer
- Count-Up
- Round the Clock
- Shoot Out
- Over
- Shanghai
- Bermuda Triangle

Refer to the separate "Game Instructions" manual for detailed rules and variations for each game.

### Advanced Features

- **Single In/Out, Double In/Out:** For X01 games, these options dictate how a player must start or finish the game (e.g., hitting a double to start or finish).
- **Solo Play:** Allows a single player to compete against the dartboard's computer.
- **Player Handicap:** Adjusts scores for players to create a more balanced game, especially when players have varying skill levels. Consult the game instructions for how to set handicaps.
- **Sleep Mode:** The dartboard will enter sleep mode after a period of inactivity to conserve power.
- **Reset Feature:** Allows you to reset the dartboard to its default settings or restart a game.

## MAINTENANCE

---

### Cleaning

To clean the dartboard, use a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the surface and electronic components. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth.

### Dart Maintenance

Regularly inspect the soft tips of your darts. Replace any bent or broken tips to ensure proper scoring and prevent damage to the dartboard segments. Extra tips are included with your dartboard.

## Storage

When not in use for extended periods, store the dartboard in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect the AC adapter before storing.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Dartboard does not power on.	AC adapter not properly connected or power outlet is faulty.	Ensure AC adapter is securely plugged into the dartboard and a working electrical outlet. Test the outlet with another device.
Darts are not registering scores.	Darts have broken or bent tips; segment is stuck.	Replace dart tips. Gently push on the segment to ensure it is not stuck in the "in" position.
Display shows erratic numbers or freezes.	Temporary electronic glitch.	Turn off the dartboard, unplug the AC adapter, wait 30 seconds, then plug it back in and power on.
Voice prompts are not audible.	Volume is too low or muted.	Adjust the volume using the dedicated volume controls on the dartboard.

## SPECIFICATIONS

---

Attribute	Detail
Brand	Arachnid
Model Number	E650ARA
Material	NylonTough
Color	Multicolor
Item Weight	16 Pounds (approx. 7.26 kg)
Target Area Size	Regulation 15.5 inches
Power Source	AC Adapter (included)
Manufacturer	Escalade Sports

## WARRANTY AND SUPPORT

---

The Arachnid CricketPro 650 Electronic Dartboard comes with a **one-year warranty** against defects. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or replacement parts, please contact Arachnid customer service. Refer to the contact information provided on the product packaging or the official Arachnid website for the most current support details.

**Online Resources:** For additional information, FAQs, or to register your product, visit the official Arachnid website:

[www.arachnid360.com](http://www.arachnid360.com) (Note: This is a placeholder URL, please refer to actual product documentation for correct URL).

