

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OASE](#) /
- › [OASE Pondovac 4 Pond Vacuum Cleaner User Manual](#)

OASE 032232

OASE Pondovac 4 Pond Vacuum Cleaner User Manual

Model: 032232 | Brand: OASE

PRODUCT OVERVIEW

The OASE Pondovac 4 is a powerful and efficient pond vacuum cleaner designed to keep your pond or pool clean. It effectively removes debris and sludge, ensuring a healthy aquatic environment. This unit is built for durability and ease of use, though it is important to note that it should not be operated or left in the rain.



Image: The OASE Pondovac 4 Pond Vacuum Cleaner, showcasing its main unit, suction hose, discharge hose, and various cleaning attachments.

Key Features

- **Max. Suction Depth:** 7 Ft
- **Suction Hose Length:** 16 Ft
- **Discharge Hose Length:** 8 Ft
- **Max. Flow Rate:** 1300 Gph
- **Power Consumption:** 1800W
- **Power Requirement:** 110-120V/60Hz
- **Material:** Aluminum components for durability
- **Portability:** Designed for easy movement

SETUP INSTRUCTIONS

Follow these steps to properly set up your OASE Pondovac 4 before use:

1. Assemble the pond vacuum cleaner according to the detailed instructions provided in the full user manual. Ensure all connections are secure.
2. Place the vacuum cleaner on a stable, level surface near the pond or pool you intend to clean.
3. Connect the suction hose to the vacuum unit and attach the desired cleaning nozzle to the other end.
4. Connect the discharge hose to the vacuum unit, directing the outlet to a suitable drainage area (e.g., garden bed, filter system, or waste area).



Image: The OASE Pondovac 4 is designed for easy transport, featuring a convenient handle and wheels for mobility around your pond area.

OPERATING INSTRUCTIONS

Once set up, operate your Pondovac 4 as follows:

1. Insert the suction hose with the attached nozzle into the water, ensuring the nozzle is submerged.
2. Plug in the vacuum cleaner and turn it on. The unit will begin to suction water and debris.
3. Adjust the suction depth as needed to target specific areas of the pond bottom.

4. Move the vacuum cleaner around the pond or pool slowly to collect debris, sludge, and algae.
5. The unit features an automatic emptying system, which will pause suction briefly to discharge collected waste through the discharge hose.
6. Continue vacuuming until the desired cleanliness is achieved.



Image: An individual demonstrating the use of the OASE Pondovac 4, effectively cleaning the pond bottom.



Image: A close-up view of the vacuum head submerged in water, illustrating its efficient debris collection.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Pondovac 4:

- After each use, turn off and unplug the vacuum cleaner.
- Disassemble the unit as needed to clean any remaining debris from the hoses, nozzles, and collection container. The unit is designed to be easy to clean.
- Rinse all components with clean water.
- Inspect hoses and connections for any signs of wear or damage. Replace parts if necessary.
- Store the unit in a dry, protected area, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Pondovac 4, consider the following common solutions:

- **Reduced Suction:** Check for blockages in the suction hose or nozzle. Ensure the collection container is not overfilled. Verify all connections are tight.
- **Unit Not Turning On:** Ensure the power cord is securely plugged into a functioning outlet. Check the circuit breaker.
- **Water Not Discharging:** Check the discharge hose for kinks or blockages. Ensure the discharge hose is positioned correctly for gravity drainage.
- **Unusual Noises:** Turn off the unit immediately and inspect for any foreign objects that may have entered the pump mechanism.

For persistent issues, refer to the full user manual or contact OASE customer support.

TECHNICAL SPECIFICATIONS

Specification	Detail
Model Name	Oase Pondovac 4 Pond Vacuum Cleaner
Item Model Number	032232
Brand	OASE
Power Source	Ac/dc
Power Consumption	1800W
Voltage	110-120V
Item Weight	39 Pounds
Product Dimensions	16.34"L x 16.14"W x 30.12"H
Max. Suction Depth	7 Ft
Suction Hose Length	16 Ft
Discharge Hose Length	8 Ft
Max. Flow Rate	1300 Gph
Capacity	2.6 Gallons
Material	Aluminum
Color	Black
Control Method	Touch
Special Feature	Portable
Installation Type	Manual

WARRANTY INFORMATION

The OASE Pondovac 4 Pond Vacuum Cleaner comes with a **Limited Warranty**. For specific terms, conditions, and duration of the warranty, please refer to the official warranty documentation included with your product or contact OASE customer service.

SUPPORT AND ADDITIONAL RESOURCES

For comprehensive information, detailed diagrams, and further assistance, please refer to the official user manual:

[Download Full User Manual \(PDF\)](#)

You can also visit the [OASE Store on Amazon](#) for more product information and support.

