

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Taylor](#) /
- › [Taylor Pro Digital 4-Event Timer Instruction Manual](#)

## Taylor 5862

# Taylor Pro Digital 4-Event Timer

Model: 5862

Brand: Taylor

## INTRODUCTION

The Taylor Pro Digital 4-Event Timer is designed to track up to four separate timing events simultaneously. This device features a large LCD display for clear visibility and offers versatile placement options with its integrated magnets and built-in stand. It supports countdown timing up to 99 hours, 59 minutes, and 59 seconds, and includes a memory function for recalling previous settings.



Figure 1: Front view of the Taylor Pro Digital 4-Event Timer.

## SAFETY INFORMATION

**WARNING:** This product contains button cell batteries. Swallowing a button cell battery can cause severe internal burns in as little as 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Figure 2: Button cell battery safety warning.

## PACKAGE CONTENTS

---

- Taylor Pro Digital 4-Event Timer (Model 5862)
- Instruction Manual
- 2 x Product Specific Batteries (pre-installed or included separately)

## PRODUCT FEATURES

---

- **Four Independent Timers:** Track up to four events simultaneously.
- **Large LCD Display:** 0.8-inch display for clear time readings.
- **Versatile Placement:** Strong magnets for metal surfaces and a built-in stand for countertops.
- **Extended Countdown:** Sets times up to 99 hours, 59 minutes, 59 seconds.
- **Distinctive Alarms:** Each timer has a unique beep pattern.
- **Memory Function:** Recalls the last set time for each event.

# TAYLOR®



Figure 3: Detailed view of the timer's display and control buttons.

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the compartment cover.
3. Insert two product-specific batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### Initial Power On

Once batteries are installed, the timer should automatically power on and display '00:00:00' or the current time if a clock function is present (refer to display for confirmation).

## OPERATING INSTRUCTIONS

### Selecting a Timer (T1, T2, T3, T4)

Press the **T1/T2/T3/T4** buttons to select the desired timer. The active timer will be indicated on the display.

### Setting a Countdown Timer

1. Select the desired timer (T1-T4).
2. Press the **HR** button to set hours, **MIN** for minutes, and **SEC** for seconds. Each press increases the value. Hold the button for faster adjustment.
3. To clear a set time, press the **CLEAR** button while the timer is selected and stopped.

### Starting and Stopping a Timer

1. After setting the desired time, press the **START/STOP** button to begin the countdown.
2. To pause the countdown, press **START/STOP** again.
3. To resume, press **START/STOP** once more.

### Alarm Function

When a timer reaches zero, it will emit an audible alarm. Each of the four timers has a distinct alarm sound to help differentiate between events. Press any button to silence the alarm.

### Memory Function

The timer automatically stores the last set time for each of the four events. To recall a previously set time, select the desired timer (T1-T4) and press the **MEMORY** button. The last set time for that specific timer will be displayed.

## MAINTENANCE

### Cleaning

Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

### Battery Replacement

When the display becomes dim or the timer functions erratically, it is time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries.	Replace batteries with new ones, ensuring correct polarity.

Problem	Possible Cause	Solution
Timer does not start.	Time not set or START/STOP not pressed.	Ensure a time is set for the selected timer. Press START/STOP.
Alarm is not sounding.	Volume setting too low (if applicable) or timer not reaching zero.	Ensure timer counts down to zero. Check for any mute function (if available).
Buttons are unresponsive.	Low batteries or internal malfunction.	Replace batteries. If issue persists, contact customer support.

## SPECIFICATIONS

- **Model Number:** 5862
- **Brand:** Taylor
- **Material:** Plastic
- **Color:** White/Green
- **Item Weight:** 2.4 Ounces
- **Product Dimensions:** 7 x 5.1 x 6.68 inches
- **Screen Size:** 0.8 Inches (LCD)
- **Number of Timers:** 4
- **Max Countdown:** 99 Hours, 59 Minutes, 59 Seconds
- **Batteries:** 2 Product Specific batteries (required)

## WARRANTY

This Taylor Pro Digital 4-Event Timer (Model 5862) comes with a **1-year warranty** covering parts and labor from the date of purchase. This warranty does not cover damage caused by misuse, accident, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Taylor customer support. Refer to the product packaging or the official Taylor website for the most current contact information.

