

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nerf](#) /

› [Nerf N-Strike Recon CS-6 Dart Blaster Instruction Manual](#)

Nerf 21309

Nerf N-Strike Recon CS-6 Dart Blaster Instruction Manual

Model: 21309

INTRODUCTION

The Nerf N-Strike Recon CS-6 Dart Blaster is a versatile toy blaster designed for customizable play. It features five interchangeable parts, allowing users to configure the blaster for various missions. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and enjoyable use.



Image: The Nerf N-Strike Recon CS-6 Dart Blaster in its original packaging, highlighting its five interchangeable parts and customization options.

SETUP AND ASSEMBLY

- 1. Unpack Components:** Carefully remove all five blaster pieces, the quick-reload dart clip, and the 6 Clip System darts from the packaging.
- 2. Battery Installation:** The blaster requires 2 AAA batteries for the dual-mode light beam. Locate the battery compartment, typically on the side or bottom of the main blaster unit. Use a screwdriver to open the compartment, insert the batteries according to polarity markings, and secure the cover.
- 3. Assemble Blaster:**
 - Attach the desired barrel extension to the front of the main blaster unit.
 - Slide the shoulder stock onto the rear of the blaster until it clicks into place. The shoulder stock can also store an extra ammo clip (sold separately).
 - Mount the flip-up sight onto the tactical rail on top of the blaster for aiming precision.
 - Attach the dual-mode light beam to a tactical rail for enhanced targeting, especially in low-light conditions.
- 4. Load Darts:** Insert the 6 Clip System darts into the quick-reload dart clip. Ensure darts are fully seated.
- 5. Insert Dart Clip:** Insert the loaded dart clip into the blaster's magazine well until it locks securely.

OPERATING INSTRUCTIONS

- 1. Power On (Light Beam):** If using the light beam, ensure batteries are installed and activate the light beam switch.
- 2. Prime the Blaster:** Pull back the priming slide or handle (location may vary based on configuration) until it locks into place. This prepares a dart for firing.
- 3. Aim:** Use the flip-up sight or the dual-mode light beam to aim at your target.
- 4. Fire:** Squeeze the trigger to launch a dart.
- 5. Reload:** To fire another dart, prime the blaster again. When the dart clip is empty, press the magazine release button (if applicable) to remove the empty clip and insert a new, loaded one.

Note: This blaster is designed for use with official Nerf darts only. Do not modify darts or the blaster.



**DON'T FORGET
THE DARTS!**



SWARMFIRE



QUICK 16



SPEEDLOAD 6



OR



MAVERICK REV-6



NITE FINDER EX-3



VULCAN



BARRICADE RV-10



STAMPEDE ECS



DEPLOY CS-6



LONGSTRIKE CS-6



RECON CS-6



RAIDER CS-35

*BLASTERS ARE NOT SHOWN TO SCALE.
DART REFILL PACKS AND BLASTERS EACH SOLD SEPARATELY.

©2011 Hasbro.
All Rights Reserved.

Image: An illustration showing different types of Nerf darts, emphasizing the use of Clip System darts for this blaster.

MAINTENANCE

- Cleaning:** Wipe the blaster with a damp cloth to remove dust and dirt. Do not submerge the blaster in water.
- Dart Care:** Store darts in a clean, dry place. Avoid bending or crushing darts, as this can affect performance and lead to jams.
- Battery Replacement:** If the light beam dims or stops working, replace the batteries. Always use fresh batteries of the specified type.

TROUBLESHOOTING

- Darts Not Firing:**
 - Ensure the blaster is fully primed.
 - Check if the dart clip is properly inserted and locked.
 - Verify that the darts are not damaged or jammed.
- Dart Jams:** If a dart becomes jammed, remove the dart clip and carefully clear the jam from the dart chamber. Do not force the priming mechanism or trigger when a jam occurs.
- Light Beam Not Working:**
 - Check battery installation and polarity.
 - Replace old or depleted batteries with new ones.

- Ensure the light beam switch is in the "ON" position.

SPECIFICATIONS

Feature	Detail
Brand	Nerf
Model Number	21309
Product Dimensions	3.11 x 17.13 x 11.61 inches
Item Weight	2.84 pounds
Recommended Age	6 years and up
Batteries Required	2 AAA batteries (for light beam)
Dart Type	Clip System darts
Included Darts	6 Clip System darts

IMPORTANT INFORMATION & SUPPORT

Please note that packaging may show some shelf wear, but the item itself is intact and in pristine condition. For any questions or further assistance, please contact the seller directly.

For additional product information or to explore other Nerf products, visit the official [Nerf Store on Amazon](#).