

BRANDT FP1061X

Brandt FP1061X Electric Oven User Manual

Model: FP1061X

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- **Electrical Safety:** Ensure the oven is properly grounded. Do not operate with a damaged power cord or plug.
- **Child Safety:** Keep children away from the oven during operation and cooling. The oven door and surfaces can become very hot.
- **Burn Hazard:** Always use oven mitts when handling hot dishes or oven racks. Do not touch hot surfaces directly.
- **Fire Hazard:** Never store flammable materials in or near the oven. Clean up spills immediately to prevent smoke or fire.
- **Pyrolytic Cleaning:** Ensure the oven is completely empty before starting a pyrolytic cleaning cycle. Remove all accessories and food residues.

2. PRODUCT OVERVIEW

The Brandt FP1061X is a 53-liter multifunction electric oven designed for built-in installation. It features pyrolytic self-cleaning and a range of cooking functions to suit various culinary needs.



Image 1: Front view of the Brandt FP1061X Electric Oven. This image shows the stainless steel and black finish, the control panel, and the oven door.

Key Features:

- **Capacity:** 53 Liters net volume.
- **Cooking Modes:** 10 multifunction cooking modes, including fan-assisted, grill, rotisserie, pizza, and bread functions.
- **Cleaning:** Pyrolytic self-cleaning system for effortless maintenance.
- **Control:** Electronic programmer with temperature regulation and real-time temperature display.
- **Safety:** Cold door (4 panes of glass) for enhanced safety during operation.
- **Design:** Stainless steel and black finish with a full glass inner door.
- **Accessories:** Includes 2 grids and a 20mm deep baking tray.

3. SETUP AND INSTALLATION

The Brandt FP1061X oven is designed for built-in installation. It is highly recommended that installation be performed by a qualified technician to ensure proper electrical connection and ventilation.

Installation Requirements:

- **Niche Dimensions (HxWxD):** 58.5 cm x 56 cm x 55 cm (22.83 in x 22.05 in x 21.65 in).
- **Electrical Supply:** 220-240 V AC, 50 Hz, 16 A. Total power: 3385 W.
- **Ventilation:** Ensure adequate ventilation around the appliance as per local regulations.
- **Leveling:** The oven must be installed on a level surface to ensure proper operation and door alignment.

After installation, remove all packaging materials and protective films from the oven interior and exterior. Clean the oven interior with a damp cloth before first use.

4. OPERATING INSTRUCTIONS

This section provides general guidance on operating your Brandt FP1061X oven. Refer to the control panel for specific button functions and display indicators.

First Use:

1. Before cooking food, heat the empty oven for approximately 30 minutes at 200°C (392°F) to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.
2. Allow the oven to cool down, then wipe the interior with a damp cloth.

Setting the Time:

Upon first connection or after a power outage, the clock display will flash. Use the designated buttons (usually '+' and '-') to set the current time. Confirm the setting as per the display instructions.

Selecting a Cooking Function:

1. Turn the function selector knob to choose your desired cooking mode (e.g., Fan-assisted, Grill, Conventional).
2. Turn the temperature selector knob to set the desired temperature. The electronic programmer will display the real-time temperature.
3. For timed cooking, use the timer function on the electronic programmer to set the cooking duration. The oven will switch off automatically once the time expires.
4. The oven features a recommended temperature function (Préconisation de la T°C) which may suggest optimal temperatures for selected modes.

Special Functions:

- **Grill:** Ideal for browning and crisping dishes.
- **Rotisserie:** Use with the included rotisserie accessory for even roasting of poultry or larger cuts of meat.
- **Pizza/Bread:** Specific modes optimized for baking pizzas and bread, often utilizing bottom heat and fan assistance.

5. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your Brandt FP1061X oven.

Pyrolytic Self-Cleaning:

1. Remove all accessories (grids, trays, rotisserie) from the oven cavity.
2. Wipe away any large food spills or residues.

3. Close the oven door securely.
4. Select the pyrolytic cleaning function on the control panel. The oven will heat to a very high temperature (around 500°C / 932°F) to burn off food residues, turning them into ash.
5. During the cycle, the oven door will lock automatically for safety. Do not attempt to open it.
6. Once the cycle is complete and the oven has cooled down, wipe away the ash with a damp cloth.
7. Ensure good ventilation during and after the pyrolytic cycle.

General Cleaning:

- **Exterior:** Clean the stainless steel and black exterior surfaces with a soft cloth and a mild, non-abrasive cleaner.
- **Oven Door:** The full glass inner door can be cleaned with a glass cleaner. For thorough cleaning, the inner glass pane may be removable (refer to specific instructions in the full manual if available).
- **Accessories:** Wash grids and trays with warm soapy water or in a dishwasher.
- **Light Bulb:** If the interior light bulb needs replacement, ensure the oven is unplugged and cool. Consult a qualified technician if unsure.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect settings; door not closed properly.	Check power connection and circuit breaker. Verify cooking mode and temperature settings. Ensure door is fully closed.
Display shows an error code.	Internal fault; sensor issue.	Turn off the oven at the main power supply for a few minutes, then restart. If the error persists, contact customer support.
Pyrolytic cleaning does not start.	Oven door not properly closed; accessories still inside.	Ensure the oven door is fully latched. Remove all racks, trays, and other accessories.
Uneven cooking.	Incorrect rack position; overloaded oven; faulty heating element.	Use recommended rack positions. Avoid overcrowding the oven. If problem persists, contact service.

For issues not listed here or if solutions do not resolve the problem, please contact Brandt customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	BRANDT
Model Number	FP1061X
Type	Electric Built-in Oven
Capacity (Net)	53 Liters

Feature	Specification
Color	Stainless Steel and Black
Heating Method	Multifunction (Fan-assisted, Grill, etc.)
Cleaning Type	Pyrolytic
Total Power	3385 W
Oven Power	2100 W
Voltage	220-240 V AC
Frequency	50 Hz
Current	16 A
Energy Class	A
Dimensions (HxWxD)	59.2 cm x 59.2 cm x 60.9 cm (23.3 in x 23.3 in x 24.0 in)
Built-in Niche Dimensions (HxWxD)	58.5 cm x 56 cm x 55 cm (22.83 in x 22.05 in x 21.65 in)
Weight	34 kg (75 lbs)
Material	Stainless Steel
Special Features	Pyrolytic self-cleaning, Electronic programmer, Cold door (60°C), Real-time temperature display, Interior lighting.

8. WARRANTY AND CUSTOMER SUPPORT

Your Brandt FP1061X oven comes with a manufacturer's warranty and dedicated customer support.

Warranty Information:

- **Standard Warranty:** 1 year on parts.
- Please retain your proof of purchase for warranty claims.
- The warranty covers manufacturing defects under normal use. It does not cover damage due to misuse, improper installation, or unauthorized repairs.

Customer Support:

For technical assistance, service requests, or warranty inquiries, please contact Brandt's specialized customer support. Refer to the official Brandt website or your purchase documentation for contact details.

Note: Information in this manual is subject to change without notice. For the most up-to-date information, please refer to the official Brandt website or the full product manual provided with your appliance.