



Manuals.plus /

› Design House /

› Design House Madison Single-Handle Kitchen Faucet with Side Sprayer and Soap Dispenser, Satin Nickel

Design House 525808

Design House Madison Single-Handle Kitchen Faucet with Side Sprayer and Soap Dispenser

Model: 525808 | Brand: Design House

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Design House Madison Single-Handle Kitchen Faucet with Side Sprayer and Soap Dispenser. Please read this manual thoroughly before installation and retain it for future reference.



The Design House Madison Kitchen Faucet set, featuring a single handle, side sprayer, and soap dispenser in a satin nickel finish.

KEY FEATURES

- **Single Handle Design:** Allows for easy adjustment of water temperature and flow.
- **Side Sprayer:** Equipped with a 46-inch soft hose for effective cleaning and rinsing in hard-to-reach areas.
- **Integrated Soap Dispenser:** Provides convenient access to dish or hand soap.
- **Durable Construction:** Features brass waterways for clean water delivery and a ceramic cartridge for wear resistance and corrosion prevention.
- **Satin Nickel Finish:** Complements various kitchen decor styles.
- **Flow Rate:** 1.8 gallons per minute (GPM) ensures consistent water flow.



An overview of the faucet's components and key features, including the single handle for temperature control, side sprayer, and soap dispenser.

Your browser does not support the video tag.

This video provides a general overview of Design House kitchen products, showcasing various styles and layouts, and highlighting the brand's commitment to durable and functional designs.

INSTALLATION INSTRUCTIONS

Before beginning installation, ensure you have all necessary tools and that the water supply is turned off. This faucet requires a 4-hole mount for the faucet, single handle, side sprayer, and soap dispenser.

Pre-Installation Checks:

- Verify sink hole configuration (4-hole required).
- Ensure all components are present as per the packing list.
- Turn off the main water supply to your kitchen.

Installation Steps:

1. **Mounting:** Position the faucet, handle, side sprayer, and soap dispenser into the designated holes on your sink or countertop. Secure them from underneath using the provided mounting hardware.
2. **Water Supply Connections:** Connect the hot and cold water supply lines to the corresponding inlets on the faucet. Use two wrenches when connecting the small copper lines to prevent crimping; one to hold the faucet fitting and one to tighten the supply line nut. Avoid over-tightening.
3. **Side Sprayer Connection:** Attach the side sprayer hose to its dedicated connection point on the faucet body.
4. **Soap Dispenser Installation:** Insert the soap dispenser into its hole and secure it. Fill the dispenser with your preferred liquid soap.
5. **Testing:** Once all connections are secure, slowly turn on the main water supply. Check for any leaks. Operate the faucet and sprayer to ensure proper function.



Dimensional drawing of the faucet, handle, side sprayer, and soap dispenser, providing key measurements for installation planning.



Lead-free compliant faucets have reduced the allowable amount of lead in kitchen and bathroom faucets to a maximum of 0.25%, down from the federal requirement of 4%. To accomplish this, we have used state-of-the-art technology in our engineering and manufacturing process. Compliant faucets will be identified on our packaging with this logo. All of our kitchen and bathroom faucets are compliant.

Illustration of the faucet's brass waterways, designed for durability and to ensure safe, clean water.

OPERATING INSTRUCTIONS

Faucet Operation:

- To turn on the water, lift the single handle upwards.
- To adjust water temperature, move the handle left for hot water and right for cold water.
- To turn off the water, push the handle downwards.

Side Sprayer Operation:

- To activate the side sprayer, ensure the main faucet is running, then press the trigger on the sprayer handle.
- The 46-inch hose allows for extended reach to clean various areas of your sink or dishes.
- After use, release the trigger. If the sprayer drips, press the trigger briefly after turning off the water to release any residual pressure.

Soap Dispenser Operation:


- To dispense soap, press down on the pump head.
- Refill the dispenser by lifting the pump head and pouring liquid soap directly into the reservoir from above the counter.

CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your faucet.

- **Cleaning:** Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the satin nickel finish.
- **Ceramic Cartridge:** The faucet is equipped with a durable ceramic cartridge designed to prevent corrosion and ensure smooth operation. No regular maintenance is typically required for the cartridge.
- **Flow Restrictor Maintenance:** If you experience reduced water flow from the faucet, the flow restrictor may need cleaning. To access it, unscrew the aerator (sediment screen) at the end of the faucet spout. Carefully remove the plastic washer piece, which acts as the flow restrictor. Clean any debris and reassemble.
- **Sprayer Dripping:** If the side sprayer drips after use, briefly press the sprayer trigger after turning off the water to

relieve any built-up pressure in the hose.

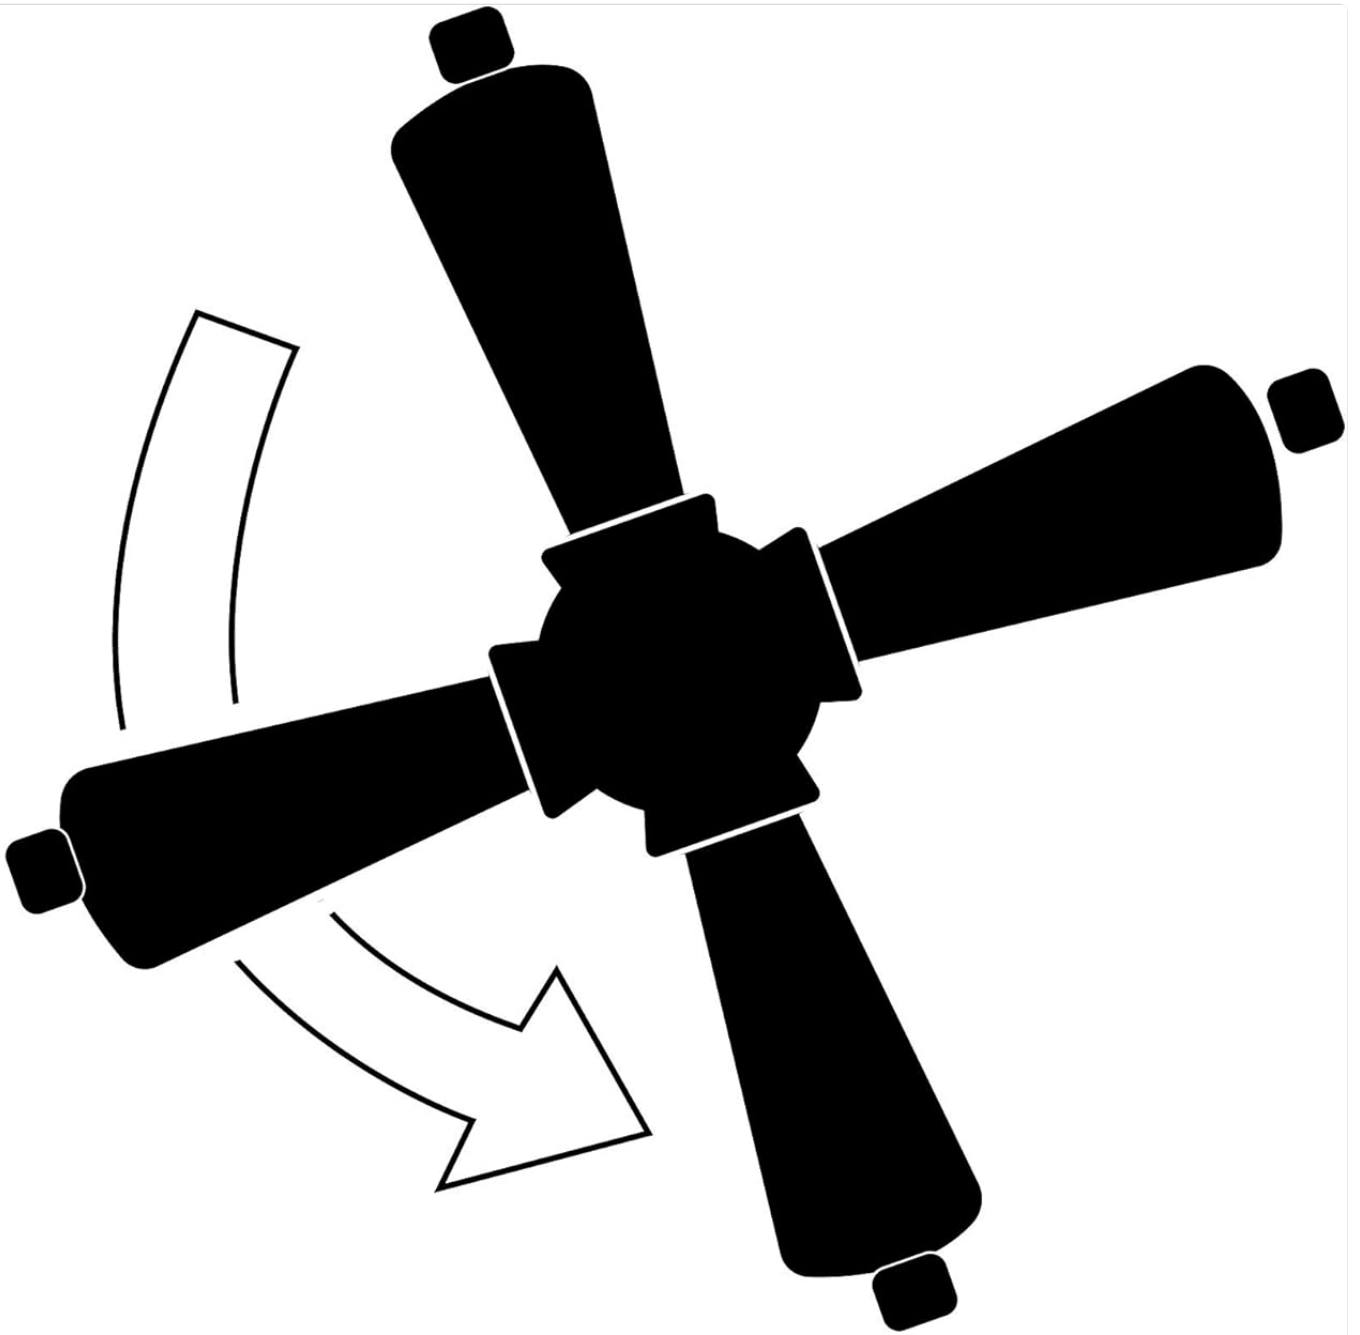

QUARTER TURN STOP

The faucet features a corrosion-resistant surface, enhancing its durability and appearance over time.



LEAD-FREE

The faucet utilizes ceramic disc cartridges for reliable, drip-free performance and long-lasting durability.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Low water flow from faucet.	Clogged aerator or flow restrictor.	Unscrew the aerator at the end of the spout. Remove and clean the plastic flow restrictor. Reassemble.
Side sprayer drips after use.	Residual pressure in the sprayer hose.	After turning off the water, briefly press the sprayer trigger to release any remaining pressure.
Water leaks from under the handle.	Worn or damaged cartridge.	Contact customer support for assistance or replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Design House
Model Name	Madison
Part Number	525808
Color	Satin Nickel
Finish Type	Satin
Material	Hybrid (with Brass Waterways)
Mounting Type	Deck Mount
Number of Handles	1 (Single-Handle)
Hole Count	4
Maximum Flow Rate	1.8 Gallons Per Minute (GPM)
Hose Length (Side Sprayer)	46 Inches
Item Weight	5 Pounds
Product Dimensions	9.75"D x 9.75"W x 13.4"H
UPC	044321525804

WARRANTY INFORMATION

The Design House Madison Kitchen Faucet is backed by a comprehensive warranty:

- **Limited 5-Year Warranty:** Covers defects in material and workmanship for a period of five years from the date of purchase.
- **Limited Lifetime Finish Warranty:** The satin nickel finish is warranted against tarnishing, corrosion, or discoloration for the lifetime of the product under normal use.

Please retain your proof of purchase for warranty claims. For full warranty details, refer to the documentation included with your product or visit the Design House official website.



This badge signifies the product's limited lifetime finish warranty.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Design House customer service.

- **Manufacturer:** Design House
- **Website:** Visit the Design House Store on Amazon
- **General Inquiries:** Refer to the contact information provided in your product packaging.