

Nerf CS-18

Nerf N-Strike Alpha Trooper CS-18 Blaster

Instruction Manual

1. SAFETY INFORMATION

Please read and understand all safety information before operating the Nerf N-Strike Alpha Trooper CS-18 blaster.

- **Recommended Age:** This product is suitable for individuals aged 8 years and older.
- **Eye Protection:** Always wear eye protection when using this blaster. Do not aim at eyes or face.
- **Dart Compatibility:** Use only official Nerf darts. Other darts may not meet safety standards.
- **Modifications:** Do not modify the blaster or darts. Unauthorized modifications can affect performance and safety.
- **Supervision:** Adult supervision is recommended for younger users.
- **Safety Standard:** This product complies with the ST Mark safety standard.

©2010 Hasbro. All Rights Reserved.

2. PRODUCT OVERVIEW

The Nerf N-Strike Alpha Trooper CS-18 is a versatile dart blaster designed for action-packed play. It features an 18-dart drum magazine and offers two distinct firing modes for strategic advantage.

Package Contents:

- Nerf N-Strike Alpha Trooper CS-18 Blaster Body (1)
- 18-Dart Drum Magazine (1)
- Official Nerf Streamline Darts (18)
- Instruction Manual (1)



Image 1: The Nerf N-Strike Alpha Trooper CS-18 blaster, showcasing its full assembly with the drum magazine attached.

3. SETUP

3.1 Loading the Darts into the Drum Magazine

1. Hold the 18-dart drum magazine.
2. Insert one official Nerf Streamline dart into each opening of the drum until it is fully seated. Ensure darts are not bent or damaged.
3. Repeat until all 18 darts are loaded.



Image 2: Close-up view of the 18-dart drum magazine, ready for dart loading.

3.2 Attaching the Drum Magazine

1. Locate the magazine well on the underside of the blaster.
2. Align the loaded drum magazine with the magazine well.
3. Push the magazine firmly upwards until it clicks securely into place. Ensure it is fully seated to prevent misfires.

4. OPERATING THE BLASTER

The Alpha Trooper CS-18 offers two firing modes: single-shot and rapid-fire (Slam Fire).

4.1 Single-Shot Firing Mode

1. Ensure the drum magazine is loaded and securely attached.
2. Grip the priming handle (located on the top of the blaster) and pull it all the way back until it locks into place. This primes the blaster.
3. Aim the blaster at your target (remembering safety guidelines).
4. Pull the trigger to fire one dart.
5. To fire another dart, repeat step 2 (prime) and step 4 (fire).



Image 3: Close-up of the blaster's priming handle and grip area, essential for operating the firing mechanism.

4.2 Rapid-Fire (Slam Fire) Mode

1. Ensure the drum magazine is loaded and securely attached.
2. Pull and hold the trigger.
3. While holding the trigger, rapidly pump the priming handle back and forth. Each full pump will fire a dart.
4. Continue pumping until the magazine is empty or you release the trigger.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your blaster.

- **Dart Care:** Keep darts clean and dry. Avoid bending or crushing darts, as this can affect firing performance and potentially jam the blaster. Replace worn or damaged darts.
- **Cleaning:** Wipe the blaster with a clean, damp cloth. Do not immerse the blaster in water or use harsh chemicals.
- **Storage:** Store the blaster in a cool, dry place away from direct sunlight and extreme temperatures. Remove darts from the magazine before storing for extended periods.
- **No Lubrication:** Do not apply lubricants or oils to any part of the blaster, as this can attract dirt and impair function.

6. TROUBLESHOOTING

If you encounter issues with your Alpha Trooper CS-18, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dart does not fire.	Blaster not fully primed. Magazine not properly inserted. Dart jam.	Ensure priming handle is pulled all the way back until it clicks. Push magazine firmly into place. Check for and clear any jammed darts from the barrel or magazine well.
Darts fly short distances or inaccurately.	Worn or damaged darts. Obstruction in the barrel.	Replace old or damaged darts with new, official Nerf darts. Check the barrel for any obstructions and carefully remove them.
Magazine does not feed darts.	Magazine improperly loaded or inserted.	Ensure darts are correctly loaded into the drum. Re-insert the magazine firmly until it clicks.

7. SPECIFICATIONS

- **Model:** CS-18
- **Brand:** Nerf (Distributed by TOMY in Japan)
- **Dart Capacity:** 18 darts
- **Dart Type:** Official Nerf Streamline Darts
- **Firing Modes:** Single-shot, Rapid-fire (Slam Fire)
- **Recommended Age:** 8 years and up
- **Batteries Required:** No
- **Assembly Required:** No

8. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and darts, please contact the retailer where the product was purchased or refer to the official Nerf/Hasbro website for your region.

Please retain your proof of purchase for any warranty claims.