Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- > Logitech M310 Wireless Mouse User Manual

Logitech 910-001675

Logitech M310 Wireless Mouse User Manual

Model: 910-001675

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Logitech M310 Wireless Mouse. Please read this manual carefully before using your device to ensure optimal performance and longevity.



Image: The Logitech M310 Wireless Mouse in silver, shown alongside its compact USB Nano Receiver. This image illustrates the primary components included with the product.

1. Battery Installation

The Logitech M310 Wireless Mouse requires one AA battery for operation. A battery is typically included with the mouse.

- 1. Locate the battery compartment on the underside of the mouse.
- 2. Slide the battery compartment cover open.
- 3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
- 4. Close the battery compartment cover securely.

Note: The mouse features an On/Off switch to conserve battery life. Ensure the mouse is switched on after battery installation.

2. Connecting the USB Nano Receiver

The Logitech M310 uses a plug-and-forget USB Nano Receiver for wireless connectivity.

- 1. Locate the USB Nano Receiver. It is often stored inside the battery compartment of the mouse for transport.
- 2. Plug the USB Nano Receiver into an available USB port on your computer (PC, Mac, Laptop, Chromebook).
- 3. Your operating system should automatically detect and install the necessary drivers. This process may take a few moments.







PLUG & PLAY SIMPLICITY 10 M WIRELESS RANGE

Image: The Logitech M310 mouse highlighting its 10-meter wireless range and plug-and-play simplicity. The image shows the mouse from a top-down perspective.

Once the receiver is connected and drivers are installed, the mouse should be ready for use. The wireless connection operates on a 2.4 GHz frequency, providing reliable connectivity with virtually no delays.

OPERATING INSTRUCTIONS

Basic Functions

- Left Click: Press the left mouse button to select items, open links, or activate functions.
- Right Click: Press the right mouse button to open context menus or access additional options.
- **Scroll Wheel:** Roll the scroll wheel up or down to navigate through documents and web pages. The scroll wheel also functions as a middle button when pressed.





COMFORTABLE, FULL-SIZE MOUSE WITH RUBBER GRIPS

Image: A hand comfortably gripping the Logitech M310 Wireless Mouse, demonstrating its full-size, contoured design with soft rubber side grips, suitable for ambidextrous use.

Optical Tracking

The M310 mouse features 1000 DPI optical tracking, providing smooth and responsive cursor control on various surfaces. For optimal performance, use the mouse on a clean, non-reflective surface.





EASY AND SMOOTH NAVIGATION

Image: A side profile of the Logitech M310 Wireless Mouse, illustrating its ergonomic shape designed for easy and smooth navigation.

Ambidextrous Design

The contoured design of the M310 mouse is ambidextrous, meaning it is comfortable for both left-handed and right-handed users, even during extended periods of use.

MAINTENANCE

Cleaning the Mouse

To maintain the performance and appearance of your mouse, clean it periodically.

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the mouse's surface.
- Do not immerse the mouse in water or any liquid.

Battery Replacement

The Logitech M310 Wireless Mouse boasts an 18-month battery life. When the battery indicator light (if present) signals low power, or if the mouse performance degrades, it's time to replace the battery.

- 1. Switch off the mouse using the On/Off switch on the underside.
- 2. Open the battery compartment.
- 3. Remove the old AA battery.

- 4. Insert a new AA battery, observing the correct polarity.
- 5. Close the battery compartment and switch the mouse back on.

Important: Dispose of used batteries responsibly according to local regulations.


TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Mouse not responding	 Ensure the mouse is switched on. Check battery level and replace if necessary. Ensure the USB Nano Receiver is securely plugged into a working USB port. Try a different USB port. Move the mouse closer to the receiver to rule out range issues. Restart your computer.
Erratic cursor movement	 Clean the optical sensor on the underside of the mouse. Use the mouse on a clean, non-reflective, and uniform surface. Avoid glass or highly reflective surfaces. Ensure there are no strong wireless interferences nearby (e.g., other 2.4 GHz devices).
Wireless connection drops frequently	 Ensure the mouse is within the 10-meter wireless range of the receiver. Minimize obstacles between the mouse and receiver (e.g., large metal objects). Try plugging the receiver into a different USB port, preferably one closer to the mouse or on the front of your computer.

SPECIFICATIONS

Feature	Detail
Model Number	910-001675
Connectivity Technology	Wireless (2.4 GHz USB Nano Receiver)
Movement Detection Technology	Optical
DPI	1000 DPI
Battery Type	1 x AA Battery
Battery Life	Up to 18 months
Operating System Compatibility	Chrome OS, Windows 10, Windows 7, Windows 8, Windows Vista, Mac
Dimensions (L x W x H)	16.41 x 9.19 x 22.4 cm (Product)
Weight	77.11 g
Color	Silver
Special Features	Ambidextrous design, Rubber side grips, Smart sleep mode, On/Off switch

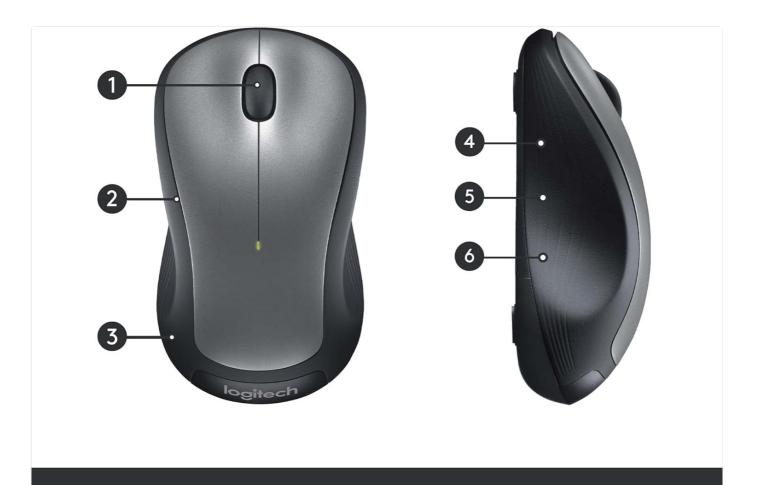

- 1. Line-by-line scrolling
- 2. Rubber grips
- 3. Ambidextrous design
- 4. Smooth tracking
- 5. 10 m Wireless range
- 6. Receiver stored in mouse

Image: A detailed diagram illustrating key features of the Logitech M310 mouse, including line-by-line scrolling, rubber grips, ambidextrous design, smooth tracking, 10m wireless range, and receiver storage within the mouse.

WARRANTY AND SUPPORT

The Logitech M310 Wireless Mouse comes with a three-year hardware warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

Customer Support

For technical support, warranty claims, or additional information, please visit the official Logitech support website or contact their customer service.

- Logitech Support Website: www.logitech.com/support
- Product Page: Amazon Product Page

Please have your product model number (910-001675) and proof of purchase ready when contacting support.

Related Documents - 910-001675



Logitech Wireless Mouse M310 Quick Start Guide

Get started with your Logitech Wireless Mouse M310. This guide provides simple, step-by-step instructions for battery installation, USB receiver connection, and computer setup.



Logitech Marathon Mouse M705: Getting Started Guide & Features

Comprehensive guide to setting up and using the Logitech Marathon Mouse M705, including features, troubleshooting, and Unifying receiver setup.



Logitech M170/M171/B170 Wireless Mouse Setup Guide

A setup guide for the Logitech M170, M171, and B170 wireless mice, detailing features, setup instructions, and troubleshooting.



Logitech M170/M171 Wireless Mouse: Setup Guide and Features

Get started with your Logitech M170/M171 wireless mouse. This guide provides step-by-step setup instructions, details product features, and offers troubleshooting tips for reliable wireless connectivity.



Logitech MX Master 3S for Mac: Getting Started and Features Guide

Get started with your Logitech MX Master 3S for Mac wireless mouse. This guide covers detailed setup, Bluetooth and Easy-Switch pairing, MagSpeed scroll wheel functionality, thumb wheel and gesture button customization, app-specific settings, Logitech Flow for multi-computer use, battery charging and status, and cleaning instructions.



Logitech M535 Bluetooth Mouse: Features, Setup, and Compatibility Guide

Discover the Logitech M535 Bluetooth Mouse. This guide covers its features, Bluetooth connection steps, customization with Logitech Options software, and compatibility with Windows, Mac OS, Chrome OS, and Android devices.