

## Geemarc AMPLIPOWER60

# Amplipower 60 Plus Amplified Telephone User Manual

Brand: Geemarc | Model: AMPLIPOWER60

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Geemarc Amplipower 60 Plus Amplified Telephone. Designed for individuals with severe hearing loss, this telephone offers significant voice amplification and user-friendly features to enhance communication clarity.

## PRODUCT OVERVIEW

---

The Amplipower 60 Plus is an amplified corded telephone engineered for ease of use and superior sound quality. Key features include:

- Incoming voice amplification up to 67dB.
- Loud and clear speakerphone.
- Visual ringer for incoming calls.
- Nine one-touch memory dial buttons (M1-M9).
- Three emergency buttons for quick dialing.
- Adjustable 90dB ringer volume and tone.
- Tone control for customized sound.
- Last number redial function.
- 2.5mm headset jack.
- Compatibility with hearing aids.
- Wall-mountable design.



This image displays the Geemarc Amplipower 60 Plus Amplified Telephone. It features a dark gray body, a large black handset, and an easy-to-read keypad with oversized black buttons and white numbers. Key features visible include 'TONE' and 'VOLUME' adjustment sliders, 'BOOST +40dB' button, and nine memory dial buttons (M1-M9) along the right side. The bottom front includes 'REDIAL', 'FLASH', 'PROG', 'MUTE', and 'SPKR' buttons, along with a visual ringer light.

## SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure you have the telephone base, handset, coiled handset cord, and telephone line cord.
2. **Connect Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack on the left side of the telephone base.
3. **Connect Telephone Line:** Plug one end of the telephone line cord into the jack labeled "LINE" on the back of the telephone base and the other end into your wall telephone jack.
4. **Power Connection:** Connect the power adapter to the telephone base and then to a standard electrical outlet.
5. **Optional Accessories:** If using a headset or bed shaker (not included), connect them to the appropriate jacks on the telephone base.
6. **Battery Installation (for Ringer):** The ringer requires batteries for operation. Open the battery compartment on the underside of the phone and insert the required batteries (type and quantity specified in the compartment). Ensure correct polarity.

## OPERATING INSTRUCTIONS

### Making a Call:

1. Lift the handset or press the **SPKR** button to activate the speakerphone.
2. Dial the desired telephone number using the large keypad buttons.
3. To end the call, replace the handset or press the **SPKR** button again.

### Receiving a Call:

1. When the phone rings and the visual ringer flashes, lift the handset or press the **SPKR** button.
2. To end the call, replace the handset or press the **SPKR** button again.

### **Amplification and Tone Control:**

- **Volume Control:** Use the **VOLUME** slider located above the keypad to adjust the incoming voice volume during a call.
- **Boost Function:** For maximum amplification (up to 67dB), press the **BOOST +40dB** button located on the top right of the phone. This will significantly increase the volume.
- **Tone Control:** Use the **TONE** slider to adjust the frequency response of the incoming voice, allowing you to customize the sound to best suit your hearing needs.

### **Memory Dialing (M1-M9):**

The phone features nine one-touch memory buttons (M1-M9) for frequently called numbers.

#### **1. Programming:**

- Press the **PROG** button.
- Dial the telephone number you wish to store.
- Press the desired memory button (M1-M9) to save the number.

#### **2. Dialing:**

- Lift the handset or press **SPKR**.
- Press the desired memory button (M1-M9) to dial the stored number.

### **Emergency Buttons:**

The phone includes three dedicated emergency buttons for critical contacts. Program these similarly to memory dial buttons, but they are typically larger and more prominent.

1. **Programming:** Consult the specific instructions for your emergency buttons, usually involving the **PROG** button followed by the emergency button and the number.
2. **Dialing:** Simply press the designated emergency button to dial the pre-programmed number.

### **Other Functions:**

- **Redial:** Press the **REDIAL** button to dial the last number called.
- **Flash:** Use the **FLASH** button for call waiting or transferring calls (requires subscription from your phone company).
- **Mute:** Press the **MUTE** button to temporarily silence your microphone during a call. The other party will not hear you. Press again to unmute.
- **Ringer Volume/Tone:** Adjust the physical switch or dial on the side/back of the phone to set the desired ringer volume and tone.
- **Message Waiting Indicator:** If subscribed to a message waiting service from your phone company, the indicator light will illuminate when you have new messages.

## **MAINTENANCE**

---

- **Cleaning:** Use a soft, damp cloth to clean the exterior of the telephone. Do not use abrasive cleaners or solvents.
- **Storage:** Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the ringer performance degrades or stops working, replace the batteries in the ringer compartment. Ensure to use fresh batteries of the correct type.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is disconnected or faulty.	Ensure the telephone line cord is securely connected to both the phone and the wall jack. Test with another phone if possible.
Cannot hear caller or volume is too low.	Volume or tone settings are too low; Boost function not activated.	Adjust the <b>VOLUME</b> slider. Press the <b>BOOST +40dB</b> button. Adjust the <b>TONE</b> slider.
Ringer does not sound or is too quiet.	Ringer volume set too low; Ringer batteries are low or depleted.	Adjust the ringer volume switch. Check and replace the batteries in the ringer compartment. Ensure correct battery type and polarity.
Cannot program memory buttons.	Incorrect programming sequence.	Refer to the "Memory Dialing" section in Operating Instructions and follow the steps precisely.

## SPECIFICATIONS

Feature	Detail
Brand	Geemarc
Model Number	AMPLIPOWER60
Telephone Type	Corded
Incoming Voice Amplification	Up to 67dB
Ringer Volume	Adjustable, up to 90dB
Item Weight	2.5 pounds
Color	Black
Compatible Devices	Phone company services, Hearing aids
Headset Jack	2.5mm
Wall Mountable	Yes

## WARRANTY AND SUPPORT


For information regarding warranty coverage, technical support, or service, please contact Geemarc customer service directly. Refer to the product packaging or the official Geemarc website for the most current contact details.

You can visit the official Geemarc store for more information: [Geemarc Store on Amazon](#).




### [Geemarc AMPLIDECT COMBI-PHOTO 295 Quick User Guide](#)

Get started with your Geemarc AMPLIDECT COMBI-PHOTO 295 amplified cordless telephone. This quick guide covers setup, features like big buttons and hearing aid compatibility, and accessing the answering machine. For full details, visit [www.geemarc.com](http://www.geemarc.com).

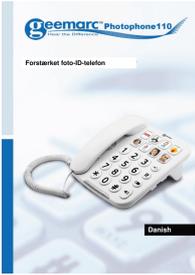

### [Geemarc Photophone 110: Forstærket Foto-ID-Telefon Brugervejledning](#)

Denne brugervejledning giver detaljerede instruktioner til Geemarc Photophone 110, en forstærket foto-ID-telefon designet til ældre og brugere med høreapparater. Lær om opsætning, funktioner, fejlfinding og garanti.

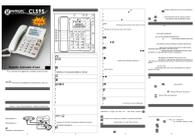

### [Geemarc CL595 Amplified Corded Phone Quick Start Guide](#)

A quick start guide for the Geemarc CL595 amplified corded telephone, detailing its features, setup, operation, SOS function, answering machine, and technical specifications. This hearing aid compatible phone is designed for ease of use with large buttons and clear display.



### [Geemarc CL595 User Guide](#)

Comprehensive user guide for the Geemarc CL595 telephone, covering setup, features, and troubleshooting.



### [Geemarc AMPLIDECT 295 SOS-PRO Guide de Démarrage Rapide](#)

Guide de démarrage rapide pour le téléphone sans fil amplifié Geemarc AMPLIDECT 295 SOS-PRO avec fonction SOS. Apprenez l'installation, la configuration, les fonctionnalités, le répondeur, la garantie et les déclarations.



### [Manuel d'utilisation Geemarc CL9000 : Téléphone 4G avec SOS](#)

Guide complet pour le téléphone Geemarc CL9000. Découvrez comment installer, configurer et utiliser ses fonctions 4G, SOS, et d'amplification audio pour une communication facilitée. Idéal pour les malentendants.