

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wilton](#) /

› [Wilton 3-Tier Cupcake Stand \(Model 1512-127\) Instruction Manual](#)

Wilton 1512-127

Wilton 3-Tier Cupcake Stand Instruction Manual

Model: 1512-127

INTRODUCTION

This manual provides instructions for the assembly, use, and care of your Wilton 3-Tier Cupcake Stand. This stand is designed to display up to 24 standard cupcakes, making it suitable for various occasions such as parties, weddings, and baby showers.

SAFETY INFORMATION

- **Adult Assembly:** Adult supervision is recommended during assembly.
- **Weight Distribution:** Ensure cupcakes are distributed evenly across all tiers to maintain stability.
- **Material:** This stand is made of corrugated cardboard. Avoid exposure to moisture or excessive heat.
- **Intended Use:** Designed for displaying cupcakes and small treats. Do not use for heavy items.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Large circular plate (1)
- Medium circular plate (1)
- Small circular plate (1)
- Interlocking leg pieces (3)
- Border strips (3) (optional for customization)

SETUP AND ASSEMBLY

Follow these steps to assemble your 3-tier cupcake stand:

1. **Prepare the Base:** Take the three interlocking leg pieces. Carefully slide them together at their designated slots to form the central support structure. Ensure they are securely interlocked and stand upright.
2. **Attach the Large Plate:** Identify the largest circular plate. Align the central opening of this plate with the top of the assembled leg structure. Gently press down until the plate rests securely on the lowest set of notches or supports on the leg structure.
3. **Attach the Medium Plate:** Take the medium circular plate. Align its central opening with the leg structure above the large plate. Press down until it rests securely on the middle set of notches or supports.
4. **Attach the Small Plate:** Take the smallest circular plate. Align its central opening with the leg structure above the

medium plate. Press down until it rests securely on the highest set of notches or supports.

5. **Apply Border Strips (Optional):** If desired, attach the provided border strips around the edges of each circular plate for a decorative finish. These can be secured with adhesive (not included) or by fitting them into pre-cut slots if available.
6. **Final Check:** Ensure all plates are level and the stand is stable before placing any items on it.



CUPCAKE STAND
SOPORTE PARA CUPCAKES
PRÉSENTOIR À PETITS GÂTEAUX



Add a personal touch with stickers and embellishments (not included)
Holds 24 standard cupcakes

Añada un toque personal con adhesivos y ornamentaciones (no se incluyen)
Sostiene 24 cupcakes estándar

Ajoutez une note personnelle avec des autocollants ou autres enjolivements (non compris)
Loge 24 petits gâteaux standard



10.5 HIGH (26,6 ALTO/HAUT) X 12 IN DIAM (30,4 cm DIÁM/DIAM) ASSEMBLED/ENSAMBLADO/ASSEMBLÉ

Image: An assembled Wilton 3-Tier Cupcake Stand, white, displaying various colorful cupcakes. This image illustrates the final product after assembly.



Image: A Wilton 3-Tier Cupcake Stand customized with green polka dot paper and 'Baby Shower' lettering, showcasing its personalization potential.

OPERATING INSTRUCTIONS

1. **Placement:** Place the assembled stand on a flat, stable surface.
2. **Loading Cupcakes:** Carefully place cupcakes onto each tier. The stand is designed to hold up to 24 standard-sized cupcakes. Distribute the weight as evenly as possible across the tiers to maintain balance.
3. **Display:** The stand is ready for display. Avoid moving the stand while fully loaded to prevent accidental spills or damage.

CARE AND MAINTENANCE

To ensure the longevity of your cupcake stand, follow these care instructions:

- **Cleaning:** Wipe the stand with a dry or slightly damp cloth immediately after use. Do not immerse in water or use abrasive cleaners, as this can damage the cardboard material.
- **Storage:** The stand can be disassembled for compact storage. Store in a dry place away from direct sunlight and moisture to prevent warping or damage.

- **Disposal:** As the stand is made of cardboard, it can be recycled according to local guidelines once its useful life is over.

TROUBLESHOOTING

Issue: Stand feels wobbly or unstable.

Solution: Ensure all interlocking leg pieces are fully engaged and the circular plates are seated correctly on their respective notches. Verify the stand is on a completely flat and stable surface. Uneven weight distribution of cupcakes can also cause instability; try to balance the load.

Issue: Plates do not sit level.

Solution: Recheck the assembly of the central leg structure to ensure all pieces are interlocked straight. Gently adjust the plates to ensure they are fully seated on the support notches.

Issue: Damage from moisture.

Solution: This stand is made of cardboard and is not designed to be waterproof. Avoid spills and exposure to high humidity. If minor moisture damage occurs, allow it to air dry completely, but significant damage may compromise structural integrity.

SPECIFICATIONS

Feature	Detail
Model Number	1512-127
Material	Corrugated Cardboard
Color	White
Dimensions (Assembled)	12 x 12 x 10.5 inches (30.4 x 30.4 x 26.6 cm)
Capacity	24 standard cupcakes
Item Weight	7 ounces (198 grams)

WARRANTY AND SUPPORT

For product support or inquiries, please refer to the manufacturer's official website or contact their customer service department. Specific warranty details may vary and are typically provided with the product packaging or on the manufacturer's website.

Manufacturer: [Wilton](#)