

manuals.plus /

› [Panasonic](#) /

› [Panasonic Digital Cordless FAX KX-PW621DL-S User Manual](#)

Panasonic KX-PW621DL-S

Panasonic Digital Cordless FAX User Manual

Model: KX-PW621DL-S

Brand: Panasonic

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Panasonic Digital Cordless FAX, model KX-PW621DL-S. Please read this manual thoroughly before operating the device and retain it for future reference. This device allows for sending and receiving faxes without the need for paper, offering automatic recording of both transmissions and receptions. It also features an 'Anshin Response' function to confirm the sender via the handset. The main unit and handset are designed for ease of use and visibility. The system supports SDHC memory cards for expanded storage capabilities.



Figure 1: The Panasonic KX-PW621DL-S Digital Cordless FAX system, showing the main unit with a wired handset and a separate cordless handset on its charging base.

SETUP

Follow these steps to set up your Panasonic Digital Cordless FAX:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: main unit, wired handset, cordless handset, AC adapter, telephone line cord, and user manual.
2. **Connect AC Adapter:** Plug the AC adapter into the main unit's power jack, then plug the other end into a standard electrical outlet.
3. **Connect Telephone Line:** Connect one end of the telephone line cord to the LINE jack on the main unit and the other end to your telephone wall jack.
4. **Install Wired Handset:** Connect the coiled cord of the wired handset to the HANDSET jack on the main unit.

5. **Charge Cordless Handset:** Place the cordless handset on its charging cradle. Allow it to charge for at least 7 hours before initial use. The charge indicator on the handset should illuminate.
6. **Install Paper:** Open the paper tray and load standard fax paper according to the instructions in the paper loading guide.
7. **Initial Settings:** Follow the on-screen prompts on the main unit's display to set the date, time, and other basic preferences.

OPERATING INSTRUCTIONS

This section covers the basic operation of your FAX machine.

Making and Receiving Calls

- **To Make a Call (Wired Handset):** Lift the wired handset, dial the number, and press the TALK button.
- **To Make a Call (Cordless Handset):** Press the TALK button on the cordless handset, dial the number.
- **To Receive a Call:** Lift the wired handset or press the TALK button on the cordless handset when the phone rings.

Sending a FAX

1. Place the document face down in the document feeder.
2. Dial the recipient's FAX number.
3. Press the FAX/START button. The machine will automatically scan and transmit the document.

Receiving a FAX

- The machine will automatically answer incoming FAX calls and print the document if paper is loaded.
- If the