

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Leifheit](#) /
- › [Leifheit Dust Pan and Brush Model 41410 User Manual](#)

Leifheit 41410

Leifheit Dust Pan and Brush Model 41410 User Manual

With Enclosed Dirt Chamber

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Leifheit Dust Pan and Brush, Model 41410. Designed for efficient floor cleaning, this set features an enclosed dirt chamber and a brush with split bristle ends for optimal dust collection. Please read this manual thoroughly before first use to ensure safe and effective operation.

PRODUCT FEATURES

- **Extra-large dust pan:** Equipped with a three-sided enclosed dirt chamber to securely contain swept debris, preventing spills during transport.
- **Efficient brush design:** Features split bristle ends, which are fine and gentle, designed to effectively capture even the smallest dust particles from various surfaces.
- **Ergonomic handling:** The brush handle is designed for comfortable grip during use.
- **Integrated storage:** The brush securely clicks into the dust pan's handle for compact and space-saving storage.
- **Hanging option:** The combined unit can be hung for convenient storage.

SETUP

The Leifheit Dust Pan and Brush set requires no assembly. Upon unboxing, inspect both the dust pan and brush for any signs of damage. Ensure the brush bristles are clean and free from packaging debris before first use.

1. Remove the dust pan and brush from their packaging.
2. Verify that the brush fits securely into the dust pan's handle for storage.
3. The product is now ready for use.

OPERATING INSTRUCTIONS

Follow these steps for effective sweeping and debris collection:

1. **Positioning the Dust Pan:** Place the dust pan flat on the floor, ensuring the rubber lip is flush with the surface to prevent dirt from sweeping underneath.



Image: A user demonstrating the proper technique for sweeping dirt into the Leifheit dust pan.

2. **Sweeping Debris:** Use the brush to sweep dirt, dust, and debris directly into the dust pan. The split bristle ends are designed to capture fine particles efficiently.



Image: A close-up view of the brush handle and bristles, highlighting the ergonomic design and effective bristle structure.

3. **Transporting Debris:** Once debris is collected, lift the dust pan. The enclosed dirt chamber will help prevent contents from spilling during transport to a waste receptacle.
4. **Emptying the Dust Pan:** Hold the dust pan over a trash can and tilt it to empty the collected dirt.



Image: The dust pan being tilted to release collected debris into a waste bin, showcasing the enclosed chamber's function.

5. **Storage:** After use, clean the brush and dust pan. The brush can be clicked into the dust pan's handle for compact storage or hung using the integrated hanging hole.

MAINTENANCE

Regular cleaning ensures the longevity and effectiveness of your Leifheit Dust Pan and Brush.

- **Brush Cleaning:** To clean the brush, remove any trapped hair or large debris by hand. For general cleaning, rinse the bristles under lukewarm water. Use a mild soap if necessary. Allow the brush to air dry completely before storing.
- **Dust Pan Cleaning:** Wipe the dust pan with a damp cloth to remove any residue. For more thorough cleaning, wash with warm, soapy water and rinse thoroughly. Ensure it is dry before storing.
- **Storage:** Store the dust pan and brush in a dry place. The integrated design allows for compact storage by clicking the brush into the dust pan's handle.

TROUBLESHOOTING

If you encounter issues with your dust pan and brush, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dirt sweeps under the dust pan.	Dust pan lip not flush with the floor.	Ensure the dust pan's rubber lip is pressed firmly against the floor surface.

Problem	Possible Cause	Solution
Brush not picking up fine dust effectively.	Bristles are dirty or matted.	Clean the brush bristles thoroughly as described in the Maintenance section.
Debris falling out of dust pan during transport.	Dust pan is overfilled or not held level.	Avoid overfilling the dust pan. Hold it level when transporting. The enclosed chamber helps, but extreme tilting can still cause spills.

SPECIFICATIONS

Brand	Leifheit
Model Name	41410
Style	With Enclosed Dirt Chamber
Material	Plastic
Color	Turquoise
Bristle Material	Plastic
Handle Material	Plastic
Bristle Type	Flagged Bristle
Recommended Uses	Floor Cleaning, Dusting
Surface Recommendation	Hard floors (e.g., Wood)
Product Dimensions	2.95 x 9.65 x 11.81 inches
Item Weight	10.9 ounces (0.31 Kilograms)
Included Components	1 Dust Pan and Brush set
UPC	764558229015

WARRANTY INFORMATION

Leifheit guarantees this product for a period of **2 years** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, please refer to the official Leifheit website or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Leifheit Dust Pan and Brush, please contact Leifheit customer support.

For the most up-to-date contact information, please visit the official Leifheit website:

www.leifheit.com



© 2026 Leifheit. All rights reserved.