

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Clatronic](#) /

› [Clatronic DR 3280 Steam Cleaner User Manual](#)

Clatronic DR 3280

Clatronic DR 3280 Steam Cleaner User Manual

INTRODUCTION

The Clatronic DR 3280 Steam Cleaner is designed for deep, efficient, and environmentally friendly cleaning without the need for additional detergents. Its versatile attachments enable use across various household areas, including large floor surfaces, windows, and the removal of limescale deposits. This steam cleaner effectively eliminates stubborn dirt without leaving streaks or limescale residues. It is an essential tool for quick and easy cleaning of shower partitions, roller shutters, radiators, and is ideal for disinfecting bathrooms and kitchens, as well as refreshing upholstery and clothing.

IMPORTANT SAFETY INSTRUCTIONS

- **Electrical Safety:** Always ensure the power supply matches the voltage specified on the appliance. Do not operate the steam cleaner with a damaged cord or plug.
- **Hot Steam Hazard:** Steam is extremely hot and can cause severe burns. Never direct steam at people, pets, or electrical appliances. Keep hands and face away from the steam nozzle during operation.
- **Water Tank:** Do not overfill the water tank. Always unplug the appliance and allow it to cool before refilling.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not allow children to operate the steam cleaner.
- **Surface Compatibility:** Test the steam cleaner on an inconspicuous area of the surface to be cleaned to ensure compatibility and prevent damage.
- **Maintenance:** Always unplug the appliance and allow it to cool completely before performing any maintenance or cleaning.
- **Distilled Water:** This appliance does not feature an anti-limescale system. To prevent limescale buildup and ensure optimal performance, it is highly recommended to use distilled water.

PRODUCT COMPONENTS AND ACCESSORIES

The Clatronic DR 3280 Steam Cleaner comes with a range of accessories for various cleaning tasks. Familiarize yourself with each component before use.



Figure 1: The Clatronic DR 3280 Steam Cleaner main unit, showing the water inlet and accessory storage compartment.



Figure 2: The Clatronic DR 3280 Steam Cleaner main unit with some accessories neatly stored within its compartment.



Figure 3: A comprehensive view of the Clatronic DR 3280 Steam Cleaner's accessories, including floor brush, extension tubes, nozzles, small brushes, measuring cup, funnel, and cloth covers.

List of Included Accessories:

- Main Steam Unit
- Flexible Steam Hose
- Floor Brush Attachment
- Window Squeegee Attachment
- Small Round Brushes (various sizes)
- Point Jet Nozzle
- Measuring Cup
- Funnel
- Extension Tubes (for extended reach)
- Cloth Covers for Floor and Hand Tools

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging. Check for any damage.
2. **Fill Water Tank:** Unscrew the safety cap on the main unit. Use the provided measuring cup and funnel to fill the water tank with a maximum of 1.5 liters of **distilled water**. Do not use tap water to prevent limescale buildup. Screw the safety cap back on securely.
3. **Attach Hose:** Connect the flexible steam hose to the steam outlet on the main unit. Ensure it clicks into place or is firmly secured.
4. **Select and Attach Accessory:** Choose the appropriate cleaning attachment for your task (e.g., floor brush, point jet nozzle) and connect it to the end of the steam hose or extension tubes.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (230V, 50Hz).

OPERATING INSTRUCTIONS

1. **Power On and Heat Up:** Switch on the steam cleaner. The indicator light will illuminate, signaling that the appliance is heating. The heating process typically takes 5 to 10 minutes, depending on the water volume. The indicator light will turn off or change color when the operating temperature and pressure (4 bar) are reached.
2. **Release Steam:** Before cleaning, direct the steam nozzle into a cloth or bucket for a few seconds to release any condensed water.
3. **Begin Cleaning:** Press the steam trigger on the handle to release steam. For continuous steam, engage the steam lock button if available. Move the attachment slowly over the surface to be cleaned.
4. **Using Attachments:**
 - **Floor Brush:** Attach the floor brush with a cloth cover for cleaning hard floors.
 - **Point Jet Nozzle:** Use for targeted cleaning of grout, crevices, and stubborn spots.
 - **Small Round Brushes:** Ideal for scrubbing small areas, fixtures, and heavily soiled spots.
 - **Window Squeegee:** For streak-free cleaning of windows, mirrors, and other smooth surfaces.
5. **Refilling Water:** If steam production decreases or stops, the water tank may be empty. **Always unplug the appliance and allow it to cool down for several minutes before carefully unscrewing the safety cap and refilling with distilled water.**
6. **Power Off:** After cleaning, switch off the appliance and unplug it from the power outlet.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Clatronic DR 3280 Steam Cleaner.

- Cool Down:** Always allow the appliance to cool completely before cleaning or storing.
- Empty Water Tank:** After each use, carefully empty any remaining water from the tank.
- Clean Attachments:** Wash cloth covers and other removable attachments with warm, soapy water. Rinse thoroughly and allow to air dry.
- Descaling (if necessary):** If tap water was used despite recommendations, limescale buildup may occur. To descale, fill the tank with a solution of water and white vinegar (1:1 ratio) or a commercial descaling agent. Heat the appliance and release steam until the tank is empty. Rinse thoroughly with distilled water afterwards. Perform this process regularly to prevent severe buildup.
- Exterior Cleaning:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or solvents.
- Storage:** Store the steam cleaner and its accessories in a dry, safe place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or very little steam	Water tank empty; Appliance not heated sufficiently; Limescale buildup in nozzle/hose.	Refill water tank (with distilled water); Allow sufficient heating time (5-10 min); Descale the appliance.
Water dripping from nozzle	Condensation in hose; Appliance not fully heated.	Direct steam into a cloth until only steam is released; Allow appliance to heat fully.
Appliance not turning on	No power supply; Faulty power cord/plug.	Check power outlet and plug connection; Contact qualified service personnel if cord/plug is damaged.
Safety cap difficult to open	Residual pressure in the tank.	Ensure appliance is unplugged and completely cooled down. Release any remaining steam pressure by pressing the steam trigger until no more steam comes out.

If problems persist after attempting these solutions, please contact your retailer or a qualified service technician.

TECHNICAL SPECIFICATIONS

Model Number	DR 3280
Brand	Clatronic
Power	1500 Watts

Input Voltage	230 Volts
Input Frequency	50 Hz
Tank Capacity	1.5 Liters
Steam Pressure	4 bar
Product Dimensions (L x W x H)	28.5 x 67 x 26 cm
Item Weight	5.2 Kilograms
Color	Black/Grey
Material	18/10 Steel
Automatic Shut-off Function	No
Noise Level	44 Decibels
Special Feature	Removes limescale (Note: Use distilled water to prevent buildup)

WARRANTY AND SUPPORT

Information regarding specific warranty terms and spare parts availability for the Clatronic DR 3280 is not provided in this manual. For warranty claims, technical support, or inquiries about spare parts, please contact your original retailer or the manufacturer directly. Keep your proof of purchase for any warranty-related services.