

MAXTRACK LT2-2L

MAXTRACK Transmedia LT2-2L Halogen Transformer User Manual

Model: LT2-2L | Brand: MAXTRACK

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your MAXTRACK Transmedia LT2-2L Halogen Transformer. This electronic converter is designed for halogen lamps with a power range of 35-105W, converting 230V AC input to 12V AC output. It features integrated overload and temperature protection for enhanced safety and reliability. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INSTRUCTIONS

WARNING: Electrical shock hazard. Installation should only be performed by a qualified electrician in accordance with all local and national electrical codes.

- Always disconnect power at the main circuit breaker before installing or servicing the transformer.
- Ensure the transformer's input voltage (230V) matches your mains supply.
- Do not exceed the maximum load of 105W. The minimum load is 35W.
- This transformer is non-dimmable. Do not connect it to dimmer switches.
- Ensure adequate ventilation around the transformer to prevent overheating.
- Do not expose the transformer to moisture or extreme temperatures.
- The transformer is equipped with overload and temperature protection. If these protections activate, disconnect power, allow the unit to cool, and check for faults in the circuit.
- The device is marked with the CE symbol, indicating conformity with European safety standards.
- The 'MM' symbol indicates suitability for mounting on normally flammable surfaces.



Image: The CE mark, indicating compliance with European safety standards, alongside the input voltage (230V) and output voltage (12V), and the power range (35-105W) of the transformer.

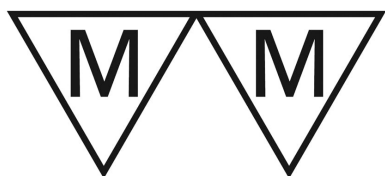


Image: The 'MM' symbol, indicating that the transformer is suitable for mounting on normally flammable surfaces.

3. PRODUCT OVERVIEW

The MAXTRACK Transmedia LT2-2L is a compact electronic halogen transformer designed for reliable power conversion in lighting applications. Its slim profile (130 x 43 x 20 mm) allows for installation in confined spaces.



Image: Top view of the MAXTRACK Transmedia LT2-2L Halogen Transformer, showing its compact design and labeling with

Key Features:

- Input: 230V AC, 50/60Hz
- Output: 12V AC
- Power Range: 35-105W
- Overload Protection
- Temperature Protection
- Non-Dimmable
- Compact Dimensions: 130 x 43 x 20 mm

4. SPECIFICATIONS

Feature	Detail
Model Number	LT2-2L
Input Voltage	230V AC
Output Voltage	12V AC
Power Range	35-105W
Frequency	50/60Hz
Protection	Overload, Temperature
Dimmable	No
Dimensions (L x W x H)	130 x 43 x 20 mm
Weight	90 g
Manufacturer	Transmedia
Brand	MAXTRACK

5. SETUP AND INSTALLATION

Important: Installation must be carried out by a qualified electrician. Ensure power is disconnected before proceeding.

- Power Disconnection:** Turn off the main power supply at the circuit breaker to the area where the transformer will be installed. Verify that power is off using a voltage tester.
- Mounting:** Select a suitable location for the transformer that allows for adequate ventilation and is protected from moisture. Secure the transformer using appropriate fasteners through the mounting holes.
- Input Wiring (230V AC):**
 - Connect the live (L) wire from the mains supply to the input terminal marked 'L' on the transformer.
 - Connect the neutral (N) wire from the mains supply to the input terminal marked 'N' on the transformer.
 - Ensure all connections are secure and properly insulated.
- Output Wiring (12V AC):**
 - Connect the 12V halogen lamp(s) to the output terminals marked '12V' on the transformer.

- Ensure the total wattage of the connected lamps is within the transformer's operating range (35-105W).
 - Maintain correct polarity if specified by the lamp manufacturer, although for AC halogen lamps, polarity is generally not critical.
5. **Final Check:** Double-check all wiring connections for security and correctness. Ensure no bare wires are exposed.
6. **Power Restoration:** Restore power at the main circuit breaker. Test the lighting system.

6. OPERATING INSTRUCTIONS

Once properly installed, the MAXTRACK Transmedia LT2-2L Halogen Transformer operates automatically when power is supplied. It converts the 230V AC input to 12V AC for your halogen lamps.

- **Power On/Off:** Control the lighting system using the standard wall switch connected to the transformer's input.
- **Non-Dimmable:** This transformer is designed for non-dimmable operation. Do not attempt to use it with dimmer switches, as this may damage the unit or the connected lamps.
- **Protection Features:** The transformer includes built-in overload and temperature protection. In case of an overload or excessive temperature, the unit will temporarily shut down to prevent damage. Disconnect power, allow the unit to cool, and investigate the cause before restoring power.

7. MAINTENANCE

The MAXTRACK Transmedia LT2-2L Halogen Transformer requires minimal maintenance.

- **Cleaning:** Ensure power is disconnected. Gently wipe the exterior of the transformer with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Inspection:** Periodically inspect the wiring for any signs of damage, fraying, or loose connections. Address any issues promptly.
- **Ventilation:** Ensure that the area around the transformer remains clear of obstructions to allow for proper airflow and heat dissipation.

8. TROUBLESHOOTING

If you encounter issues with your transformer, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Lamps do not light up.	<ul style="list-style-type: none">◦ No power supply.◦ Loose wiring connections.◦ Faulty lamp(s).◦ Transformer overload/overheat protection activated.◦ Transformer failure.	<ul style="list-style-type: none">◦ Check circuit breaker and wall switch.◦ Verify all wiring connections are secure (with power off).◦ Test lamps with a known working power source or replace them.◦ Disconnect power, allow to cool, reduce load if necessary, then restore power.◦ If all else fails, the transformer may need replacement.
Lamps flicker or are dim.	<ul style="list-style-type: none">◦ Insufficient load (below 35W).◦ Loose connections.◦ Incompatible dimmer switch (if mistakenly used).	<ul style="list-style-type: none">◦ Ensure total lamp wattage is at least 35W.◦ Check and secure all wiring connections (with power off).◦ Remove any dimmer switch; this transformer is non-dimmable.

Problem	Possible Cause	Solution
Transformer is hot to the touch.	<ul style="list-style-type: none">◦ Overload.◦ Poor ventilation.◦ Ambient temperature too high.	<ul style="list-style-type: none">◦ Reduce the total wattage of connected lamps.◦ Ensure adequate airflow around the transformer.◦ Relocate the transformer to a cooler environment if possible.

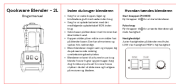

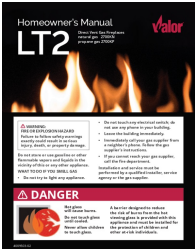

If the problem persists after attempting these solutions, consult a qualified electrician.

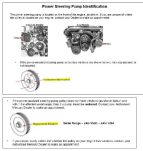

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your MAXTRACK Transmedia LT2-2L Halogen Transformer, please refer to the retailer or the manufacturer's official website. Keep your purchase receipt as proof of purchase.

© 2025 MAXTRACK. All rights reserved.
This manual is subject to change without notice.

Related Documents - LT2-2L

	<p>Qookware Blender 2L User Manual - Operation, Features, and Specifications</p> <p>Comprehensive user manual for the Qookware Blender 2L, detailing its features, operation instructions, overload protection, and technical specifications for optimal use.</p>
	<p>Yonristic Performance VANTA Edition Exhaust System Installation Guide for Chevrolet C8 Corvette</p> <p>Detailed installation guide for the Yonristic Performance VANTA Edition Exhaust System designed for the Chevrolet C8 Corvette LT2 6.2L V8. Learn how to upgrade your C8's exhaust for enhanced performance, tone, and character.</p>
	<p>Valor LT2 Series Direct Vent Gas Fireplace Homeowner's Manual</p> <p>Comprehensive homeowner's manual for the Valor LT2 Series Direct Vent Gas Fireplace, covering installation, operation, safety, maintenance, troubleshooting, and warranty information.</p>
	<p>Solo Sprayer Operator's Manual and Parts List</p> <p>Operator's manual and spare parts list for Solo sprayers, models 418-1L, 418-2L, 419-1L, 419-2L, and 420-2L. Includes safety warnings, operating instructions, possible uses, cleaning, maintenance, and a detailed parts list with diagram.</p>

 <p>Mercury MerCruiser 4.5L, 6.2L, 8.2L SAFETY RECALL</p> <p>Power Steering Pump Identification</p> <p>Diagram showing the location of the power steering pump on the engine. The pump is located on the front of the engine, near the alternator and the water pump. The diagram includes a close-up of the pump and a label indicating the serial number range for replacement.</p>	<p>Mercury MerCruiser 4.5L, 6.2L, 8.2L Safety Recall: Power Steering Pump Identification</p> <p>Safety recall notice for Mercury MerCruiser 4.5L, 6.2L, and 8.2L engines regarding the power steering pump. Provides identification instructions and serial range for replacement.</p>
 <p>Diagram showing the components of a Steelcase Migration Height-Adjustable Desk. The diagram includes labels for the desk frame, motor, and control panel. Below the diagram is a table of contents for the troubleshooting guide.</p> <p>1</p> <p>Troubleshooting Guide</p> <p>MIGRATION HEIGHT-ADJUSTABLE DESKS</p> <p>Contents</p> <ul style="list-style-type: none">1. Introduction2. Safety3. Troubleshooting4. Error Codes5. Component Identification6. Step-by-Step Solutions7. Optimal Desk Performance and Maintenance <p>Steelcase</p>	<p>Steelcase Migration Height-Adjustable Desks Troubleshooting Guide</p> <p>A comprehensive troubleshooting guide for Steelcase Migration Height-Adjustable Desks, covering common issues, error codes, component identification, and step-by-step solutions for optimal desk performance and maintenance.</p>