

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Lutron](#) /
- > [Lutron Claro CW-4-GR 4-Gang Screwless Wallplate Instruction Manual](#)

## Lutron CW-4-GR

# Lutron Claro CW-4-GR 4-Gang Screwless Wallplate Instruction Manual

Model: CW-4-GR | Brand: Lutron

## INTRODUCTION

The Lutron Claro decorative wall plate offers a clean, screwless appearance designed to complement decorator-style dimmers, switches, and accessories. This 4-gang wall plate in a gloss gray finish mounts flush to the wall, concealing gaps around wall boxes for a refined look. Constructed from durable plastic, it provides a long-lasting and easy-to-maintain solution for your electrical installations.

## SETUP AND INSTALLATION

The Claro wall plate features a simple two-piece snap-on design for quick and easy installation. No visible screws are present on the front of the plate, contributing to its clean aesthetic.



Image: A person installing a wallplate onto a wall. The image illustrates the process of attaching the wallplate to the electrical box.

- 1. Prepare the Electrical Box:** Ensure power to the electrical box is turned off at the circuit breaker before beginning installation.
- 2. Install Switches/Dimmers:** Install your decorator-style switches, dimmers, or accessories into the electrical box according to their individual instructions. Secure them with the provided screws, ensuring they are flush with the wall.
- 3. Attach the Back Plate:** The Claro wall plate consists of a back plate and a front cover. Align the back plate

over the installed switches/dimmers and secure it to the electrical box using the screws provided with the wall plate. Ensure the back plate is level and snug against the wall.

4. **Snap on the Front Cover:** Once the back plate is securely installed, align the front cover over the back plate and gently press it into place until it snaps securely. The durable plastic construction allows for a flexible, snap-on fit.

Your browser does not support the video tag.

Video: Quick Wallplate Installation. This short video demonstrates the simple snap-on installation process for the Claro wallplate.

The oversized design of the Claro wall plate helps to hide any gaps or imperfections around the wall box, providing a clean and finished appearance on any wall surface.

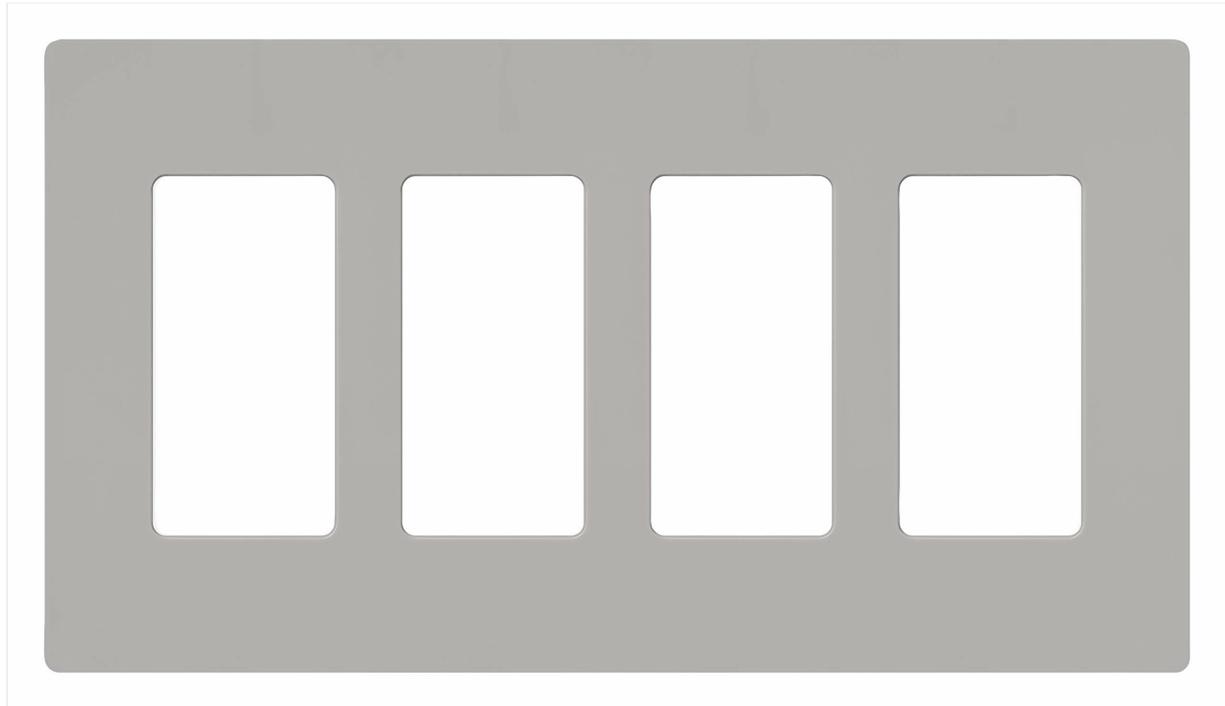


Image: Lutron Claro 4-Gang Screwless Wallplate in Gray. This image shows the installed wallplate, highlighting its screwless design and gloss gray finish.

## OPERATING THE WALLPLATE

---

The Claro wall plate itself does not have operational functions; it serves as a decorative cover for your electrical switches and outlets. Once installed, it provides a stable and aesthetically pleasing frame for your decorator-style devices.

- **Switch Compatibility:** This 4-gang wall plate is compatible with various Lutron decorator-style switches, dimmers, and accessories, including Lutron Caseta, Diva, Maestro, Maestro sensors, and Skylark.
- **Functionality:** The wall plate allows full and unobstructed operation of the switches or dimmers installed within its openings.

Your browser does not support the video tag.

Video: Lutron Claro Wallplates. This video showcases the design and functionality of Claro wallplates with various Lutron devices.

## MAINTENANCE

---

To maintain the appearance of your Lutron Claro wall plate, simply wipe it clean with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these may damage the gloss finish.

## TROUBLESHOOTING

---

If you encounter any issues with your wall plate, consider the following:

- **Loose Fit:** Ensure the back plate is securely fastened to the electrical box. If the switches/dimmers are not properly aligned or tightened, the front cover may not snap on firmly. Adjust the device mounting screws as needed.
- **Difficulty Removing Cover:** If the front cover is difficult to remove, gently pry it off using a non-marring tool (e.g., a plastic putty knife or a credit card) at the edges.
- **Scratches/Damage:** While durable, excessive force or sharp objects can scratch the surface. Handle with care during installation and cleaning.

## SPECIFICATIONS

---

Feature	Detail
Model Number	CW-4-GR
Brand	Lutron
Material	Plastic
Color	Gray
Finish Type	Gloss
Product Dimensions (W x H)	8.25" x 4.75"
Configuration	Quad (4-Gang)
Installation Type	Screw-In (for back plate)
Included Components	1 Wallplate
UPC	027557692267

# Claro 4-Gang Wallplate



Image: Dimensions of Lutron Claro 4-Gang Wallplate. The image displays the width (8.2 inches) and height (4.7 inches) of the wallplate.

## WARRANTY INFORMATION

---

The Lutron Claro CW-4-GR 4-Gang Screwless Wallplate comes with a 1-year manufacturer's warranty.

## SUPPORT

---

For technical assistance or further inquiries, please contact Lutron's 24/7 U.S.-based tech support:

- **Website:** [lutron.com/Support](https://lutron.com/Support)
- **Phone:** 1.844.LUTRON1