

## Dell S2719HSE

# Dell S2719HSE 27-inch FHD IPS Monitor User Manual

Model: S2719HSE

## 1. INTRODUCTION

---

This manual provides essential information for setting up, operating, and maintaining your Dell S2719HSE 27-inch Full HD IPS monitor. Please read this manual thoroughly before using the monitor to ensure proper functionality and safety.

The Dell S2719HSE monitor features a 27-inch Full HD (1920 x 1080) IPS display, offering wide viewing angles and over 99% sRGB color coverage for consistent and vibrant colors. It includes multiple connectivity options such as HDMI, VGA, and DisplayPort, along with USB 3.0 ports for peripheral connections. The monitor also features an adjustable stand for ergonomic comfort.

## 2. SAFETY INFORMATION

---

Observe the following safety precautions to prevent damage to the monitor and ensure personal safety:

- Always disconnect the power cable from the wall outlet before cleaning or servicing the monitor.
- Do not expose the monitor to rain or moisture.
- Ensure proper ventilation around the monitor. Do not block ventilation openings.
- Use only the power adapter and cables supplied with the monitor.
- Avoid placing heavy objects on the power cable.
- Do not attempt to repair the monitor yourself. Refer all servicing to qualified service personnel.

## 3. PACKAGE CONTENTS

---

Verify that all components are present in the package:

- Dell S2719HSE Monitor
- Stand Riser
- Stand Base
- Power Cable
- HDMI Cable

- USB Upstream Cable (for enabling USB ports on the monitor)
- Documentation (Quick Setup Guide, Safety Information)

## 4. MONITOR SETUP

---

### 4.1 Assembling the Stand

1. Place the stand base on a flat, stable surface.
2. Align the stand riser with the slot on the stand base and press down until it clicks into place.
3. Tighten the captive screw at the bottom of the stand base to secure the riser.

### 4.2 Attaching the Monitor to the Stand

1. Carefully lay the monitor face down on a soft cloth or cushion to prevent screen damage.
2. Align the stand assembly with the mounting slots on the back of the monitor.
3. Push the stand assembly firmly until it clicks into place. Ensure it is securely attached.

### 4.3 Connecting Cables

Connect the necessary cables to the corresponding ports on the back of the monitor and your computer.



*Figure 1: Rear view of the Dell S2719HSE monitor, illustrating the power input, HDMI, VGA, DisplayPort, and USB upstream ports, along with the stand mounting area.*

1. **Power Cable:** Connect the power cable to the monitor's power input and then to a grounded electrical outlet.
2. **Video Cable:** Connect one end of the HDMI, VGA, or DisplayPort cable to the corresponding port on the monitor and the other end to your computer's video output port.
3. **USB Upstream Cable:** To enable the USB ports on the monitor, connect the USB upstream cable from the monitor's upstream port to an available USB port on your computer.

#### 4.4 Initial Power On

1. Ensure all cables are securely connected.
2. Press the power button on the monitor.
3. Turn on your computer. The monitor should automatically detect the input signal. If not, you may need to manually select the input source using the On-Screen Display (OSD) menu.

### 5. OPERATING THE MONITOR

---

#### 5.1 Power On/Off

The power button is typically located on the bottom right side of the monitor. Press it to turn the monitor on or off.

#### 5.2 On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. The control buttons are usually located on the bottom edge of the monitor.

- **Navigation:** Use the designated buttons (often directional arrows) to navigate through the menu options.
- **Selection:** Press the 'Select' or 'Menu' button to enter a submenu or confirm a selection.
- **Input Source:** Manually select the active video input (HDMI, VGA, DisplayPort) if the monitor does not auto-detect.
- **Brightness/Contrast:** Adjust the overall luminance and difference between light and dark areas.
- **Color Settings:** Modify color temperature, hue, and saturation.
- **Display Settings:** Adjust aspect ratio, sharpness, and other image properties.

#### 5.3 Using the USB Ports

The monitor includes USB 3.0 downstream ports for connecting peripherals such as keyboards, mice, or USB drives. Ensure the USB upstream cable is connected from the monitor to your computer for these ports to function.





*Figure 2: This side view of the Dell S2719HSE monitor highlights the conveniently located USB downstream ports for connecting peripherals.*

## 6. MAINTENANCE

---

### 6.1 Cleaning the Monitor

- Always unplug the monitor from the electrical outlet before cleaning.
- **Screen:** Gently wipe the screen with a clean, soft, lint-free cloth. For stubborn marks, lightly dampen the cloth

with water or a non-ammonia, non-alcohol based screen cleaner. Do not spray cleaner directly onto the screen.

- **Casing:** Use a soft, dry cloth to wipe the monitor casing. Avoid abrasive cleaners or solvents.

## 6.2 Storage

When storing the monitor, keep it in a cool, dry place, away from direct sunlight and extreme temperatures. If possible, use the original packaging for protection.

## 7. TROUBLESHOOTING

---

If you encounter issues with your monitor, refer to the following common troubleshooting steps:

### 7.1 No Power

- Check if the power cable is securely connected to both the monitor and the electrical outlet.
- Verify that the power outlet is functioning by plugging in another device.
- Ensure the monitor's power button is pressed.

### 7.2 No Signal

- Confirm that the video cable (HDMI, VGA, or DisplayPort) is firmly connected to both the monitor and your computer.
- Ensure your computer is powered on and not in sleep mode.
- Use the OSD menu to manually select the correct input source.
- Try connecting the monitor to another computer or using a different video cable to isolate the issue.

### 7.3 Image Issues (Distorted, Blurry, Incorrect Colors)

- Check the video cable connections.
- Adjust the monitor's resolution and refresh rate settings in your computer's display settings to match the monitor's native resolution (1920 x 1080).
- Perform a factory reset through the OSD menu.
- Adjust brightness, contrast, and color settings via the OSD menu.

### 7.4 Contacting Support

If the troubleshooting steps do not resolve the issue, please visit the official Dell Support website for further assistance or to contact customer service. You will need your monitor's service tag or express service code, usually found on a label on the back of the monitor.

Dell Support Website: <https://www.dell.com/support>

## 8. TECHNICAL SPECIFICATIONS

---

Feature	Specification
Brand	Dell
Model Number	S2719HSE
Screen Size	27 Inches
Panel Type	IPS (In-Plane Switching)
Resolution	1920 x 1080 Pixels (Full HD)
Aspect Ratio	16:9
Response Time	5ms (from product title)
Brightness	300 cd/m²
Connectivity	1x HDMI, 1x VGA, 1x DisplayPort, 2x USB 3.0 downstream, 1x USB 3.0 upstream
Dimensions (with stand)	27 x 7.37 x 17.9 inches (W x D x H)
Item Weight	17 pounds
Color	Silver

## 9. WARRANTY INFORMATION

---

Your Dell S2719HSE monitor is covered by a limited hardware warranty provided by Dell. The specific terms and duration of your warranty may vary based on your region and purchase date. Please refer to the warranty documentation included with your product or visit the official Dell website for detailed information.

For warranty claims or to check your warranty status, please visit:

<https://www.dell.com/support/warranty>