

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [FurReal](#) /
- › [FurReal Friends Furry Frenzies Nose Playground Instruction Manual](#)

FurReal 20728

FurReal Friends Furry Frenzies Nose Playground Instruction Manual

Model: 20728 | Brand: FurReal

INTRODUCTION

The FurReal Friends Furry Frenzies Nose Playground is an interactive toy set designed for Furry Frenzies pets. It features a track with a ramp, tunnel, swing door, and park area for the pets to explore. This set includes various accessories and an exclusive Tizzy Tumbles rabbit character. This manual provides essential instructions for the assembly, operation, and maintenance of your Furry Frenzies Nose Playground.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. The set includes the Furry Frenzies Nose Playground track pieces, two Furry Frenzies animals (including the exclusive Tizzy Tumbles rabbit), a ramp, a tunnel, a swing door, a park area, a French shopping store accessory, attachable flowers, and sunglasses. Follow the visual guides to connect the track pieces and accessories securely. Ensure all connections are firm before play.



Figure 1: Assembled Furry Frenzies Nose Playground.

2. Battery Installation

Each Furry Frenzies animal requires 2 x 1.5V LR03 (AAA) batteries. Batteries are not included with the set. To install batteries:

1. Locate the battery compartment on the underside of the Furry Frenzies animal.
2. Using a small Phillips head screwdriver, open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Important: Always use fresh batteries. Do not mix old and new batteries or different types of batteries. Remove batteries if the toy will not be used for an extended period.

OPERATING INSTRUCTIONS

1. Activating Your Furry Frenzies Animal

To activate a Furry Frenzies animal, gently stroke its back. The animal will begin to move and make various sounds. To stop the animal, stroke its back again or turn it off using the switch on its underside (if available).



Figure 2: A Furry Frenzies animal.

2. Using the Nose Playground

Place an activated Furry Frenzies animal on the track. The animal will zoom around the playground, navigating through the ramp, tunnel, and swing door. The interactive elements are designed to engage the animals as they move. Observe how the animals interact with the different parts of the playground.

- **Ramp:** Animals can climb up and slide down the ramp.
- **Tunnel:** Animals will pass through the tunnel.
- **Swing Door:** Animals can push through the swing door.
- **Park Area:** A designated area for animals to roam.

MAINTENANCE

1. Cleaning

To clean the Furry Frenzies animals, gently wipe the surface with a damp cloth. Do not immerse the animals in water, as this can damage the electronic components. For the plastic playground pieces, wipe with a damp cloth and mild soap if necessary, then dry thoroughly.

2. Storage

Store the toy set in a clean, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove batteries from the animals to prevent leakage.

TROUBLESHOOTING

- **Problem:** Animal is not moving or making sounds.
Solution:
 - a. Ensure batteries are correctly installed with proper polarity.
 - b. Replace old batteries with new ones.
 - c. Check if the animal's on/off switch (if present) is in the "on" position.
 - d. Gently stroke the animal's back to activate it.
- **Problem:** Playground pieces do not connect securely.
Solution:
 - a. Ensure you are using the correct pieces for each connection point.
 - b. Apply gentle, even pressure to snap pieces together. Do not force them.
 - c. Refer to the assembly diagrams for correct orientation.

SPECIFICATIONS

Feature	Detail
Brand	FurReal
Model Number	20728
Included Components	Furry Frenzies Nose Playground, 2 Furry Frenzies animals (including Tizzy Tumbles rabbit), ramp, tunnel, swing door, park, French shopping store, attachable flowers, sunglasses
Theme	Animals
Material	Plush (animals), Plastic (playground)
Item Dimensions (LxWxH)	48.4 x 35.5 x 13.2 cm
Battery Requirements	2 x 1.5V LR03 (AAA) batteries per animal (not included)
Recommended Age	4+ years

SAFETY INFORMATION

- **WARNING:** Not suitable for children under 36 months due to small parts which may present a choking hazard.
- Minimum statutory age: 48 months (4 years).
- Adult supervision is recommended during play.
- Keep packaging materials away from children.

WARRANTY AND SUPPORT

For product support, warranty information, or to inquire about replacement parts, please contact the manufacturer, Hasbro, directly through their official customer service channels. Please retain your proof of purchase for any warranty claims.