

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Radio Flyer](#) /

› [Radio Flyer Classic Pink 10-inch Tricycle Model 34G Instruction Manual](#)

Radio Flyer 34G

Radio Flyer Classic Pink 10-inch Tricycle Model 34G Instruction Manual

Model: 34G

INTRODUCTION

The Radio Flyer Classic Pink 10-inch Tricycle is designed for young riders, offering a durable and enjoyable experience. This manual provides essential information for the proper assembly, safe operation, and routine maintenance of your tricycle.



Image: The Radio Flyer Classic Pink 10-inch Tricycle, showcasing its classic design and pink finish.

SAFETY INFORMATION

WARNING: Adult assembly required. Keep small parts away from children before assembly. Always supervise children during use. Protective equipment, such as a helmet, should be worn. Do not use in traffic. Read all instructions before use.

- Ensure all bolts and nuts are securely tightened before each use.
- Check for any damaged or worn parts regularly. Replace immediately if found.
- This tricycle is intended for children aged 24 months to 4 years.
- Maximum weight capacity: Refer to product specifications.

WHAT'S IN THE BOX

Upon opening the package, verify that all components are present:

- Tricycle frame
- Wheels (front and rear)
- Handlebars
- Seat
- Pedals
- Hardware (nuts, bolts, washers)
- Assembly instructions

SETUP AND ASSEMBLY

Assembly typically takes 10-30 minutes. A hammer and wrench may be required. Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Rear Wheels:** Secure the rear wheels to the tricycle frame using the provided hardware. Ensure they are firmly attached and spin freely.
3. **Install Front Wheel and Fork:** Insert the front wheel assembly into the tricycle frame's fork. Attach the handlebars to the fork stem.
4. **Attach Pedals:** Screw the pedals into the front wheel crank arms. Note that pedals are often left (L) and right (R) specific.
5. **Mount Seat:** Secure the seat to the frame. Do not fully tighten yet, as it may need adjustment.
6. **Final Checks:** Review all connections to ensure they are tight and secure. Test the bell and steering.

OPERATING INSTRUCTIONS

Riding the Tricycle

The Radio Flyer Classic Tricycle is designed for easy and safe riding for toddlers.

- **Seating:** Ensure the child is seated comfortably with feet able to reach the pedals.
- **Pedaling:** Encourage the child to push the pedals in a circular motion to move forward.
- **Steering:** The chrome handlebars provide a controlled turning radius, preventing sharp turns and tipping. Guide the child's hands initially to help them learn steering.

- **Bell:** The tricycle features a working bell for added fun. Instruct the child on its proper use.



Image: A child confidently riding the Radio Flyer Classic Pink Tricycle, demonstrating proper posture and use.

Adjusting the Seat

The adjustable seat allows the tricycle to grow with your child, ensuring a comfortable and ergonomic fit.

1. Locate the seat adjustment mechanism, typically a bolt or lever beneath the seat.
2. Loosen the mechanism to allow the seat to slide forward or backward.
3. Adjust the seat position so the child's legs have a slight bend at the knee when the pedal is at its lowest point.
4. Securely tighten the adjustment mechanism.



Image: A close-up view of the adjustable seat feature, showing how the seat can be moved to accommodate a growing child.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your tricycle.

- **Cleaning:** Wipe down the tricycle with a damp cloth and mild soap. Avoid harsh chemicals. Dry thoroughly.
- **Inspections:** Periodically check all nuts, bolts, and screws for tightness. Tighten any loose fasteners.
- **Tires:** The rubber tires are durable. Inspect them for wear or damage.
- **Storage:** Store the tricycle indoors or in a covered area to protect it from weather elements.



Image: A detailed view of the rear wheel and durable rubber tire, highlighting components to inspect during maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle feels unstable or wobbly.	Loose fasteners (nuts, bolts).	Inspect and tighten all assembly fasteners.
Difficulty pedaling.	Seat position incorrect; pedals not properly installed.	Adjust seat to ensure child can comfortably reach pedals. Verify pedals are securely attached.

Problem	Possible Cause	Solution
Bell not ringing clearly.	Bell mechanism obstructed or damaged.	Check for obstructions. If damaged, contact customer service for replacement parts.

SPECIFICATIONS

Feature	Detail
Product Dimensions	26 x 22.1 x 21.3 inches
Item Weight	12.35 pounds
Model Number	34G
Recommended Age	24 months - 4 years
Wheel Size	10-inch front wheel
Frame Material	Steel

WARRANTY AND SUPPORT

For warranty information, replacement parts, or any questions regarding your Radio Flyer Classic Pink 10-inch Tricycle, please contact our customer service team.

Customer Service: 1 (800) 621-7613

Please have your model number (34G) available when contacting support.

© 2025 Radio Flyer. All rights reserved.

Related Documents - 34G



[Radio Flyer Pedal & Push Stroll 'N Trike Assembly and Safety Manual](#)

Detailed assembly instructions, safety guidelines, and maintenance tips for the Radio Flyer Pedal & Push Stroll 'N Trike, model #469/#469P. Covers parts identification, step-by-step assembly, age-based configurations, and important safety warnings for children aged 12 months to 5 years.

	<p>Radio Flyer Deluxe Steer & Stroll Trike Assembly Instructions and Safety Guide</p> <p>Comprehensive guide for assembling the Radio Flyer Deluxe Steer & Stroll Trike, including parts list, step-by-step instructions, safety warnings, and maintenance tips for children aged 2-5 years.</p>
	<p>Radio Flyer Red Rider Trike / Pink Rider Trike Assembly Instructions & Safety Guide</p> <p>Comprehensive assembly instructions, parts list, and safety guidelines for the Radio Flyer Red Rider Trike and Pink Rider Trike (Model #421/421P). Learn how to safely build and maintain your child's tricycle.</p>
	<p>Radio Flyer 3-in-1 Stroll 'N Trike Assembly and Usage Guide</p> <p>Comprehensive guide for assembling and using the Radio Flyer 3-in-1 Stroll 'N Trike, including safety warnings, part lists, and step-by-step instructions for various configurations.</p>
	<p>Radio Flyer 4-in-1 Stroll 'N Trike Assembly and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Radio Flyer 4-in-1 Stroll 'N Trike, including part lists, step-by-step instructions, and safety warnings for various age configurations.</p>
	<p>Radio Flyer 4-in-1 Stroll 'N Trike Assembly and Usage Guide</p> <p>Comprehensive assembly instructions and usage guide for the Radio Flyer 4-in-1 Stroll 'N Trike (Model #481/#481P), detailing part identification, step-by-step assembly, safety warnings, and maintenance.</p>