

[Manuals.plus](#) /

› [Cyber Acoustics](#) /

› Cyber Acoustics CA-2880 Portable USB Laptop Speaker User Manual

Cyber Acoustics CA-2880

Cyber Acoustics CA-2880 Portable USB Laptop Speaker User Manual

Model: CA-2880 | Brand: Cyber Acoustics

PRODUCT OVERVIEW

The Cyber Acoustics CA-2880 is a portable USB laptop speaker designed to enhance audio for computer users on the go. It provides improved sound quality for movies and music, powered conveniently via a USB connection and utilizing a 3.5mm audio input. Its slim design and clamping mechanism allow for easy attachment to most laptop or tablet screens, making it an ideal travel companion.

Key features include:

- USB powered for convenience.
- Simple controls: Power and Volume with LED indicator.
- Designed to project sound forward for a better stereo experience.
- Includes a protective travel case.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- Cyber Acoustics CA-2880 Portable USB Laptop Speaker
- Protective Travel Pouch

SETUP INSTRUCTIONS

Follow these steps to set up your Cyber Acoustics CA-2880 speaker:

1. **Connect Power:** Insert the USB connector from the speaker into an available USB port on your laptop, computer, or a USB power adapter. The speaker is powered via USB.
2. **Connect Audio:** Plug the 3.5mm audio cable from the speaker into the headphone jack or audio output port of your laptop, computer, or other audio device.
3. **Mounting (Optional):** The speaker can stand alone on a flat surface or be clamped to the top of most laptop,

notebook, or tablet screens. Gently open the clamp at the bottom of the speaker and position it securely on your screen. Ensure the speaker is stable before use.

4. **Power On:** Locate the power button/volume knob on the top of the speaker. Turn the knob clockwise to power on the speaker. A blue LED indicator will illuminate when the speaker is on.



Image: The Cyber Acoustics CA-2880 speaker, showing its main body and the integrated clamp mechanism. The speaker features a black mesh grille covering the front-firing drivers, with the Cyber Acoustics logo visible on the clamp. A blue LED indicator is visible on the top surface.

OPERATING INSTRUCTIONS

Using your CA-2880 speaker is straightforward:

- **Power On/Off:** Rotate the knob on the top of the speaker clockwise to turn it on, and counter-clockwise until it clicks to turn it off. The blue LED indicates power status.
- **Volume Control:** Once powered on, continue rotating the same knob clockwise to increase the volume and counter-clockwise to decrease it. Adjust to your preferred listening level.
- **Audio Source:** Ensure your connected device (laptop, tablet, etc.) has its volume turned up and is playing audio through its 3.5mm headphone jack.

MAINTENANCE

To ensure the longevity and optimal performance of your speaker:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use or during travel, store the speaker in its included protective travel pouch to prevent scratches and damage.
- **Handling:** Avoid dropping the speaker or exposing it to extreme temperatures or moisture.

TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No sound from speaker.	Ensure the speaker is powered on (blue LED illuminated). Check if the USB cable is securely connected to a powered USB port. Verify the 3.5mm audio cable is fully inserted into both the speaker and the audio source device. Increase the volume on both the speaker and your audio source device. Test with a different audio source or USB port.
Sound is distorted or unclear.	Reduce the volume on both the speaker and your audio source device. Ensure the 3.5mm audio cable is fully inserted and not damaged. Check for interference from other electronic devices.
Speaker does not power on.	Confirm the USB cable is connected to a functional USB port that provides power. Try a different USB port or a USB wall adapter. Ensure the power/volume knob is turned clockwise past the "off" click.

SPECIFICATIONS

Feature	Detail
Model Name	CA-2880
Speaker Type	Computer
Connectivity Technology	USB (for power), 3.5mm Audio Jack (for audio)
Audio Output Mode	Stereo
Speaker Maximum Output Power	5 Watts
Product Dimensions (LxWxH)	8.23" x 1.26" x 2.48" (20.9 cm x 3.2 cm x 6.3 cm)
Item Weight	9.6 ounces (0.27 kg)
Color	Black
Power Source	USB Powered
Control Method	Rotary Knob (Power/Volume)
Compatible Devices	Laptop, Personal Computer, USB capable tablets
Mounting Type	Freestanding, Clamp Mount

WARRANTY INFORMATION

The Cyber Acoustics CA-2880 Portable USB Laptop Speaker includes a **1-year hassle-free manufacturer warranty**. This limited warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the documentation included with your product or visit the official Cyber Acoustics website.

If you require further assistance or have questions not covered in this manual, please contact Cyber Acoustics customer support. Contact information can typically be found on the manufacturer's official website or on the product packaging. For the latest drivers, FAQs, and support resources, please visit the Cyber Acoustics support page online.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question