

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dirt Devil](#) /

› [Dirt Devil M339-1 Shark Steam Mop User Manual](#)

## Dirt Devil M339

# Dirt Devil M339-1 Shark Steam Mop User Manual

Model: M339

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Dirt Devil M339-1 Shark Steam Mop. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the steam mop in water or other liquids.
- Use only clean tap water in the water tank. Do not add cleaning solutions, perfumes, or other chemicals, as this can damage the appliance and void the warranty.
- Steam is hot. Avoid direct contact with steam. Keep hands, face, and body away from the steam nozzle.
- Do not use on unsealed wood floors, unglazed ceramic, or any surface that is sensitive to heat or moisture. Test on a small, inconspicuous area first.
- Keep out of reach of children and pets.
- Do not operate the appliance if the cord or plug is damaged.

## PACKAGE CONTENTS

Verify that all components are present in your package:

- Dirt Devil M339-1 Shark Steam Mop Unit
- 3-Piece Aluminum Handle with Grip
- Rectangular Mop Pad (rechargeable)
- Triangular Mop Pad (rechargeable)
- Water Filling Cup



Figure 1: Included accessories: rectangular mop pad, triangular mop pad, and water filling cup.

## SETUP

---


- 1. Assemble the Handle:** Connect the three sections of the aluminum handle firmly until they click into place. Ensure the grip is securely attached to the top section.
- 2. Attach Mop Pad:** Place the desired mop pad (rectangular or triangular) onto the cleaning head. The pad should adhere securely to the hook-and-loop fasteners on the bottom of the cleaning head.
- 3. Fill Water Tank:** Open the water tank cap. Use the provided filling cup to pour up to 0.45 liters of clean tap water into the tank. Do not overfill. Close the cap securely.



**Figure 2:** Filling the water tank with the provided cup.





 

**Figure 3:** The handle features a cable wrap for tidy storage.

## OPERATING INSTRUCTIONS

---

1. **Power On:** Plug the power cord into a suitable electrical outlet (220-240V, 50Hz). The appliance will begin to heat up.
2. **Heat-up Time:** The steam mop will be ready for use in approximately 30 seconds.
3. **Begin Cleaning:** Move the steam mop slowly and steadily across the hard floor surface. The steam will be released automatically, cleaning and sanitizing the floor.
4. **Pocket Pad System:** If one side of the mop pad becomes soiled, simply rotate the cleaning head 180 degrees to use the clean side of the pad. This allows for extended cleaning without changing pads.



**Figure 4:** The steam mop effectively cleans hard floor surfaces.



**Figure 5:** The triangular pad is ideal for reaching into corners.



**Figure 6:** The cleaning head can be rotated 180 degrees to use the other side of the mop pad.



Figure 7: Double-sided mop pad for extended cleaning.

The water tank provides approximately 10 minutes of continuous steam cleaning per fill.

## MAINTENANCE

- Empty Water Tank:** After each use, unplug the appliance and allow it to cool completely. Empty any remaining water from the tank.
- Clean Mop Pads:** The mop pads are machine washable. Wash them with similar colors and air dry. Do not use bleach or fabric softeners.
- Store Appliance:** Wrap the power cord around the designated cable wraps on the handle. Store the steam mop in a cool, dry place.
- Descaling (Optional):** If you notice a decrease in steam production over time, descaling may be necessary. Consult the manufacturer's website or customer support for specific descaling instructions.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam produced	Water tank is empty Appliance not plugged in Appliance not heated up	Refill water tank Plug into a working outlet Wait approximately 30 seconds for heat-up
Poor cleaning performance	Mop pad is too dirty Too fast movement Excessive mineral buildup	Rotate or replace mop pad Move slower over soiled areas Perform descaling procedure
Water leaking from tank	Water tank cap not closed properly Tank overfilled	Ensure cap is securely tightened Do not exceed the maximum fill line

## SPECIFICATIONS

---

- **Model Number:** M339
- **Voltage:** 220–240 V / 50 Hz
- **Max Power:** 1550 W
- **Steam Temperature:** Approximately 100 °C +/- 5 °C
- **Heat-up Time:** Approximately 30 seconds
- **Operating Time (per tank):** Approximately 10 minutes
- **Water Tank Volume:** 0.45 L
- **Cable Length:** 8 m
- **Weight:** 2.84 Kilograms

## WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Dirt Devil website. Specific details regarding spare parts availability are not provided in this manual.