

## Coby DP700WD

# Coby DP700WD 7-Inch Widescreen Digital Photo Frame User Manual

Model: DP700WD

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Coby DP700WD 7-Inch Widescreen Digital Photo Frame. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.



## PRODUCT FEATURES

---

- 7-inch widescreen TFT LCD color display
- Displays JPEG photo files
- Calendar and clock display functionality
- Supports SD/SDHC, MMC, and MS memory cards
- Full-size USB port for flash memory drives
- Wall-mountable design with a detachable stand
- Wooden design finish

## PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present:

- Coby DP700WD Digital Photo Frame
- AC Power Adapter
- Detachable Stand
- User Manual (this document)

## SETUP GUIDE

---

### 1. Attaching the Stand

1. Locate the detachable stand in the package.
2. Align the stand with the designated slot on the back of the digital photo frame.
3. Gently push the stand into the slot until it clicks securely into place. Ensure the frame is stable.

### 2. Power Connection

1. Connect the AC power adapter to the DC IN port on the back of the photo frame.
2. Plug the other end of the power adapter into a standard electrical outlet (AC 100-240V).
3. The frame should power on automatically or enter standby mode.

### 3. Inserting Memory Cards/USB Drives

1. Locate the memory card slots (SD/SDHC, MMC, MS) or the USB port on the side or back of the frame.
2. Insert your compatible memory card or USB flash drive containing JPEG photo files. Ensure it is inserted correctly.
3. The frame will typically detect the media automatically and begin displaying photos.

## OPERATING INSTRUCTIONS

---

### Basic Navigation

The photo frame is operated using the buttons located on the back or side of the unit. Common buttons include:

- **Power Button:** Turns the frame on/off or puts it into standby mode.
- **Menu Button:** Accesses the main menu for settings and options.
- **Arrow Buttons (Up/Down/Left/Right):** Navigate through menu options and photos.

- **Enter/OK Button:** Confirms selections.
- **Exit/Return Button:** Returns to the previous screen or exits the menu.

### Photo Playback

1. Once a memory card or USB drive is inserted, the frame should automatically start a slideshow of JPEG images.
2. To manually browse photos, press the **Menu** button and navigate to the "Photo" or "Browser" option.
3. Use the arrow buttons to select a specific photo and press **Enter/OK** to view it.

### Setting Clock and Calendar

1. Press the **Menu** button to access the main menu.
2. Navigate to "Settings" or "System Setup".
3. Select "Time" or "Date/Time" to adjust the current time and date.
4. Use the arrow buttons to change values and **Enter/OK** to confirm.
5. To display the calendar and clock, navigate to the "Calendar" option in the main menu.

### Slideshow Settings

You can customize your slideshow experience:

- Access the "Slideshow Settings" or "Display Settings" from the main menu.
- Options may include:
  - *Display Interval:* Adjust the time each photo is displayed.
  - *Transition Effect:* Choose different effects between photos (e.g., fade, wipe).
  - *Repeat Mode:* Set to repeat all photos or play once.

## MAINTENANCE

### Cleaning the Screen

- Always power off and unplug the photo frame before cleaning.
- Use a soft, lint-free cloth (e.g., microfiber cloth) to gently wipe the screen.
- For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for LCD displays. Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the screen surface.

### General Care

- Keep the photo frame away from direct sunlight, heat sources, and excessive humidity.
- Do not expose the device to water or other liquids.
- Avoid dropping or subjecting the frame to strong impacts.
- Ensure proper ventilation around the device to prevent overheating.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely plugged into the frame and a working electrical outlet. Try a different outlet.

Problem	Possible Cause	Solution
No photos displayed.	No memory card/USB drive inserted, unsupported file format, or corrupted files.	Insert a compatible memory card or USB drive. Ensure photos are in JPEG format. Check if files are corrupted on a computer.
Photos appear distorted or low quality.	Low resolution photos or incorrect aspect ratio settings.	
Buttons are unresponsive.	Temporary software glitch.	Unplug the power adapter, wait 10 seconds, then plug it back in to reset the device.

## Specifications

Feature	Detail
Model Number	DP700WD
Screen Size	7 Inches
Display Type	TFT LCD
Resolution	480x234
Aspect Ratio	Widescreen
Contrast Ratio	300:1
Brightness	200 cd/m2
Supported Memory	SD/SDHC, MMC, MS, USB Flash Drive
Supported File Format	JPEG
PC Interface	USB 2.0 Hi-speed
Power Input	AC 100-240V
Product Dimensions	9.2 x 1.6 x 6.6 inches
Item Weight	1.67 pounds

## Warranty Information

This product is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. Generally, the warranty covers defects in materials and workmanship under normal use.

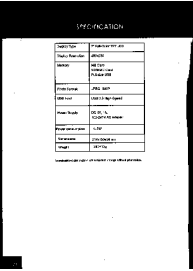



*Legal Disclaimer:* Except as expressly set forth in the item description, seller makes NO EXPRESS OR IMPLIED warranties of any kind whatsoever about this merchandise. Seller is not responsible for consequential, incidental or punitive damages of any kind whatsoever. Seller's liability is limited to the amount paid by the Buyer including shipping and handling charges.

## Customer Support

For further assistance, technical support, or warranty claims, please contact Coby customer service. Refer to the official Coby website or your product packaging for the most up-to-date contact information.

You can also visit the official Coby Store on Amazon for product information and support resources[Coby Official Store](#)

Related Documents

	<p><a href="#">Coby DP730 7-Inch Widescreen Digital Photo Frame Instruction Manual</a></p> <p>Detailed instruction manual for the Coby DP730 digital photo frame, covering its features, specifications, setup, operation, and troubleshooting for the 7-inch widescreen display.</p>
	<p><a href="#">Coby MP201 USB MP3 Player Instruction Manual</a></p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
	<p><a href="#">COBY TF DVD 3299 TFT LCD Widescreen Television Instruction Manual</a></p> <p>Comprehensive instruction manual for the COBY TF DVD 3299 TFT LCD Widescreen Television. Learn about setup, operation, safety, and troubleshooting for your COBY television with integrated DVD player.</p>
	<p><a href="#">Coby MP-610 MP3 &amp; Video Player Quick Setup Guide</a></p> <p>Quick setup guide for the Coby MP-610 MP3 &amp; Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>