

Vivitar VX014

Vivitar ViviCam VX014 Digital Camera User Manual

Model: VX014

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Vivitar ViviCam VX014 digital camera. Please read this manual thoroughly before using the camera and retain it for future reference.

WHAT'S IN THE BOX

Verify that all items are present before discarding the packaging materials:

- Vivitar ViviCam VX014 Digital Camera Body
- USB Cable
- Wrist Strap
- User Manual (this document)

PRODUCT FEATURES

The Vivitar ViviCam VX014 is a compact digital camera designed for ease of use, featuring:

- 10.1 Megapixel CMOS Sensor
- 4X Digital Zoom
- 1.8-inch LCD Flip Screen
- Face Detection
- Anti-Shake Functionality
- 1080p Video Capture Resolution

SETUP

1. Battery Installation

The Vivitar ViviCam VX014 requires three (3) AAA batteries (not included). Ensure correct polarity when inserting batteries.

1. Locate the battery compartment cover on the bottom or side of the camera.
2. Slide or lift the cover to open.
3. Insert three fresh AAA batteries, matching the (+) and (-) indicators inside the compartment.
4. Close the battery compartment cover securely.

2. Memory Card Installation

A memory card (SD card, not included) is essential for storing photos and videos. The camera has minimal internal memory.

1. Locate the memory card slot, typically near the battery compartment.
2. Insert a compatible SD card into the slot with the metal contacts facing the correct direction (refer to the diagram near the slot).
3. Push the card gently until it clicks into place.
4. To remove, push the card in again until it springs out slightly, then pull it out.

OPERATING THE CAMERA



Figure 1: Rear view of the Vivitar ViviCam VX014, highlighting the LCD screen and control layout.

1. Power On/Off

Press and hold the **Power button** (usually located on the top or back of the camera) to turn the camera on or off. The LCD screen will illuminate.

2. Taking Photos

1. Turn on the camera.
2. Frame your shot using the 1.8-inch LCD flip screen.
3. Press the **Shutter button** (typically on the top right) halfway down to focus, then press it fully to capture the image.
4. The camera features **Anti-Shake** to help reduce blur from camera movement.

3. Video Recording

1. Turn on the camera.
2. Switch to video mode using the **Mode button** (refer to camera controls).
3. Press the **Shutter button** to start recording. Press again to stop.
4. Videos are recorded in 1080p resolution.

4. Using Digital Zoom

The camera features 4X digital zoom. Use the **Zoom buttons** (often marked with 'W' for Wide and 'T' for Telephoto) to adjust the magnification. Note that digital zoom may reduce image quality compared to optical zoom.

5. Playback Mode

To view your captured photos and videos, switch to playback mode using the **Mode button**. Use the directional buttons to navigate through your media.

MAINTENANCE

1. Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- Do not use chemical cleaners or solvents.

2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if the camera will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your Vivitar ViviCam VX014, refer to the following common problems and solutions:

- **Camera does not power on:**
Ensure batteries are inserted correctly with proper polarity. Replace with fresh AAA batteries. Check if the battery compartment is securely closed.
- **Pictures are blurry or poor quality:**
Ensure adequate lighting. Hold the camera steady when taking a picture, utilizing the Anti-Shake feature. Clean the lens if it is smudged. For best results, avoid using maximum digital zoom in low light conditions.
- **Cannot save photos/videos to SD card or card is full:**
Ensure a compatible SD card is properly inserted. Format the SD card (this will erase all data, so back up important files first). Try a different SD card, as some cards may be incompatible or faulty.
- **Camera freezes or becomes unresponsive:**
Remove and reinsert the batteries to perform a hard reset. If the issue persists, ensure the memory card is not corrupted.
- **Computer does not recognize camera via USB:**
Ensure the camera is powered on and in the correct mode (e.g., Mass Storage mode, if available). Try a different USB port or cable.

SPECIFICATIONS

Feature	Specification
Brand	Vivitar
Model Name	VX014
Photo Sensor Technology	CMOS
Effective Still Resolution	10.1 Megapixels
Digital Zoom	4x

Screen Size	1.8 Inches
Video Capture Resolution	1080p
Image Stabilization	Electronic (Anti-Shake)
Focus Type	Auto Focus
Power Source	3 x AAA Batteries (not included)
Storage Media	SD Card (not included)
Color	Black
Item Weight	0.44 Pounds

WARRANTY INFORMATION

Vivitar products are covered by a limited warranty. For specific details regarding your product's warranty period and terms, please refer to the warranty card included with your purchase or visit the official Vivitar website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Vivitar Customer Support. Contact information can typically be found on the Vivitar official website or on the product packaging.

Vivitar Official Website: www.vivitar.com

