

Bulova B7466

Bulova Dalton Chiming Pendulum Table Clock Instruction Manual

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the **Bulova Dalton Chiming Pendulum Table Clock**, model B7466. This elegant timepiece is designed to enhance any living space with its classic aesthetic and hourly chimes.

The Bulova Dalton Chiming Pendulum Table Clock features:

- Solid wood and wood veneer case with a rich walnut finish.
- Polished gold-tone bezel surrounding the clock face.
- Westminster melody that plays on the hour.
- Spun gold-finish pendulum visible through a clear protective lens.
- Compact dimensions: Height 9.5 inches, Width 6.25 inches, Depth 3.75 inches.



Figure 1: Front view of the Bulova Dalton Chiming Pendulum Table Clock, showcasing its walnut finish and gold-tone accents.

2. SETUP

2.1. Unpacking and Placement

Carefully remove the clock from its packaging. Place the clock on a stable, level surface. Ensure there is adequate space around the clock for proper air circulation and to prevent accidental knocking.

2.2. Battery Installation

The clock requires one (1) AA battery, which is included. Locate the battery compartment, typically on the back of the clock. Insert the AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings in the compartment.



Figure 2: Side view of the clock, showing the detailed wood craftsmanship. The battery compartment is located on the back panel.

2.3. Setting the Time

To set the time, gently turn the minute hand clockwise until the desired time is displayed. **Do not turn the hands counter-clockwise as this may damage the movement.**

2.4. Starting the Pendulum

Once the battery is installed and the time is set, gently swing the pendulum from side to side to initiate its movement. The pendulum should swing freely and consistently.

3. OPERATING INSTRUCTIONS

3.1. Chime Functionality

The Bulova Dalton clock features a Westminster melody that chimes on the hour. The number of chimes corresponds to the hour. For example, at 3 o'clock, it will chime three times.

3.2. Automatic Night Shut-Off

The clock is equipped with an automatic night shut-off feature. The chimes will automatically cease between 10:00 PM and 5:00 AM to ensure undisturbed sleep, resuming automatically in the morning.



Figure 3: Close-up view of the clock's dial and pendulum, highlighting the gold-tone bezel and Roman numerals.

4. MAINTENANCE

4.1. Cleaning

To clean the clock, gently wipe the wood case with a soft, dry cloth. For the glass and metal components, use a soft, lint-free cloth. Avoid using abrasive cleaners, solvents, or polishes that may damage the finish.

4.2. Battery Replacement

Replace the AA battery annually or when the clock begins to lose time or the chimes weaken. Always use a fresh, high-quality alkaline battery.

4.3. Care for Wood Finish

To maintain the beauty of the walnut finish, keep the clock away from direct sunlight, extreme temperatures, and high humidity. Periodically, a furniture polish designed for wood may be used, following the product's instructions.

5. TROUBLESHOOTING

5.1. Clock Not Keeping Accurate Time

- **Check Battery:** Ensure the battery is correctly installed and has sufficient power. Replace if necessary.
- **Pendulum Movement:** Verify the pendulum is swinging freely and consistently. If it stops, gently restart it.

5.2. Chimes Not Functioning Correctly

- **Time Synchronization:** Ensure the clock's time is correctly synchronized with the chime mechanism. Some users have reported initial difficulty with chime synchronization; refer to the specific instructions provided with your clock for detailed steps on adjusting the chime count if it does not match the hour.
- **Night Shut-Off:** Confirm the current time is outside the automatic night shut-off period (10:00 PM to 5:00 AM).
- **Battery Level:** Low battery power can affect chime performance. Replace the battery.

5.3. Pendulum Not Swinging

- **Level Surface:** Ensure the clock is placed on a perfectly level surface.
- **Obstructions:** Check for any obstructions preventing the pendulum from swinging freely.
- **Gentle Start:** Give the pendulum a gentle push to start its motion.

6. SPECIFICATIONS

Feature	Detail
Brand	Bulova
Model Number	B7466
Color	Walnut Brown
Display Type	Analog
Style	Traditional
Special Feature	Pendulum
Product Dimensions (W x H x D)	6.25" x 9.5" x 3.75"
Power Source	Battery Powered
Material	Wood
Frame Material	Wood
Batteries Required	1 AA (included)
Mounting Type	Tabletop
Item Weight	2 Pounds

Watch Movement	Quartz
Operation Mode	Mechanical
Clock Form	Pendulum

7. WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not provided within this manual. For warranty claims, technical support, or further assistance, please refer to the product packaging, the official Bulova website, or contact the retailer from whom the product was purchased.

No official product videos from the seller were available for inclusion in this manual.