

[Manuals.plus](#) /

> [Dritz](#) /

> Dritz Quick Turn Fabric Tube Turners Model 796 Instruction Manual

Dritz 796

Dritz Quick Turn Fabric Tube Turners Model 796 Instruction Manual

Model: 796

PRODUCT OVERVIEW

The Dritz Quick Turn Fabric Tube Turners are a set of three tools designed to simplify the process of turning fabric tubes right side out. This set includes plastic cylinders and corresponding wooden rods in assorted sizes to accommodate various fabric tube widths, making it easier to create straps, loops, and other fabric components for sewing and crafting projects.





Image: The Dritz Quick Turn Fabric Tube Turners set, featuring three purple plastic cylinders with wooden rods, illustrating the different sizes included in the package.

COMPONENTS

The Dritz Quick Turn Fabric Tube Turners set includes three distinct sizes:

- **Small:** 3/16 inch (0.47 cm) cylinder, suitable for fabric tubes measuring 3/8 inch to 5/8 inch (0.95 cm to 1.58 cm) wide.
- **Medium:** 3/8 inch (0.95 cm) cylinder, suitable for fabric tubes measuring 3/4 inch to 1 inch (1.9 cm to 2.54 cm) wide.
- **Large:** 1/2 inch (1.27 cm) cylinder, suitable for fabric tubes measuring 1 inch (2.54 cm) or larger in width.

SETUP

The Dritz Quick Turn Fabric Tube Turners require no assembly. Before use, select the appropriate size turner that corresponds to the width of the fabric tube you intend to turn. Ensure the fabric tube is sewn and trimmed to the desired seam allowance.

OPERATING INSTRUCTIONS

Follow these steps to effectively turn fabric tubes using your Dritz Quick Turn Fabric Tube Turners:

1. **Prepare the Fabric Tube:** Sew your fabric tube with the right sides together, leaving one end open. Trim the seam allowance to approximately 1/8 inch to 1/4 inch (0.3 cm to 0.6 cm) to reduce bulk.
2. **Insert the Cylinder:** Insert the plastic cylinder of the Quick Turn tool into the open end of the fabric tube, pushing it through until the end of the tube is gathered around the tip of the cylinder.
3. **Secure the Fabric:** Gently pull the fabric tube over the end of the plastic cylinder, ensuring the raw edge is securely held by the cylinder's tip.
4. **Insert the Rod:** Take the corresponding wooden rod and insert it into the other end of the plastic cylinder.
5. **Push and Turn:** While holding the fabric tube firmly at the base of the cylinder, use the wooden rod to push the fabric through the cylinder. The fabric will turn right side out as it emerges from the other end of the cylinder.
6. **Remove and Adjust:** Once the fabric tube is fully turned, carefully remove the Quick Turn tool. Gently pull and smooth the fabric to ensure evenness.

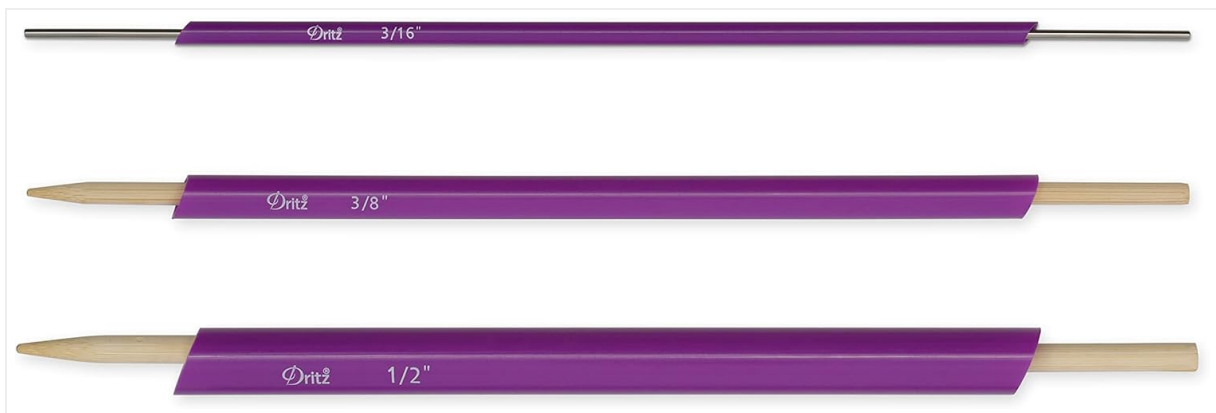


Image: A close-up view of the Dritz Quick Turn tool in action, showing how the wooden rod is used to push a fabric tube through the plastic cylinder, effectively turning it right side out.

MAINTENANCE

To ensure the longevity and proper function of your Dritz Quick Turn Fabric Tube Turners, follow these maintenance guidelines:

- **Cleaning:** The tools are designed for hand washing only. Clean the plastic cylinders and wooden rods with mild soap and water if they become soiled with fabric fibers or other residues.
- **Drying:** After washing, allow all components to air dry completely before storing them to prevent moisture buildup.
- **Storage:** Store the turners in a dry place, away from direct sunlight and extreme temperatures, to maintain their material integrity.

TROUBLESHOOTING

If you encounter issues while using the Dritz Quick Turn Fabric Tube Turners, consider the following:

- **Fabric Not Turning:** Ensure you are using the correct size turner for your fabric tube. If the tube is too narrow for the chosen cylinder, it may get stuck. Also, check that your seam allowance is trimmed sufficiently to reduce bulk.
- **Difficulty Pushing:** If the fabric is difficult to push through, ensure the fabric is not twisted inside the cylinder. A slightly wider seam allowance might also cause resistance; try trimming it further.
- **Damaged Tool:** Inspect the plastic cylinders and wooden rods for any cracks or splinters. Discontinue use if damage is present to avoid injury or damage to fabric.

SPECIFICATIONS

Feature	Detail
Model Number	796
UPC	072879261929
Product Dimensions	12.75 x 2.88 x 0.63 inches (packaged)
Item Weight	0.32 ounces (9.07 g)
Material	Plastic cylinders, Wooden rods
Color	Purple
Care Instructions	Hand Wash Only

WARRANTY INFORMATION

No explicit warranty information is provided with this product. For details regarding potential warranties or guarantees, please refer to the product packaging or contact Dritz customer service directly.

SUPPORT INFORMATION

For further assistance, questions, or concerns regarding your Dritz Quick Turn Fabric Tube Turners, please contact the manufacturer, Dritz, through their official website or customer service channels. Please have your product model number (796) ready when contacting support.

PRODUCT VIDEOS

No official seller videos with creator type information were available for embedding based on the provided data.