

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Ozeri](#) /

> [Ozeri Touch Professional Digital Kitchen Scale \(12 lbs Edition\) Instruction Manual](#)

## Ozeri ZK13

# Ozeri Touch Professional Digital Kitchen Scale

MODEL: ZK13 (12 LBS EDITION)

Your guide to precise kitchen measurements.

## Introduction

The Ozeri Touch Professional Digital Kitchen Scale is designed for culinary precision, featuring advanced touch-sensitive buttons, a durable tempered glass surface, and high-precision GFX sensors. This manual provides essential information for setting up, operating, and maintaining your scale to ensure accurate and consistent results.

## Safety Information

- Do not immerse the scale in water or other liquids. Clean with a damp cloth.
- Place the scale on a flat, stable surface for accurate readings.
- Avoid dropping the scale or subjecting it to strong impacts, as this may damage the sensors.
- Do not exceed the maximum weight capacity of 12 lbs (5750 grams).
- Keep batteries out of reach of children. Dispose of used batteries properly.

## Package Contents

- Ozeri Touch Professional Digital Kitchen Scale
- 2 x Lithium Batteries
- Instruction Manual

## Setup

1. **Battery Installation:** Locate the easy-access battery compartment on the underside of the scale. Open the compartment and insert the 2 provided Lithium batteries, ensuring correct polarity (+/-). Close the compartment securely.
2. **Placement:** Place the scale on a hard, flat, and level surface to ensure accurate measurements. Avoid soft or uneven surfaces.



**Figure 1:** Ozeri Touch Professional Digital Kitchen Scale in Stylish Black. This image shows the sleek, black tempered glass surface of the scale.

## Operating Instructions

- Turning On/Off:** To turn the scale on, gently press the **TARE** button. The LCD screen will illuminate. The scale automatically powers off after 2 minutes of inactivity to conserve battery life. To manually turn off the scale, press and hold the **TARE** button for a few seconds.
- Changing Units:** Press the **UNIT** button to cycle through the available measurement units: pounds and ounces (lb/oz), kilograms and grams (kg/g), fluid ounces (fl.oz.), and milliliters (ml). The selected unit will be displayed on the LCD screen.
- Measuring Ingredients:** Place the item directly onto the tempered glass surface of the scale. The weight will be displayed on the bright LCD screen.
- Tare Function:** The Tare function allows you to weigh ingredients in a container by subtracting the container's weight. Place an empty container on the scale and press the **TARE** button. The display will reset to zero. You can then add ingredients to the container, and the scale will display only the net weight of the ingredients.



**Figure 2:** Close-up view of the scale's illuminated LCD display showing '0:0.0' and the touch-sensitive UNIT and TARE buttons.



**Figure 3:** The scale accurately weighing fresh strawberries, demonstrating its use for direct ingredient measurement.



**Figure 4:** Raspberries in a clear bowl being weighed on the scale, illustrating the tare function for measuring ingredients in containers.

## Maintenance & Care

---

- **Cleaning:** The tempered glass surface is 4 times stronger than normal glass and is easy to clean. Wipe the scale with a damp cloth and mild detergent. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid extreme temperatures or humidity.
- **Battery Replacement:** When the Low Battery indicator appears on the LCD screen, replace both Lithium batteries promptly.

## Troubleshooting

---

-