

[Manuals.plus](#) /

› [Invicta](#) /

› Invicta Pro Diver Watch Model 6981 User Manual

Invicta 6981

Invicta Pro Diver Watch User Manual

Model: 6981

1. INTRODUCTION

This manual provides detailed instructions for the Invicta Men's Pro Diver Stainless Steel Quartz Watch, Model 6981. Please read this manual thoroughly to understand the features and proper operation of your timepiece. This watch features a durable stainless steel case, a precise Japanese quartz movement, and is designed for water resistance.



Front view of the Invicta Pro Diver Watch, showcasing the black dial, gold-tone case, and black silicone band.

2. COMPONENTS OVERVIEW

Familiarize yourself with the key components of your Invicta Pro Diver watch:

- **Crown:** Used for setting time and date.
- **Pushers:** Operate the chronograph functions.
- **Unidirectional Bezel:** Rotates in one direction, useful for tracking elapsed time.
- **Subdials:** Display chronograph minutes, seconds, and 24-hour time.
- **Flame Fusion Crystal:** Provides enhanced scratch resistance.



Visual guide to the watch's crown, bezel, case size, and crystal type.

3. SETUP AND INITIAL OPERATION

3.1 Setting the Time

1. Pull the crown out to the **second click** position.
2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to the normal position to start the watch.

3.2 Setting the Date

1. Pull the crown out to the **first click** position.
2. Rotate the crown (usually counter-clockwise) to set the date.
3. Push the crown back in to the normal position.

3.3 Chronograph Hand Reset

If the chronograph hands (seconds, minutes, 24-hour) are not aligned to the zero position after resetting, follow these steps:

1. Pull the crown out to the **second click** position.
2. Press the upper pusher (A) to adjust the chronograph second hand to the zero position.

3. Press the lower pusher (B) to adjust the chronograph minute and 24-hour hands to the zero position.
4. Once all hands are aligned, push the crown back in to the normal position.

4. OPERATING THE WATCH

4.1 Using the Chronograph

The chronograph function allows for precise timing of events.

- **Start/Stop:** Press the upper pusher (A) to start the chronograph. Press it again to stop.
- **Reset:** While the chronograph is stopped, press the lower pusher (B) to reset all chronograph hands to zero.



Illustration of the watch's timekeeping and date display features.

4.2 Using the Unidirectional Bezel

The rotating bezel can be used to measure elapsed time. Rotate the bezel so that the zero marker aligns with the minute hand. As time passes, the minute hand will indicate the elapsed time on the bezel's scale.

4.3 Water Resistance

This watch is water resistant to 100 meters (330 feet). It is suitable for recreational surfing, swimming, snorkeling, sailing, and water sports. It is **not suitable for diving**. Ensure the crown is fully pushed in before any water exposure.



Water resistance guidelines for 100M watches, indicating suitability for various water activities.

5. MAINTENANCE AND CARE

5.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and band regularly with a soft, dry cloth. For the silicone band, a mild soap and water solution can be used, followed by thorough rinsing and drying.

5.2 Water Resistance Care

Avoid exposing the watch to hot water or steam, as this can compromise the water-resistant seals. Always ensure the crown is fully pushed in before the watch comes into contact with water.

5.3 Battery Replacement

The watch is powered by an SR920SW battery. When the watch stops or the second hand begins to jump erratically, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Crown not pushed in; Battery depleted	Push crown in fully; Replace battery (professional service recommended)
Chronograph hands not resetting to zero	Hands out of alignment	Perform chronograph hand reset procedure (Section 3.3)
Date not changing	Incorrect date setting; Time is between 9 PM and 3 AM	Set date during daytime hours; Re-set date (Section 3.2)

7. SPECIFICATIONS

Feature	Detail
Model Number	6981
Case Diameter	48mm
Case Thickness	16.8mm
Movement	Japanese Quartz, VD53 Caliber
Crystal Type	Flame Fusion
Water Resistance	100 meters (330 feet)
Band Material	Gold tone stainless steel and black silicone
Band Length	240mm
Band Width	26mm
Watch Weight	190 grams (6.7 ounces)
Battery Type	SR920SW (included)
ASIN	B003MYYJD0

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Invicta website. Keep your proof of purchase for any warranty claims.

A digital version of this user manual may be available for download. For additional support, please contact Invicta customer service.

You can also refer to the official user manual PDF: [Invicta User Manual \(PDF\)](#)