

## Miele W 1914 WPS

# Miele W 1914 WPS Washing Machine User Manual

Model: W 1914 WPS

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Miele W 1914 WPS Washing Machine. Please read these instructions carefully before using the appliance for the first time to prevent accidents and ensure optimal performance. Keep this manual in a safe place for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to reduce the risk of fire, electric shock, injury, or damage to the appliance.

- **General Safety:** This appliance is intended for domestic use only. Do not allow children to play with or operate the machine. Supervise children when the appliance is in use.
- **Electrical Safety:** Ensure the appliance is properly grounded. Do not operate the machine with a damaged power cord or plug. Disconnect the power supply before any cleaning or maintenance.
- **Water Safety:** Ensure water inlet and drain hoses are securely connected to prevent leaks. Do not use kinked or damaged hoses.
- **Child Lock:** The Miele W 1914 WPS is equipped with a child lock feature to prevent unintended operation. Refer to the 'Operating Instructions' section for activation and deactivation.

## 3. INSTALLATION AND SETUP

### 3.1 Unpacking

Carefully remove all packaging materials and transport bolts from the rear of the machine. Retain packaging for potential future transport. Inspect the appliance for any signs of damage.

### 3.2 Location

Place the washing machine on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and maintenance. Avoid direct sunlight or extreme temperatures.

### **3.3 Water Connection**

Connect the cold water inlet hose to a suitable cold water tap. Ensure the connection is tight to prevent leaks. Do not overtighten. Use only new hoses supplied with the appliance.

### **3.4 Drain Connection**

Securely attach the drain hose to a standpipe or laundry tub, ensuring it is not kinked or blocked. The end of the drain hose must be positioned at a height between 60 cm and 100 cm from the floor.

### **3.5 Electrical Connection**

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance's rating plate. Do not use extension cords or adapters.



Figure 1: Front view of the Miele W 1914 WPS Washing Machine, showing the control panel, detergent drawer, and front-loading door.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The control panel features a program selector dial, a display screen, and various buttons for adjusting settings such as temperature, spin speed, and additional options. Familiarize yourself with the layout before operation.

## 4.2 Loading Laundry

Open the washing machine door. Load laundry loosely into the drum, ensuring not to overload the machine. Close the door firmly until it clicks shut.



Figure 2: Inside view of the washing machine drum, illustrating the honeycomb structure designed for gentle fabric care, with laundry partially loaded.

## 4.3 Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments according to the detergent manufacturer's instructions and the load size.

## 4.4 Selecting a Wash Program

Turn the program selector dial to choose the desired wash program (e.g., Cotton, Synthetics, Delicates). The selected program will be indicated on the display.

## 4.5 Adjusting Settings

Use the option buttons to adjust temperature, spin speed, or select additional functions such as 'Pre-wash' or 'Extra Rinse', if available for the chosen program.

### 4.6 Starting a Wash Cycle

Press the 'Start/Stop' button to begin the wash cycle. The machine will automatically proceed through the selected program.

### 4.7 Child Lock Feature

To activate the child lock, press and hold the designated button (refer to your control panel diagram) for a few seconds until the child lock indicator appears. To deactivate, repeat the process.

## 5. CARE AND MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

### 5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 5.2 Cleaning the Detergent Dispenser

Periodically remove and rinse the detergent dispenser drawer under running water to remove any detergent residue. Dry thoroughly before reinserting.

### 5.3 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a drum cleaning agent) periodically to prevent odors and maintain drum hygiene.

### 5.4 Cleaning the Drain Filter

Locate the drain filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any water. Unscrew the filter, clean it of lint and debris, and then securely re-screw it.

## 6. TROUBLESHOOTING GUIDE

Before contacting customer service, consult this guide for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; child lock activated.	Check power connection; ensure door is latched; deactivate child lock.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten drain hose; clean drain filter.
Excessive vibration	Machine not level; transport bolts not removed; uneven load.	Adjust leveling feet; ensure transport bolts are removed; redistribute laundry.
Error code displayed	Specific malfunction.	Refer to the full user manual for specific error code meanings or contact customer support.

 
 
 
## 7. TECHNICAL SPECIFICATIONS


- Model:** Miele W 1914 WPS
- Type:** Front Loader Washing Machine
- Dimensions (H x W x D):** 85 cm x 59.5 cm x 65.6 cm
- Weight:** 99 kg
- Capacity:** 7 Kilogram
- Maximum Spin Speed:** 1400 RPM
- Special Features:** Child Lock
- Color:** White

## 8. WARRANTY AND CUSTOMER SUPPORT

Your Miele W 1914 WPS Washing Machine comes with a manufacturer's warranty. Please refer to the separate warranty document provided with your purchase for detailed terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Miele customer support through their official website or the contact information provided in your warranty documentation.


### Related Documents - W 1914 WPS

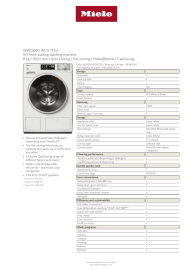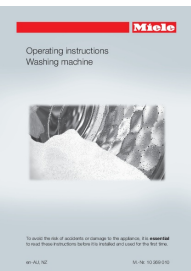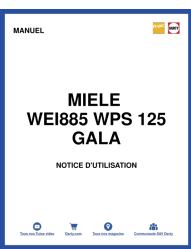	<p><a href="#">Miele WWD660 WCS TDos W1 Washing Machine: Features, Specs, and Dimensions</a></p> <p>Detailed product information for the Miele WWD660 WCS TDos W1 front-loading washing machine. Explore features like TwinDos, CapDosing, Pre-Ironing, Miele@home connectivity, and technical specifications including dimensions and energy efficiency.</p>
	<p><a href="#">Miele WKH 130 WPS Washing Machine Operating Instructions</a></p> <p>Comprehensive operating instructions for the Miele WKH 130 WPS washing machine, covering installation, usage, safety, maintenance, and troubleshooting for optimal performance.</p>
	<p><a href="#">Miele WEI885 WPS 125 GALA : Mode d'emploi complet pour votre lave-linge</a></p> <p>Découvrez le manuel d'utilisation complet pour le lave-linge Miele modèle WEI885 WPS 125 GALA. Guide détaillé sur l'installation, l'utilisation, l'entretien et les fonctions pour une performance optimale.</p>

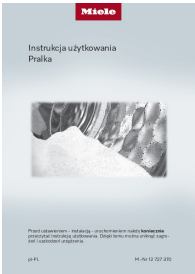 


[Instrukcja użytkownika pralki Miele WSG 883](#)

 Szczegółowa instrukcja obsługi pralki Miele WSG 883 z funkcjami TwinDos, SmartStart i MobileStart. Dowiedz się, jak prawidłowo zainstalować, użytkować i konserwować urządzenie.

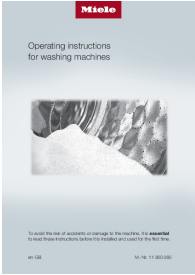

[Miele Washing Machine Operating Instructions](#)

 Comprehensive operating instructions for Miele washing machines, covering installation, usage, maintenance, and troubleshooting. Includes safety guidelines and program details.

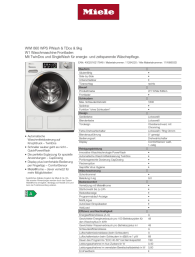

[Miele WWI 860 WPS PWash & TDos & 9kg W1 Front Loader Washing Machine: Features & Specifications](#)

Discover the Miele WWI 860 WPS PWash & TDos & 9kg W1 front-loader washing machine. Featuring TwinDos, SingleWash, PowerWash, and Miele@home connectivity for efficient and intelligent laundry care. Explore its technical specifications, energy efficiency, and dimensions.