

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Miele](#) /

› Miele G 4600 SC Freestanding Dishwasher User Manual

Miele G 4600 SC

Miele G 4600 SC Freestanding Dishwasher User Manual

Model: G 4600 SC

1. INTRODUCTION

Thank you for choosing a Miele G 4600 SC freestanding dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before first use to prevent damage and ensure optimal performance. Your Miele G 4600 SC dishwasher features a 9 place setting capacity, a low noise level of 45 dB, and advanced functions such as the **Turbo function** for faster cycles and **ComfortClose** for smooth door operation. It also includes a practical and space-saving cutlery drawer and a height-adjustable upper basket.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- **Electrical Safety:** Ensure the dishwasher is correctly earthed and connected to a suitable power supply. Do not use extension cords.
- **Water Safety:** Connect the water inlet and outlet hoses securely to prevent leaks. The appliance features a **Waterproof System** for protection against water damage.
- **Child Safety:** This appliance is equipped with a **Child Safety Lock**. Activate it to prevent unintended operation by children. Keep detergents and rinse aid out of reach of children.
- **Appliance Use:** Use the dishwasher only for its intended purpose, which is washing household dishes. Do not sit or stand on the open door.
- **Maintenance:** Disconnect the appliance from the power supply before any cleaning or maintenance.

3. SETUP AND INSTALLATION

3.1 Unpacking and Placement

Carefully remove all packaging materials. Position the freestanding dishwasher on a level, stable surface.

Ensure there is adequate space for the door to open fully and for proper ventilation.

3.2 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4 inch thread. Ensure the connection is tight to prevent leaks. The drain hose should be connected to a suitable drain pipe, ensuring it is not kinked or obstructed.

3.3 Electrical Connection

Connect the power plug to a properly installed and earthed socket. Refer to the rating plate for voltage and frequency requirements.

3.4 Initial Setup

Before first use, fill the salt reservoir with dishwasher salt and the rinse aid dispenser with rinse aid. The appliance will indicate when these need refilling via the control panel indicators.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel allows you to select programs, set options, and monitor the dishwasher's status. Refer to the image below for a visual guide to the control panel elements.



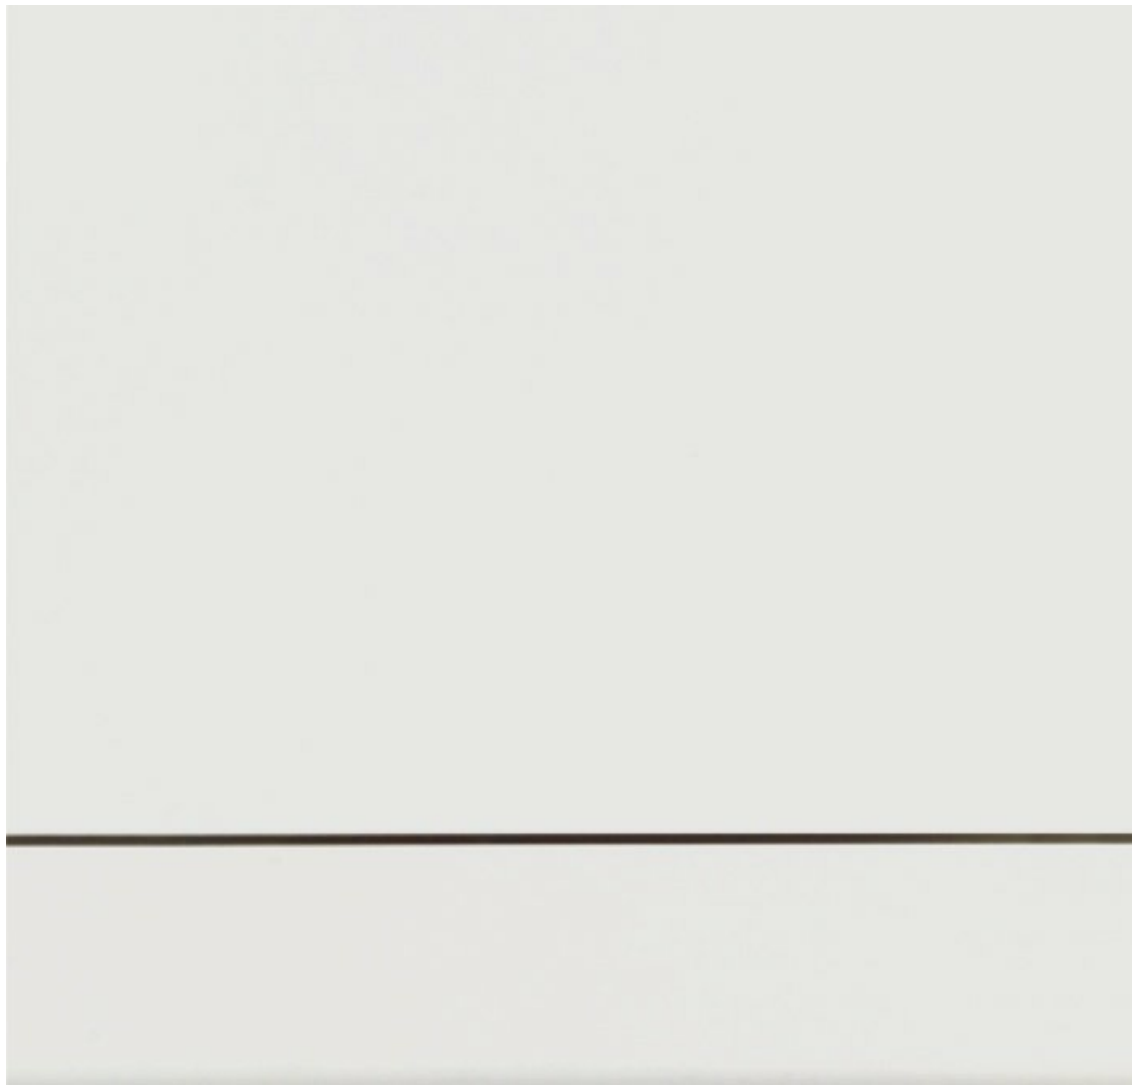


Figure 1: Miele G 4600 SC Dishwasher Control Panel. This image displays the front control panel of the Miele G 4600 SC dishwasher, featuring program selection buttons, a digital display for remaining time and delay start, and indicator lights for various functions like salt, rinse aid, and water supply/drain.

- **Power Button (ⓘ):** Turns the dishwasher on or off.
- **Program Selection Buttons:** Select from programs such as *Automatic*, *Schnell 40°C* (Quick 40°C), *Fein* (Delicate), *ECO*, *Leicht 50°C* (Light 50°C), and *Intensiv 75°C* (Intensive 75°C).
- **Display (Restzeit / h.min):** Shows the remaining program time or the delay start time.
- **Function Buttons:**
 - **Programm:** Cycles through available wash programs.
 - **Turbo:** Activates the Turbo function to shorten program duration by up to 50 minutes without compromising cleaning or drying results.
 - **Startvorauswahl (Delay Start):** Allows you to program the start of a cycle up to 24 hours in advance.
 - **Start/Stop:** Starts or pauses the selected program.
- **Indicator Lights:**
 - **Spülen (Rinse), Trocknen (Dry), Ende (End):** Indicate the current phase of the wash cycle.
 - **Zulauf / Ablauf (Water Inlet / Drain):** Illuminates if there is an issue with water supply or drainage.
 - **Klarspüler (Rinse Aid):** Illuminates when rinse aid needs refilling.
 - **Salz (Salt):** Illuminates when dishwasher salt needs refilling.

4.2 Loading the Dishwasher

Proper loading ensures optimal cleaning results and efficient use of water and energy.

- **Cutlery:** Utilize the **Original Miele cutlery drawer** at the top for individual placement of knives, forks, and spoons.
- **Upper Basket:** The **height-adjustable upper basket** can be repositioned to accommodate taller items below. It includes 1 foldable cup holder.
- **Lower Basket:** The lower basket features foldable/removable spike inserts, a removable comfort insert with a cup cushion, and a bottle holder for versatile loading of plates, bowls, and larger items.
- **Capacity:** The dishwasher is designed for **9 place settings**.

4.3 Adding Detergent, Salt, and Rinse Aid

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser before each cycle.
- **Dishwasher Salt:** Refill the salt reservoir when the 'Salz' indicator light illuminates. This helps soften hard water and prevent limescale.
- **Rinse Aid:** Refill the rinse aid dispenser when the 'Klarspüler' indicator light illuminates. Rinse aid ensures streak-free drying results.

4.4 Selecting and Starting a Program

1. Load the dishwasher and add detergent, salt, and rinse aid as needed.
2. Press the Power button (ⓘ) to turn on the dishwasher.
3. Use the 'Programm' button to select your desired wash cycle. Available programs include:
 - **ECO:** Energy and water-efficient program.
 - **Automatic:** Sensor-controlled program for mixed loads.
 - **Schnell 40°C:** Quick wash for lightly soiled items.
 - **Fein:** Gentle program for delicate items and glasses (Perfect GlassCare).
 - **Leicht 50°C:** Light wash for normal soiled items.
 - **Intensiv 75°C:** Powerful program for heavily soiled pots and pans.
4. Optionally, press the 'Turbo' button to shorten the program duration or 'Startvorwahl' to set a delay start time.
5. Press the 'Start/Stop' button to begin the program. The remaining time will be displayed.

4.5 Ending a Program

Once the program is complete, the 'Ende' indicator will illuminate. The **ComfortClose** door mechanism allows the door to remain in any desired position, making unloading easier. Open the door slightly to allow steam to escape before unloading.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your Miele dishwasher.

- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior Cleaning:** Periodically clean the interior with a dishwasher cleaner.
- **Filter System:** Regularly check and clean the filter system at the bottom of the wash cabinet to remove food particles.
- **Spray Arms:** Ensure the spray arm nozzles are not blocked. Remove and clean if necessary.

6. TROUBLESHOOTING

If you encounter an issue with your dishwasher, consult the following common problems before contacting service.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start/Stop.
'Zulauf / Ablauf' indicator lights up	Water supply interrupted, drain hose kinked or blocked.	Check water tap, straighten drain hose, clean filter.
'Salz' indicator lights up	Salt reservoir is empty.	Refill dishwasher salt.
'Klarspüler' indicator lights up	Rinse aid dispenser is empty.	Refill rinse aid.
Poor cleaning results	Improper loading, insufficient detergent, blocked spray arms, dirty filters.	Reload dishes correctly, add more detergent, clean spray arms and filters.

If the problem persists after attempting these solutions, please contact Miele customer service.

7. SPECIFICATIONS

- **Model:** Miele G 4600 SC
- **Type:** Freestanding Dishwasher
- **Dimensions (W x D x H):** 44.8 x 60 x 84.5 cm
- **Weight:** 42.2 kg
- **Capacity:** 9 Place Settings
- **Noise Level:** 45 Decibels (dB)
- **Energy Efficiency Class:** A
- **Annual Energy Consumption:** 250 kWh (based on 280 standard wash cycles)
- **Annual Water Consumption:** 2520 Liters (based on 280 standard wash cycles)
- **Drying Efficiency Class:** A
- **Special Features:** Child Safety Lock, ComfortClose, Turbo Function, ThermoSpar, Perfect GlassCare, Autosensor, Waterproof System.
- **Color:** Brilliant White
- **Material:** Stainless Steel

8. WARRANTY AND SUPPORT

Your Miele G 4600 SC dishwasher has been **tested for a lifespan of 20 years**, reflecting Miele's commitment to quality and durability.

For warranty information, service requests, or technical support, please refer to the warranty card included with your appliance or visit the official Miele website for your region. When contacting support, please have your model number (G 4600 SC) and serial number ready.

© 2023 Miele. All rights reserved.