

## Doro 380102

# Doro PhoneEasy 105wr Cordless Phone Instruction Manual

Model: 380102

## INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Doro PhoneEasy 105wr cordless phone. Please read these instructions carefully before using the phone and retain them for future reference.

## PACKAGE CONTENTS

---

Before you begin, ensure all items are present in the package:

- Doro PhoneEasy 105wr Handset
- Base Unit
- Power Adapter for Base Unit
- Telephone Line Cord
- Rechargeable Batteries (NiMH)
- User Manual (this document)

## SETUP

---

### 1. Connecting the Base Unit

1. **Connect the Power Adapter:** Plug the small end of the power adapter into the DC IN socket on the back of the base unit. Plug the other end into a wall power outlet.
2. **Connect the Telephone Line Cord:** Plug one end of the telephone line cord into the LINE socket on the back of the base unit. Plug the other end into your telephone wall socket.



Image: The Doro PhoneEasy 105wr handset docked in its base unit, showing the keypad and display.

## 2. Installing Batteries in the Handset

1. **Open the Battery Compartment:** Slide the battery compartment cover on the back of the handset downwards and remove it.
2. **Insert Batteries:** Insert the supplied rechargeable NiMH batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
3. **Close the Compartment:** Replace the battery compartment cover by sliding it upwards until it clicks into place.

## 3. Charging the Handset

Place the handset on the base unit. The battery icon on the handset display will animate to indicate charging. For optimal battery performance, charge the handset for at least 10-12 hours before its first use, even if the display indicates a full charge sooner.



Image: A slightly angled view of the Doro PhoneEasy 105wr handset in its charging cradle, highlighting its ergonomic design.

## OPERATING INSTRUCTIONS

### Making a Call

1. **Dialing:** Pick up the handset or press the **Green Call button**. Enter the phone number using the keypad.
2. **Ending a Call:** Press the **Red End Call button** or place the handset back on the base unit.

### Receiving a Call

When the phone rings, press the **Green Call button** to answer. To end the call, press the **Red End Call button** or return the handset to the base unit.

## Adjusting Volume

During a call, use the **Up** and **Down** navigation buttons on the handset to adjust the earpiece volume.

## Phonebook

Your Doro PhoneEasy 105wr can store up to 20 entries in its phonebook.

### 1. Adding an Entry:

- Press the **Menu** button.
- Navigate to "Phonebook" and select "Add New".
- Enter the name and number, then save.

### 2. Calling from Phonebook:

- Press the **Phonebook** button (often a book icon).
- Scroll through the entries using the navigation buttons.
- Press the **Green Call button** to dial the selected entry.

## Answering Machine (if applicable)

The Doro PhoneEasy 105wr features a digital answering machine with a recording capacity of 20 minutes.

- **Playing Messages:** Press the **Play/Stop** button on the base unit.
- **Deleting Messages:** During message playback, press the **Delete** button on the base unit.
- **Recording Outgoing Message:** Refer to the handset menu for options to record or select a pre-recorded outgoing message.



Image: A direct front view of the Doro PhoneEasy 105wr cordless phone, showing the large buttons and clear display on the handset, and the answering machine controls on the base.

## MAINTENANCE

- **Cleaning:** Wipe the phone and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Use only the specified rechargeable batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Environmental Conditions:** Avoid exposing the phone to extreme temperatures, direct sunlight, or moisture.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord not connected or faulty.	Check the telephone line cord connection to the base unit and wall socket. Test with another phone if possible.
Handset not charging	Handset not correctly placed on the base unit; dirty charging contacts; faulty batteries.	Ensure the handset is seated correctly. Clean charging contacts on both handset and base with a dry cloth. Replace batteries if old.
Poor sound quality	Handset too far from base unit; interference; low battery.	Move closer to the base unit. Avoid placing the base near other electronic devices. Charge the handset battery.
Cannot make/receive calls	No power to base unit; handset not registered.	Check power adapter connection. Refer to the full manual for handset registration instructions if needed.

## SPECIFICATIONS

Feature	Detail
Brand	Doro
Model Number	380102
Color	Black
Phone Type	Cordless
Material	Metal (internal components)
Power Source	Battery Powered (1 A battery included)
Dialer Type	Single Keypad
Item Dimensions (L x W x H)	19.4 x 15.4 x 10.3 centimeters
Item Weight	706 Grams
Answering System Type	Digital
Talk Time	600 Minutes (10 hours)
Standby Time	100 Hours
Recording Capacity	20 Minutes

Feature	Detail
Caller ID	Yes
Independent Test Certification	Energy Star

## WARRANTY AND SUPPORT

---

Information regarding specific warranty terms and customer support contact details is not available in this document. Please refer to the warranty card included with your product or visit the official Doro website for the most up-to-date information.

For further assistance, you may contact Doro customer service through their official channels.