

[Manuals.plus](#) /

› [MANGROOMER](#) /

› MANGROOMER PROFESSIONAL Do-It-Yourself Electric Back Hair Shaver User Manual

MANGROOMER SKU 211-6

MANGROOMER PROFESSIONAL Do-It-Yourself Electric Back Hair Shaver User Manual

Model: SKU 211-6

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting
Support](#)

[Safety Information](#)

[Specifications](#)

[Warranty &](#)



Image: The MANGROOMER PROFESSIONAL Electric Back Hair Shaver.

1. SETUP

1.1 Charging the Device

Before initial use, ensure the MANGROOMER PROFESSIONAL Electric Back Hair Shaver is fully charged. The device operates on a rechargeable battery. Connect the shaver to its power source and allow it to charge for up to **2 hours**. Note that the shaver will not operate while it is plugged into the power source; it must be unplugged to function.

1.2 Blade Installation and Inspection

The shaver features a premium blade design. In some cases, the blade unit may become slightly dislodged during shipping. To ensure optimal performance and proper contact with the internal power pin:

1. Gently remove the blade unit from the shaver head.
2. Reinstall the blade unit, ensuring it is securely seated and makes full contact with the power pin located in the undercarriage of the blade unit.

This step ensures the blades receive power correctly for effective shaving.

1.3 Extending and Adjusting the Handle

The MANGROOMER PROFESSIONAL features an extendable and adjustable handle designed for maximum reach and control. To extend the handle:

1. Locate the professional lock button on the handle.
2. Push and hold the button.
3. Extend the handle to your desired length. The handle can extend over 2 feet to reach difficult areas of the back.
4. Release the button to lock the handle in place.

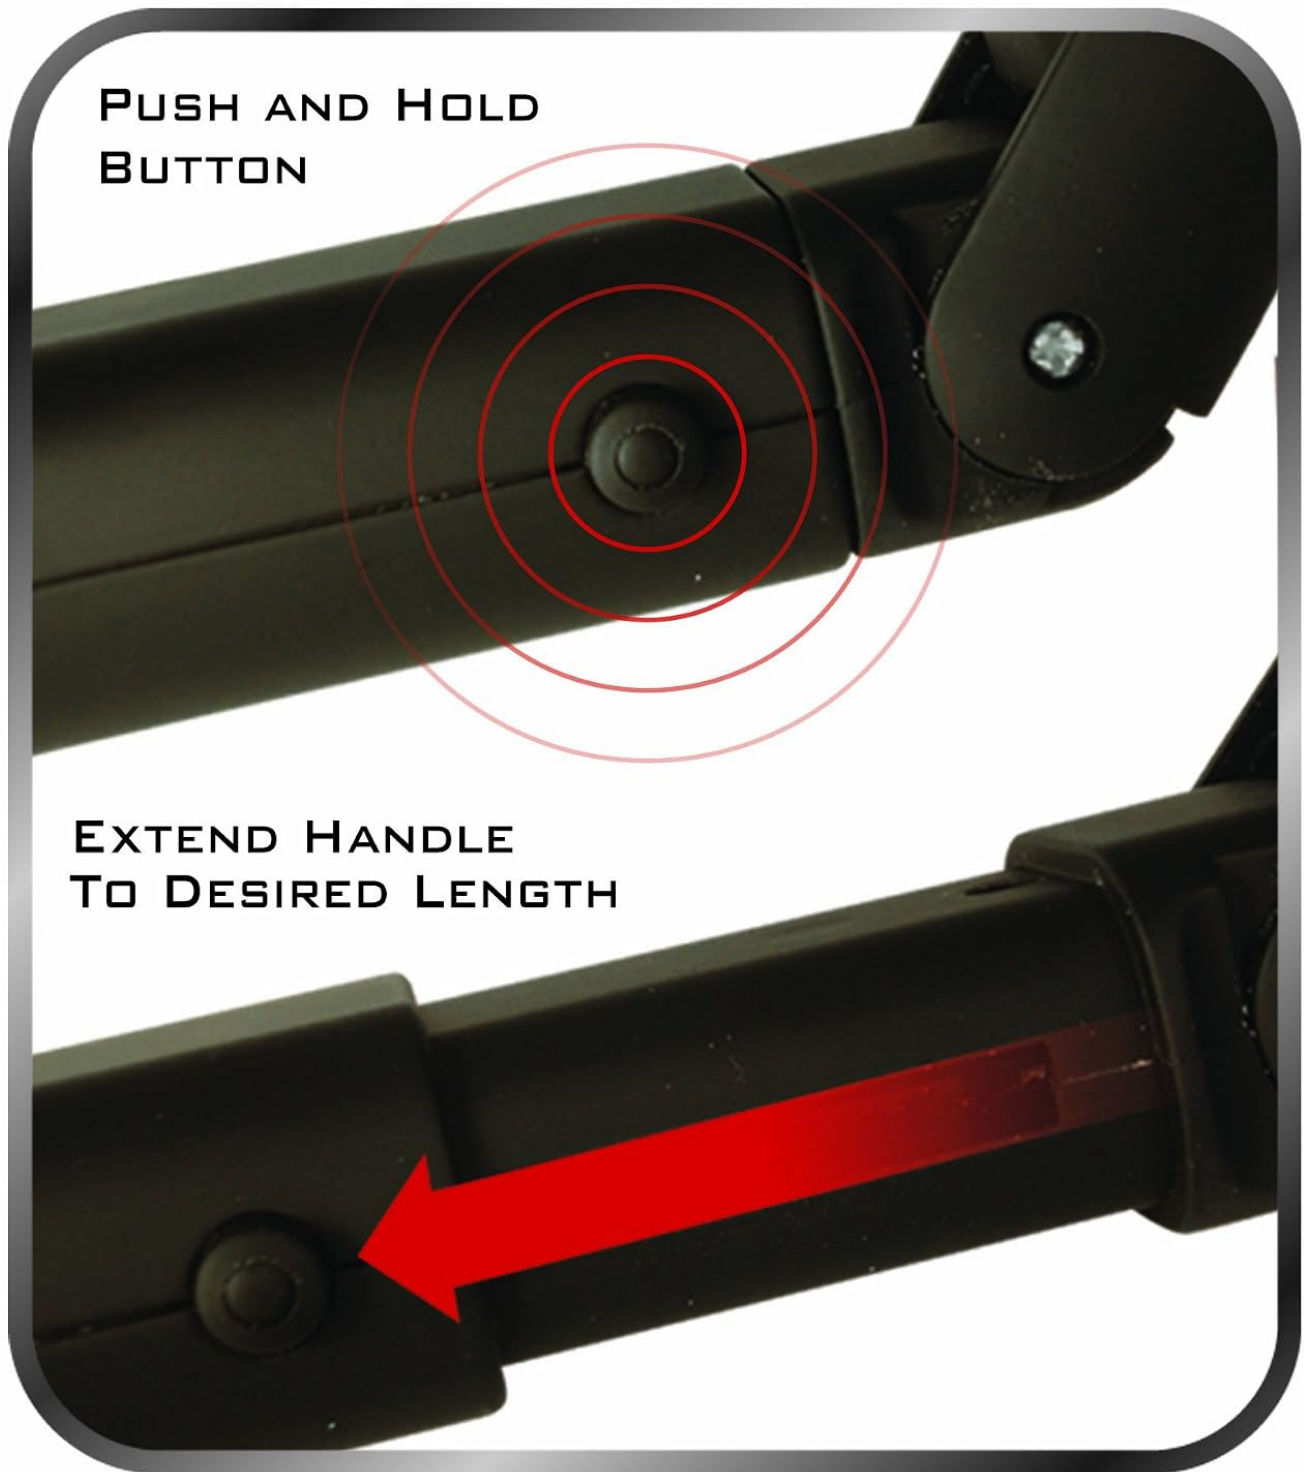


Image: Handle extension mechanism. Push the button to extend the handle to the desired length.

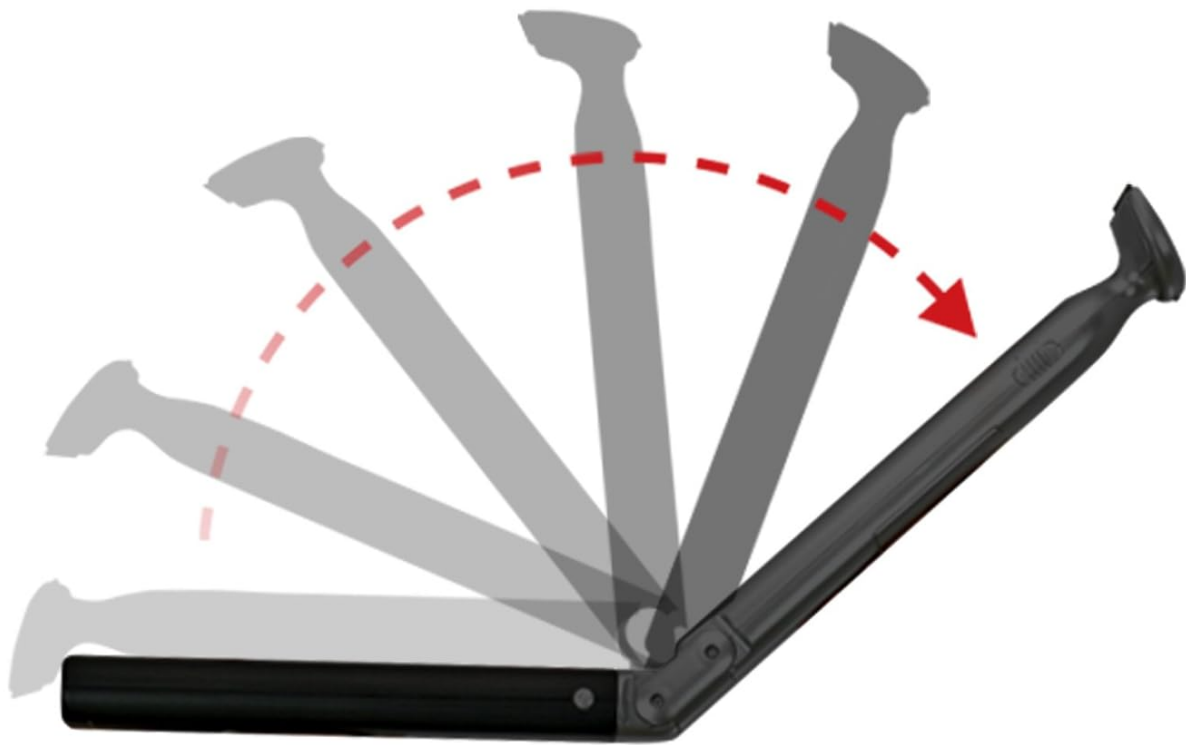


Image: Handle articulation diagram. The handle can be adjusted to various angles for optimal reach.

2. OPERATION

2.1 General Shaving Guidelines

For best results and to prevent discomfort, follow these guidelines:

- Ensure the device is fully charged and unplugged before use.
- When shaving longer hair, especially during initial use, proceed slowly and with caution to avoid pulling or pinching the hair.
- The 1.5-inch wide blade is designed for maximum coverage, requiring fewer strokes.
- The 100% rubberized non-slip grip handle and body provide enhanced control and comfort during use.



Image: Demonstrating the MANGROOMER shaver in use for back hair removal.



Image: The shaver can also be used for other body areas, demonstrating its ergonomic design.

3. MAINTENANCE

3.1 Cleaning the Shaver

Regular cleaning ensures the longevity and hygienic operation of your MANGROOMER shaver. After each use:

- Turn off the shaver and unplug it from any power source.
- Carefully remove the blade unit.
- Use the provided cleaning brush (if included) to remove any trapped hairs from the blade and shaver body.
- Rinse the blade unit under running water if it is designed to be washable (refer to specific product instructions for water resistance). Ensure it is completely dry before reattaching.
- Wipe the shaver body with a clean, damp cloth. Do not submerge the main unit in water.

3.2 Blade Care

To maintain optimal shaving performance, inspect the blade regularly for wear or damage. Replace the blade unit when necessary to ensure a smooth and effective shave.

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

- **Shaver not turning on:**
 - Ensure the shaver is fully charged. The device will not operate while plugged into the power source. Unplug it before attempting to turn it on.
 - Check if the blade unit is correctly installed and making proper contact with the internal power pin. Refer to Section 1.2 for reinstallation instructions.

- **Pulling or pinching during shave:**

- This often occurs with longer hair. Slow down your shaving strokes, especially during initial use or when hair is particularly long.
- Inspect the blade for any damage or dullness. A worn blade may cause pulling.

4.2 Further Assistance

For more detailed troubleshooting steps and solutions, please refer to the official [Troubleshooting Guide \(PDF\)](#).

5. SAFETY INFORMATION

Please read and adhere to the following safety precautions to ensure safe operation and prevent injury:

- Always use caution when shaving longer hair to avoid pulling or pinching.
- If the blade was jarred loose during shipping, carefully remove and reinstall it to ensure proper contact with the power pin.
- Never use the shaver while plugged in.
- Do not use the shaver near water or while bathing/showering to prevent electrical shock.
- Keep the device out of reach of children.
- Do not attempt to disassemble or repair the shaver yourself. Contact customer support for service.

5.1 Battery Composition

The rechargeable battery contains Nickel Metal Hydride.

6. SPECIFICATIONS

Feature	Detail
Brand	MANGROOMER
Model Name	PROFESSIONAL
Item Model Number	SKU 211-6
Product Dimensions	9.25 x 1.5 x 2 inches; 1.05 Pounds
Power Source	Battery Powered
Batteries	Rechargeable battery (included)
Special Feature	Extendable And Adjustable Handle; Non-Slip
Recommended Uses	Back Hair
UPC	860066000020, 853496003525
Manufacturer	Mangroomer (Marut Enterprises, LLC)

7. WARRANTY & SUPPORT

7.1 Product Support

For any questions, technical assistance, or support regarding your MANGROOMER PROFESSIONAL Electric Back Hair Shaver, please contact MANGROOMER customer service directly. Refer to the packaging or the official MANGROOMER website for contact information.

7.2 Additional Resources

You can find the complete [User Manual \(PDF\)](#) and [Troubleshooting Guide \(PDF\)](#) online for further details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question