

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [One For All](#) /

› [One For All Essence 4 Universal Remote Control - User Manual](#)

One For All URC7140

One For All Essence 4 Universal Remote Control

MODEL: URC7140

Introduction

The One For All Essence 4 Universal Remote Control (URC7140) is designed to simplify your home entertainment experience by consolidating control of up to four devices into a single, easy-to-use remote. This manual provides comprehensive instructions for setting up, operating, and maintaining your universal remote control.

It is compatible with a wide range of brands and device types, including TVs, Set Top Boxes (Satellite/Freeview/Cable), DVD/Blu-ray players, and Audio devices such as soundbars, amplifiers, and stereos.

Product Overview

The Essence 4 remote features a streamlined design with clearly labeled buttons for intuitive control. Its key functionalities include:

- **4-Device Control:** Operate your TV, Set Top Box, DVD/Blu-ray player, and Audio devices.
- **Combi Control:** Seamlessly control multiple devices as if they were one, eliminating the need to switch modes frequently.
- **Learning Feature:** Customize the remote by copying functions directly from your original remote controls.
- **Universal Compatibility:** Guaranteed to work with all major brands.





Image: The One For All Essence 4 Universal Remote Control, showcasing its ergonomic design and button layout.

Setup

Setting up your One For All Essence 4 remote is a quick and straightforward process, typically taking less than a minute.

1. Battery Installation

The remote requires 4 AAA batteries (not included). Ensure correct polarity when inserting the batteries into the compartment located on the back of the remote.

2. Device Setup (Code Entry)

Follow these three simple steps to program your remote for each device:

1. **Power On Device:** Ensure the device you wish to control (e.g., TV, Set Top Box) is powered on.
2. **Enter Setup Mode:** Press and hold the 'Magic' button until the mode indicator (blue LED) remains lit.
3. **Select Device Type & Enter Code:** Press the corresponding device button (TV, SAT, DVD, AMP) on the remote. Then, enter the 4-digit setup code for your device's brand. A list of common codes is provided in the quick setup guide included with your remote. The blue LED will blink twice and turn off upon successful code entry. If the device does not respond, try the next code listed for your brand or use the Code Search method.

Code Search Method


If your device brand is not listed or the direct code entry does not work, use the Code Search method:

1. **Power On Device:** Ensure the device is powered on.
2. **Enter Setup Mode:** Press and hold the 'Magic' button until the mode indicator (blue LED) remains lit.
3. **Select Device Type:** Press the corresponding device button (TV, SAT, DVD, AMP).
4. **Initiate Search:** Press '991'. The blue LED will blink twice.
5. **Start Search:** Press the 'Power' button.
6. **Scan Codes:** Repeatedly press the 'CH+' button (Channel Up) until your device turns off. This may require many presses (up to 150).
7. **Save Code:** Once the device turns off, immediately press the 'Magic' button to save the code.



4

DEVICES

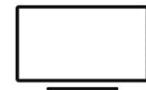


(Smart) TV



Sat/Cable
DVB-T



DVD
Blu-ray

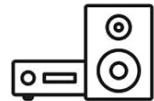

Audio

Image: Visual representation of the four device types (TV, Satellite/Cable, DVD/Blu-ray, Audio) that can be controlled by the Essence 4 remote.

Operating Instructions

Switching Between Devices

To control a specific device, press the corresponding device mode button at the top of the remote (TV, SAT, DVD, AMP). The remote will then send commands for that device type.

Combi Control

The Combi Control feature allows you to operate your TV, Set Top Box, and Audio devices simultaneously without switching modes. This is automatically configured during setup. For example, volume buttons will control your audio device, while channel buttons control your Set Top Box, regardless of the active mode.

Learning Feature

The learning feature enables you to copy specific functions from your original remote control to the Essence 4. This is useful for functions not covered by the pre-programmed codes or for personal customization.

- 1. Prepare Remotes:** Place both the Essence 4 remote and your original remote on a flat surface, facing each other, about 1-2 inches apart.
- 2. Enter Learning Mode:** Press and hold the 'Magic' button until the mode indicator (blue LED) remains lit. Then press '995'. The blue LED will blink twice.
- 3. Select Button to Learn:** Press the button on the Essence 4 remote that you wish to program (e.g., a specific function button). The blue LED will start blinking rapidly.
- 4. Transmit Signal:** Press and hold the corresponding button on your original remote until the Essence 4's blue LED blinks twice, indicating successful learning.
- 5. Repeat or Exit:** Repeat steps 3 and 4 for other buttons you wish to learn. To exit learning mode, press the 'Magic' button.



Image: Illustration demonstrating how to use the learning feature, showing the Essence 4 remote receiving a signal from an original remote.

Maintenance

Cleaning

To clean your remote control, use a soft, slightly damp cloth. Do not use abrasive cleaners or solvents, as these can damage the remote's surface and internal components.

Battery Replacement

When the remote's performance degrades or buttons become unresponsive, it is likely time to replace the batteries. Open the battery compartment on the back, remove the old batteries, and insert new AAA batteries, ensuring correct polarity. Dispose of old batteries responsibly according to local regulations.

Troubleshooting Common Issues

- **Remote not responding:**

- Check if batteries are inserted correctly and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the device's infrared receiver.

- **Device not responding to commands:**

- Verify that the correct device mode button (TV, SAT, DVD, AMP) is selected.
- Re-attempt the setup process using a different code for your device's brand, or use the Code Search method.
- Ensure the original remote is working correctly if using the learning feature.

- **Some buttons not working after setup:**

- Not all functions may be supported by the pre-programmed codes. Use the learning feature to copy these specific functions from your original remote.

Specifications

Feature	Detail
Model Name	URC 7140 Essence 4
Item Model Number	BPSHS01650-URC7140
Brand	One For All
Max Number of Supported Devices	4
Compatible Devices	Set Top Box, DVD/Blu-ray Player, TV, Audio devices
Connectivity Technology	Infrared
Number of Buttons	41
Maximum Range	10 Metres
Item Weight	190 Grams
Product Dimensions (L x W x H)	48 x 23 x 219 millimetres
Colour	Black

Warranty and Support

Warranty Information

The One For All Essence 4 Universal Remote Control comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.



Customer Support


For further assistance, troubleshooting, or to access the full list of device setup codes, please visit the official One For All website or contact their customer support. Contact details can typically be found on the manufacturer's packaging or website.

You can also visit the [One For All Store on Amazon](#) for more product information and support resources.

© 2024 One For All. All rights reserved.


Related Documents - URC7140

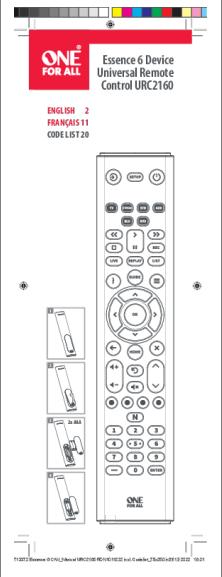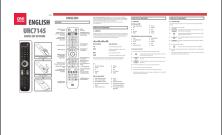	<p>One For All Essence 6 Universal Remote Control URC2160 Setup Guide</p> <p>Comprehensive guide to setting up and using the One For All Essence 6 Universal Remote Control (URC2160) for TV, Streaming, Set-Top Box, Audio, Blu-ray, and DVD devices. Learn about SimpleSet, Code Setup, Learning functions, Volume Lock, and App Shortcut keys.</p>
	<p>One For All URC1281 Universal Remote Codelist</p> <p>Find the correct code for your TV, STB, Blu-ray player, or audio device with the One For All URC1281 universal remote codelist. Comprehensive list of brands and device codes.</p>
	<p>One For All URC7145 Universal Remote Control Simple Set Up Guide</p> <p>A comprehensive guide to setting up and using the One For All URC7145 universal remote control, covering SimpleSet, code setup, learning functions, activities, macros, and volume lock.</p>

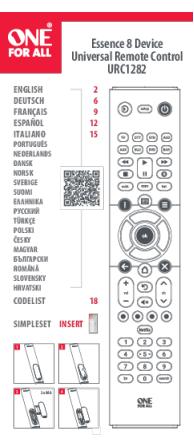


[One For All Essence 8 Universal Remote Control URC1282 Setup and Operation Guide](#)

A comprehensive guide to setting up and operating the One For All Essence 8 Universal Remote Control (URC1282). Learn how to control up to 8 audio-video devices, including TVs, set-top boxes, Blu-ray players, and soundbars, using simple setup methods like SimpleSet and code entry.

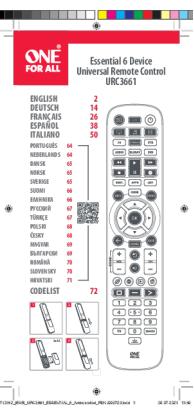

[One For All URC3661 Essential 6 Device Universal Remote Control Setup Guide](#)

Comprehensive guide to setting up and using the One For All URC3661 Essential 6 Device Universal Remote Control for managing multiple audio-visual devices.

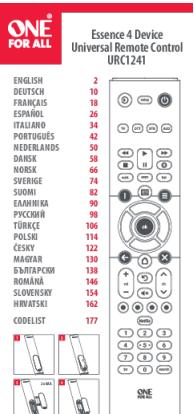

[One For All Essence 4 Device Universal Remote Control URC1241 User Guide](#)

Learn how to set up and use the One For All Essence 4 Device Universal Remote Control (URC1241) to manage up to four audio-video devices. This guide covers battery installation, key descriptions, and setup methods like SimpleSet, Code Setup, and Learning.