

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crock-Pot](#) /

› [Crock-Pot 7 Quart Oval Manual Slow Cooker, Stainless Steel \(SCV700-S-BR\) User Manual](#)

## Crock-Pot SCV700-S-BR

# Crock-Pot 7 Quart Oval Manual Slow Cooker User Manual

Model: SCV700-S-BR | Brand: Crock-Pot

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Crock-Pot 7 Quart Oval Manual Slow Cooker. Designed for convenience and versatility, this appliance is ideal for preparing delicious meals for large families or entertaining. Please read all instructions carefully before first use to ensure optimal performance and longevity of your slow cooker.

## SETUP

### Unpacking

- Carefully remove all packaging materials from the slow cooker and its components.
- Ensure all parts are present: removable stoneware, glass lid, and heating base.
- Retain packaging for future storage or transport if needed.

### First Use Cleaning

Before using your slow cooker for the first time, it is crucial to clean all parts that will come into contact with food.

- Wash the removable stoneware and glass lid in warm, soapy water. Rinse thoroughly and dry completely.
- The stoneware is dishwasher safe for convenient cleaning.
- Wipe the exterior of the heating base with a soft, damp cloth. Do not immerse the heating base in water or any other liquid.



The removable stoneware and glass lid are dishwasher safe for easy cleaning.

## OPERATING INSTRUCTIONS

### Controls

Your Crock-Pot slow cooker features a simple manual control dial for ease of use.



The manual control dial allows for easy selection of cooking settings.

- **OFF:** Turns the slow cooker off.
- **LOW:** Ideal for slow cooking over an extended period, typically 6-8 hours.
- **HIGH:** For faster cooking, typically 3-4 hours.
- **WARM:** Maintains food at a safe serving temperature after cooking is complete. Do not use the WARM setting for cooking.

## Cooking Guidelines

1. Place the stoneware into the heating base.
2. Add your ingredients to the stoneware.
3. Cover with the glass lid.
4. Plug the slow cooker into a standard electrical outlet.
5. Select your desired cooking setting (LOW or HIGH) using the control dial.
6. Cook for the recommended time according to your recipe.
7. Once cooking is complete, you may switch to the WARM setting to keep food ready for serving.
8. Always unplug the slow cooker when not in use and before cleaning.

## CARE AND MAINTENANCE

### Cleaning

Proper cleaning ensures the longevity and hygiene of your slow cooker. Always allow the appliance to cool completely

before cleaning.

- **Removable Stoneware:** The stoneware is dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. If food is stuck, soak the stoneware in warm water before cleaning.
- **Glass Lid:** The glass lid is also dishwasher safe. Hand wash with warm, soapy water and rinse thoroughly.
- **Heating Base:** Never immerse the heating base in water or other liquids. Wipe the exterior with a soft, damp cloth. For stubborn stains, a mild non-abrasive cleaner can be used. Ensure the base is completely dry before storing or next use.



The stoneware and lid are designed for easy cleaning, including dishwasher compatibility.

## Storage

Store the slow cooker in a dry place. Ensure all components are clean and dry before storage. The lid can be inverted and placed inside the stoneware for compact storage.

## SPECIFICATIONS

Feature	Detail
Brand	Crock-Pot
Model Number	SCV700-S-BR
Color	Stainless Steel
Material	Stoneware
Product Dimensions	16.9"D x 11.8"W x 10.4"H

Feature	Detail
Capacity	7 Quarts
Wattage	210 watts
Item Weight	13.85 Pounds
Dishwasher Safe	Yes (Stoneware & Lid)
Voltage	120 Volts
Shape	Oval
Control Type	Manual Dial
Number of Settings	3 (Low, High, Warm)
UPC	048894034954

## TROUBLESHOOTING

If you encounter any issues with your slow cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slow cooker not heating	Not plugged in; power outlet issue; control dial not set.	Ensure unit is securely plugged into a working outlet. Check control dial is set to LOW or HIGH, not OFF or WARM.
Food cooking too slowly/quickly	Incorrect setting used; lid lifted too frequently.	Adjust setting (LOW for longer, HIGH for shorter). Avoid lifting the lid frequently as this releases heat and extends cooking time.
Food sticking to stoneware	Insufficient liquid; no non-stick spray used.	Ensure adequate liquid is used in recipes. Lightly grease the stoneware with cooking spray before adding ingredients.
Lid does not fit snugly	Food obstruction; lid misalignment.	Check for food debris around the rim. Ensure the lid is properly aligned with the stoneware.

## WARRANTY AND SUPPORT

Your Crock-Pot 7 Quart Oval Manual Slow Cooker is covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Crock-Pot website.

For customer support, troubleshooting assistance, or to inquire about replacement parts, please contact Crock-Pot customer service. Contact information can typically be found on the manufacturer's website or in your product packaging.

Additional resources:

- User Manual (PDF): [Download Here](#)
- Instructions for Use (PDF): [Download Here](#)