



Manuals.plus /

› Crock-Pot /

› Crock-Pot 6-Quart Cook & Carry Oval Manual Portable Slow Cooker SCCPVL600-R User Manual

Crock-Pot SCCPVL600

Crock-Pot 6-Quart Cook & Carry Oval Manual Portable Slow Cooker SCCPVL600-R User Manual

Model: SCCPVL600-R

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The lid and stoneware are removable for easy cleaning.
- **CAUTION:** To prevent damage or shock hazard, do not cook in the heating base. Cook only in the stoneware provided.
- **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

PRODUCT OVERVIEW

The Crock-Pot 6-Quart Cook & Carry Slow Cooker is designed for convenient slow cooking and easy transport of meals. It features a removable stoneware insert, a glass lid with a locking system, and a heating base with manual control settings.



Image: The Crock-Pot 6-Quart Cook & Carry Slow Cooker in red, showcasing its oval design, glass lid, and control dial.

Components:

- **Heating Base:** The main unit containing the heating element and control dial.
- **Removable Stoneware:** The ceramic pot where food is cooked. It is dishwasher safe.
- **Glass Lid:** Transparent lid to monitor cooking progress.
- **Lid-Locking System:** Latches on either side of the heating base that secure the lid for transport.
- **Control Dial:** Used to select cooking settings (OFF, LOW, HIGH, WARM).



Image: A hand lifting the glass lid from the Crock-Pot slow cooker, revealing cooked food inside the removable stoneware.

BEFORE FIRST USE

Before using your slow cooker for the first time, follow these steps:

1. Remove all packaging components and labels.
2. Wash the removable stoneware and glass lid in warm, soapy water with a soft cloth or sponge. Rinse thoroughly and dry.
3. Wipe the exterior of the heating base with a soft, damp cloth. Do not immerse the heating base in water or any other liquid.
4. Ensure all parts are completely dry before assembly and use.

OPERATING INSTRUCTIONS

Cooking

1. Place the stoneware into the heating base.
2. Add your ingredients to the stoneware.

3. Place the lid on the stoneware. **Do not lock the lid during cooking.** The lid-locking system is for transport only.
4. Plug the power cord into a wall outlet.
5. Select the desired temperature setting (LOW or HIGH) using the control dial.
6. Cook for the recommended time according to your recipe.
7. Once cooking is complete, you may switch the dial to the WARM setting to keep food at a serving temperature. The WARM setting is not for cooking.
8. To turn off the slow cooker, turn the control dial to the OFF position and unplug the unit from the wall outlet.

Using the Cook & Carry Feature

The Cook & Carry feature allows for secure transport of your cooked meals.

1. Ensure cooking is complete and the slow cooker is unplugged.
2. Place the lid securely on the stoneware.
3. Engage the lid-locking latches on both sides of the heating base. These latches will hold the lid firmly in place.
4. Use the integrated handles on the heating base to carry the slow cooker.
5. **Important:** Always ensure the lid is properly locked before transporting.



Image: The Crock-Pot slow cooker with its lid securely latched, placed in the trunk of a car, demonstrating its portability.

CARE AND CLEANING

Proper care and cleaning will ensure the longevity of your slow cooker.

1. Always turn the slow cooker to OFF, unplug it from the electrical outlet, and allow it to cool completely before

cleaning.

2. The removable stoneware and glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge or cloth.
3. For stubborn food residue, fill the stoneware with warm water and allow it to soak for a few hours before cleaning.
4. The heating base should be wiped clean with a soft, damp cloth. Never immerse the heating base in water or other liquids.
5. Do not use abrasive cleaning compounds or scouring pads, as they may scratch surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Slow cooker not heating.	Unit unplugged, power outage, or control dial set to OFF.	Ensure unit is plugged in, check power supply, turn control dial to LOW or HIGH.
Food not cooking properly.	Incorrect setting, lid not sealed, or insufficient cooking time.	Verify setting (LOW/HIGH), ensure lid is properly seated (not locked during cooking), adjust cooking time as needed.
Lid does not lock securely for transport.	Lid or latches misaligned.	Ensure lid is correctly positioned on the stoneware before engaging latches. Check latches for any obstruction.
Stoneware has cracks or chips.	Impact damage or thermal shock.	Discontinue use of damaged stoneware. Contact customer support for replacement options.

SPECIFICATIONS

Feature	Detail
Brand	Crock-Pot
Model Number	SCCPVL600-R
Capacity	6 Quarts (5.68 Liters)
Shape	Oval
Control Type	Manual Dial (OFF, LOW, HIGH, WARM)
Material	Stoneware (removable), Glass (lid)
Product Dimensions	10"D x 15"W x 15"H
Item Weight	12.25 Pounds
Dishwasher Safe Parts	Stoneware, Lid
Voltage	220 Volts (Note: Product specifications indicate 220V, please verify compatibility with local power supply before use.)
Wattage	1500 watts

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official Crock-Pot website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Crock-Pot customer service through their official channels.