

[Manuals.plus](#) /

› [Fackelmann](#) /

› Fackelmann Feel Stainless Steel Pyramid Grater (Model 45424) User Manual

Fackelmann 45424

Fackelmann Feel Stainless Steel Pyramid Grater

Model: 45424

INTRODUCTION

This manual provides instructions for the safe and effective use of your Fackelmann Feel Stainless Steel Pyramid Grater. Please read all instructions carefully before first use and retain this manual for future reference. This pyramid grater is designed for grating various food items and features four distinct grating surfaces for different textures.

PRODUCT OVERVIEW



Figure 1: Front view of the Fackelmann Feel Stainless Steel Pyramid Grater, showcasing its primary grating surface.



Figure 2: Close-up view of the ergonomic non-slip handle and the top opening of the grater.

The Fackelmann Feel Pyramid Grater is constructed from stainless steel with a plastic handle. It features a stable base and four distinct grating surfaces, each designed for a specific type of grating task.

SETUP

1. **Unpacking:** Carefully remove the grater from its packaging. Inspect for any damage.
2. **Initial Cleaning:** Before first use, wash the grater thoroughly with warm soapy water. Rinse completely and dry immediately to prevent water spots.
3. **Familiarization:** Identify the four different grating surfaces. Each side offers a unique grating size, from fine to coarse.

OPERATING INSTRUCTIONS



Figure 3: The pyramid grater being used to grate cheese, demonstrating its practical application.

1. **Placement:** Place the grater on a stable, flat surface. For best results, place it directly over a bowl or plate to collect grated food.
2. **Grip:** Hold the ergonomic handle firmly with one hand.
3. **Grating:** With your other hand, take the food item (e.g., cheese, vegetables) and rub it against the desired grating surface in a downward motion. Apply gentle, even pressure.
4. **Caution:** The grating surfaces are sharp. Always exercise extreme caution to avoid injury to your fingers. Use a food holder or wear protective gloves if preferred, especially when grating smaller pieces.
5. **Surface Selection:** Experiment with the four different surfaces to achieve the desired texture for your ingredients.

MAINTENANCE AND CARE

- **Cleaning:** Wash the grater immediately after each use. Use warm water and a mild dish soap. A brush may be helpful to remove food particles from the grating surfaces.
- **Rinsing:** Rinse thoroughly under running water to remove all soap residue.
- **Drying:** Dry the grater completely with a soft cloth to prevent water spots and maintain its finish. Do not allow it to air dry, as this can lead to mineral deposits.
- **Dishwasher Safety:** **This grater is NOT dishwasher safe.** Hand washing is recommended to preserve the integrity of the stainless steel and plastic components.
- **Storage:** Store the grater in a dry place, away from excessive moisture.

TROUBLESHOOTING

- **Difficulty Grating:** Ensure the food item is firm enough. For softer foods, chilling them slightly before grating can improve results. Ensure you are using the appropriate grating surface for the food type.
- **Food Stuck in Grater:** Use a stiff brush or a toothpick to carefully dislodge any stubborn food particles. Always clean immediately after use to prevent food from drying and hardening on the surfaces.
- **Rust Spots:** While made of stainless steel, prolonged exposure to moisture or harsh chemicals can cause surface rust. Ensure the grater is always dried thoroughly after washing. If rust spots appear, they can often be

removed with a stainless steel cleaner and a non-abrasive cloth.

SPECIFICATIONS



Figure 4: Diagram illustrating the dimensions of the Fackelmann Feel Stainless Steel Pyramid Grater.

Feature	Detail
Model Number	45424
Material	Stainless Steel, Plastic (handle)
Dimensions (L x W x H)	4.53" x 3.54" x 9.65" (11.5 cm x 9 cm x 24.5 cm)
Weight	0.2 Kilograms
Grating Surfaces	Four (fine, medium, coarse, slicing)
Dishwasher Safe	No

WARRANTY INFORMATION

The Fackelmann Feel Stainless Steel Pyramid Grater comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use. It does

not cover damage resulting from misuse, abuse, accident, alteration, or improper care. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, questions, or warranty claims regarding your Fackelmann Feel Stainless Steel Pyramid Grater, please refer to the contact information provided on the product packaging or the official Fackelmann website. When contacting support, please have your product model number (45424) and proof of purchase readily available.