

Casio 10188556

Casio 10188556 Watch Strap Instruction Manual

For Models: G-300-2A, G-300-3A, G-300-4A, G-301B-1A, G-301BR-1A, G-306X-1A, G-350-2A, G-350-5A

1. PRODUCT OVERVIEW

This document provides instructions for the installation, care, and maintenance of your Casio 10188556 replacement watch strap. This genuine Casio part is designed to fit specific G-Shock models, ensuring a precise fit and durable performance.

Compatible Models:

- G-300-2A, G-300-3A, G-300-4A
- G-301B-1A, G-301BR-1A
- G-306X-1A
- G-350-2A, G-350-5A

The strap features a black rubber construction with a stainless steel metal buckle and a black rubber loop.

2. INSTALLATION GUIDE

Replacing your watch strap requires careful attention. It is recommended to use appropriate watch tools, such as a spring bar tool, to prevent damage to your watch or the new strap. Spring bars are typically not included with the replacement strap and should be reused from your original watch band if they are in good condition.

2.1 Removing the Old Strap

1. Place your watch face down on a soft, clean surface to protect it from scratches.
2. Locate the spring bars that secure the strap to the watch lugs. These are small, spring-loaded pins at each end of the strap.
3. Using a spring bar tool, carefully compress one end of the spring bar and gently pull the strap away from the watch lug.
4. Once one end is free, the spring bar can be removed. Repeat this process for the other side of the strap and for the second strap piece.
5. Retain the spring bars if they are in good condition, as they will be needed for the new strap.

2.2 Installing the New Strap

1. Insert one end of a spring bar into the hole on the inside of one watch lug.
2. Place the new strap piece into position. Using the spring bar tool, compress the exposed end of the spring bar and guide it into the corresponding hole on the opposite watch lug.
3. Gently push and wiggle the strap until you feel the spring bar click securely into place. Pull lightly on the strap to ensure it is firmly attached.
4. Repeat the process for the second strap piece.
5. Ensure both strap pieces are securely fastened before wearing the watch. Note that installation can be challenging due to the watch's design; patience is advised.



Image 1: Top view of the Casio 10188556 watch strap, highlighting the buckle and adjustment holes.



Image 2: Bottom view of the Casio 10188556 watch strap, displaying its textured underside and the stainless steel buckle.

3. OPERATING AND ADJUSTMENT

Once installed, the watch strap operates like any standard buckle-style band.

- **Wearing:** Place the watch on your wrist and insert the end of the strap through the buckle.
- **Adjustment:** Select a hole that provides a comfortable and secure fit without being too tight or too loose. The strap should allow for slight movement but not slide freely on your wrist.
- **Securing:** Pass the excess strap through the rubber loop to keep it neatly in place.

4. MAINTENANCE AND CARE

Proper care will extend the life of your watch strap.

- **Cleaning:** Clean the strap regularly with mild soap and water. Use a soft cloth or brush to remove dirt and debris. Rinse thoroughly with clean water.
- **Drying:** Allow the strap to air dry completely before wearing. Avoid direct sunlight or excessive heat, which can degrade the rubber material.
- **Chemicals:** Avoid contact with harsh chemicals, solvents, or strong detergents, as these can damage the strap's material and finish.
- **Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight.

5. TROUBLESHOOTING

- **Difficulty Installing Strap:** Ensure you are using the correct spring bars (reusing original ones is often best). Verify the strap orientation and alignment with the watch lugs. If difficulty persists, consider seeking assistance from a professional watch repair service.
- **Strap Does Not Fit:** Double-check the model numbers listed in Section 1. This strap is specifically designed for the listed Casio G-Shock models. If your watch model is not listed, the strap may not be compatible.
- **Strap Appears Damaged:** Inspect the strap for any manufacturing defects upon receipt. If you notice any issues, contact your retailer for assistance.

6. SPECIFICATIONS

Part Number	10188556
Manufacturer	Casio
Material	Rubber (No Metal Type for strap body)
Band Color	Black
Buckle Material	Stainless Steel Metal Buckle
Buckle Type	Tang Buckle
Loop Type	Black Rubber Loop
Band Width (Outside Lug)	19mm
Band Width (Inside Lug)	16mm

7. WARRANTY AND SUPPORT

This Casio product is covered by the manufacturer's standard warranty against defects in materials and workmanship. For specific warranty terms, conditions, and duration, please refer to the documentation provided with your original watch or visit the official Casio website.

For technical support, replacement parts, or warranty claims, please contact Casio customer service directly through their official website or authorized service centers. Provide your product model number (10188556) and watch model number for efficient assistance.

Official Casio Website: www.casio.com