

[manuals.plus](#) /› [TECKNET](#) /› [TECKNET 2.4G Wireless Mini QWERTY Keyboard X315 User Manual](#)**TECKNET X315**

TECKNET 2.4G Wireless Mini QWERTY Keyboard X315

User Manual

Model: X315

1. INTRODUCTION

Thank you for choosing the TECKNET 2.4G Wireless Mini QWERTY Keyboard X315. This ultra-thin, compact keyboard is designed for efficiency and comfort, featuring 2.4 GHz wireless technology for a stable connection and 12 multimedia shortcut keys for enhanced productivity. Its low-profile scissor-switch keys offer a quiet and responsive typing experience. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new keyboard.

BATERÍA DE LARGA DURACIÓN



Image: Front view of the TECKNET 2.4G Wireless Mini QWERTY Keyboard X315 in silver.

2. WHAT'S IN THE Box

- 1 x TECKNET 2.4G Wireless Mini QWERTY Keyboard
- 1 x Nano USB Receiver
- 1 x User Manual

3. SETUP GUIDE

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the keyboard.
2. Slide the cover open.
3. Insert two AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: Diagram showing battery installation (2*AAA) and power-saving features like auto-sleep and ON/OFF switch.

3.2 Connecting the Receiver

1. Remove the Nano USB receiver from its storage slot on the back of the keyboard.
2. Plug the Nano USB receiver into an available USB port on your computer, laptop, or compatible device.
3. The system will automatically detect and install the necessary drivers. This may take a few moments.



Image: Illustration of the 2.4G wireless connection, showing the Nano USB receiver plugged into a laptop and the keyboard operating wirelessly within a 10-meter range.

3.3 Powering On/Off

Locate the ON/OFF switch on the back of the keyboard. Slide it to the 'ON' position to power on the keyboard. Slide it to the 'OFF' position when not in use to conserve battery life.

4. OPERATING INSTRUCTIONS

4.1 General Use

Once connected, your keyboard is ready for use. The 2.4 GHz wireless technology provides a stable and

reliable connection up to 10 meters (33 feet) without interference.

4.2 Multimedia Shortcut Keys

The keyboard features 12 multimedia shortcut keys. To activate these functions, press and hold the **FN** key, then press the corresponding F-key (F1-F12).

Key Combination	Function
FN + F1	Music Player
FN + F2	Volume Down
FN + F3	Volume Up
FN + F4	Mute
FN + F5	Previous Track
FN + F6	Next Track
FN + F7	Play/Pause
FN + F8	Stop
FN + F9	Internet Browser
FN + F10	Email
FN + F11	My Computer
FN + F12	Favorites

12 TASTI MULTIMEDIALE

▶ FN+F1 Música	▶ FN+F7 Reproducir/Pausar
🔉 FN+F2 Volumen -	█ FN+F8 Detener
🔊 FN+F3 Volumen +	🏠 FN+F9 Internet
🔇 FN+F4 Silenciar	✉ FN+F10 Correo Electrónico
⏮ FN+F5 Pista Anterior	💻 FN+F11 Mi Computadora
⏭ FN+F6 Siguiente Pista	⭐ FN+F12 Favoritos

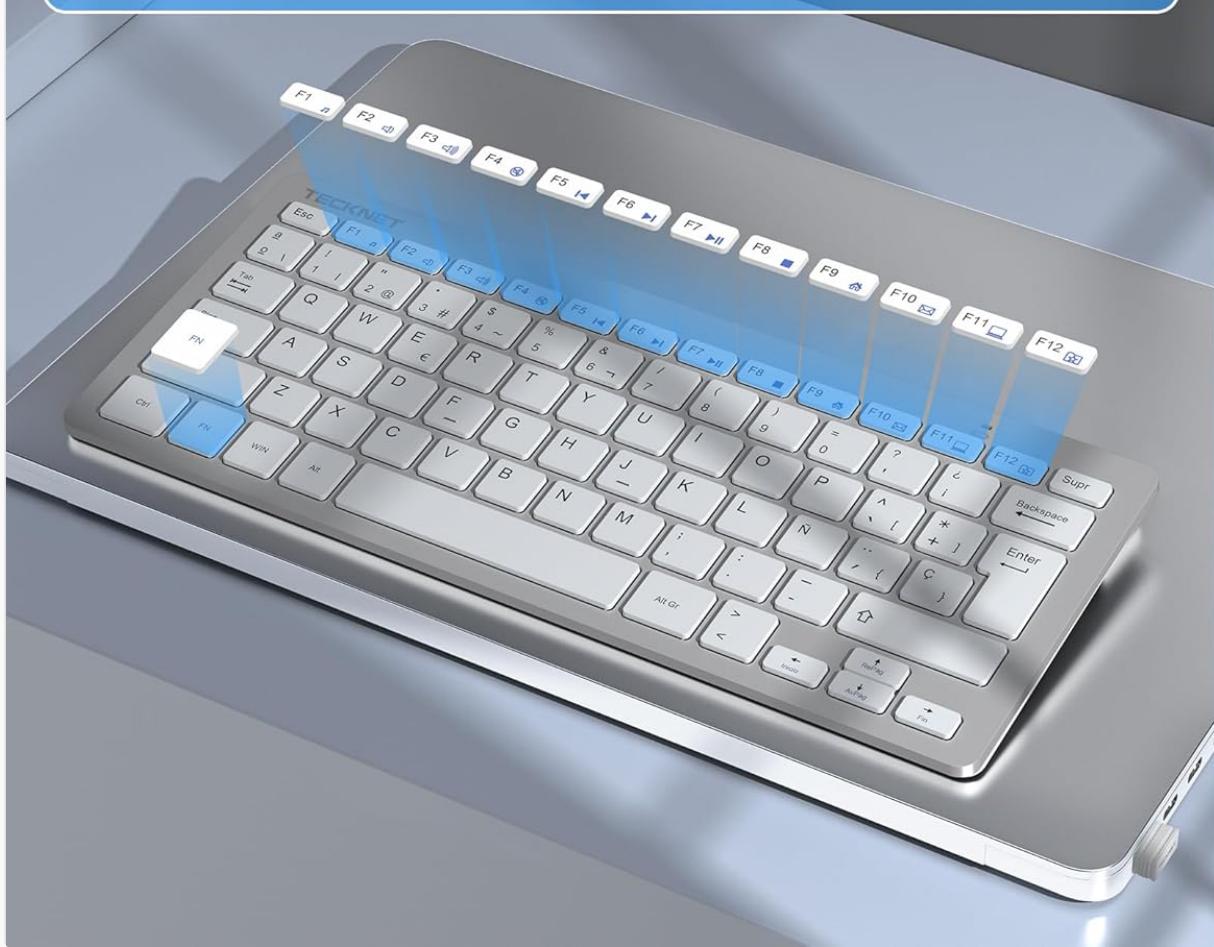


Image: Visual representation of the keyboard highlighting the FN key and multimedia functions (F1-F12).

4.3 Energy Saving Mode

The keyboard features an automatic sleep function. If inactive for a period, it will enter sleep mode to conserve battery. Press any key to wake it up.

5. MAINTENANCE

5.1 Cleaning

To clean the keyboard, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials.

5.2 Battery Replacement

When the keyboard's performance degrades or it stops responding, replace the AAA batteries as described in Section 3.1.

5.3 Storing the Nano Receiver

When transporting or storing the keyboard, you can safely store the Nano USB receiver in its dedicated slot on the back of the keyboard to prevent loss.



Image: The keyboard shown inside a laptop sleeve, illustrating its slim profile (2cm thickness) and compact dimensions (29.2cm x 12.4cm) for portability.

6. TROUBLESHOOTING

6.1 Keyboard Not Responding

- Ensure the keyboard is powered ON using the switch on the back.
- Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Verify that the Nano USB receiver is securely plugged into a working USB port on your device. Try a different USB port.
- Move the keyboard closer to the receiver to rule out range issues (maximum 10 meters).
- Restart your computer or device.

6.2 Lag or Intermittent Connection

- Ensure there are no large metal objects or other wireless devices (like Wi-Fi routers, cordless phones) operating too close to the keyboard or receiver, as these can cause interference.
- Try plugging the receiver into a different USB port, preferably one that is not next to other USB devices.

7. SPECIFICATIONS

Feature	Detail
Brand	TECKNET
Model Number	X315
Color	Silver
Connectivity Technology	2.4 GHz Wireless
Wireless Range	Up to 10 meters (33 feet)
Power Source	2 x AAA Batteries (not included)
Keyboard Layout	QWERTY
Key Type	Scissor-switch, Low-profile
Multimedia Keys	12 (FN + F1-F12)
Dimensions (L x W x H)	29.2 x 12.4 x 2 cm (11.5 x 4.9 x 0.8 inches)
Weight	296 grams (0.65 lbs)
Compatibility	Windows 11/10/8/7/XP/Vista, PC, Laptops, Desktops, Android Smart TVs
Special Features	Automatic Sleep Mode, Nano Receiver Storage, Quiet Typing

AMPLIA COMPATIBILIDAD



Windows



Android



Chrome OS



Linux



Smart TV



Image: The keyboard displayed with a desktop computer and a laptop, illustrating its wide compatibility with various operating systems and devices.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

TECKNET provides a 3-year warranty for registered users only. Please refer to the TECKNET official website or your purchase documentation for details on how to register your product and claim warranty services.

8.2 Customer Support

If you encounter any issues or have questions regarding your TECKNET keyboard that are not covered in this manual, please contact TECKNET customer support. Contact information can typically be found on the TECKNET official website or on your product packaging.

© 2024 TECKNET. All rights reserved.