

[Manuals.plus](#) /

> [Remington](#) /

> Remington PG165 Precision Grooming System User Manual

Remington PG165

Remington PG165 Precision Grooming System User Manual

Model: PG165

INTRODUCTION

Thank you for choosing the Remington PG165 Precision Grooming System. This battery-operated trimmer is designed for precise grooming of facial hair, sideburns, neckline, nose, and ear hair. Please read this manual thoroughly before use to ensure safe and effective operation.





Image: The Remington PG165 Precision Grooming System, a silver-colored, sleek, battery-operated trimmer.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury:

- **Avoid use on infants.** This device is not intended for use on infants.
- **Keep away from water.** Do not immerse the unit in water or use it near bathtubs, showers, basins, or other vessels containing water.
- **Follow recommended cleaning and maintenance procedures.** Refer to the "Maintenance" section for proper cleaning instructions.
- Do not operate if the unit is damaged or malfunctioning.
- Use only for its intended household purpose as described in this manual.
- Keep out of reach of children.

PRODUCT OVERVIEW

The Remington PG165 Precision Grooming System includes the following components:

- **Detail Trimmer:** For precise trimming of facial hair, sideburns, and necklines.
- **Adjustable 4-Position Comb:** Attaches to the detail trimmer for varying hair lengths (5 length settings).
- **Linear Trimmer (Nose & Ear):** Specifically designed for safe and comfortable removal of nose, ear, and eyebrow hair.
- **Storage Pouch:** For convenient storage and travel.



Image: The detail trimmer head shown alongside the adjustable comb attachment.



Image: The Remington PG165 unit with the linear nose and ear trimmer attachment installed.

SETUP

1. Battery Installation

1. Ensure the trimmer is turned off.
2. Twist the bottom cap of the trimmer counter-clockwise to open the battery compartment.
3. Insert one (1) AA alkaline battery, ensuring the positive (+) and negative (-) ends are correctly oriented as indicated inside the compartment.
4. Replace the bottom cap and twist clockwise to secure it.

Note: For optimal performance, use a fresh AA alkaline battery. Rechargeable batteries may result in reduced power.

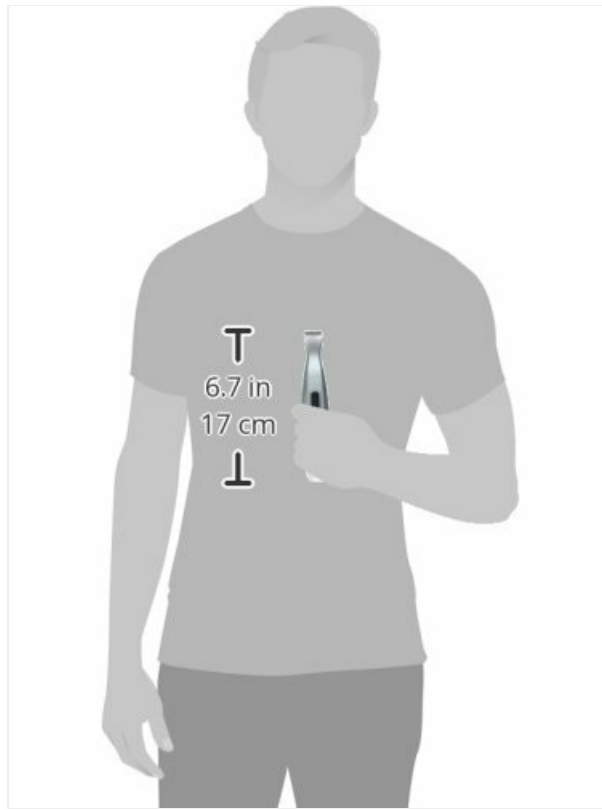


Image: A close-up view of the battery compartment, indicating where to insert the AA battery.

2. Attaching and Detaching Trimmer Heads

- **To Attach:** Align the desired trimmer head (detail trimmer or linear nose/ear trimmer) with the main unit and twist clockwise until it clicks securely into place.
- **To Detach:** Twist the trimmer head counter-clockwise and pull it away from the main unit.



Image: The detail trimmer head, ready for attachment to the main unit.

OPERATING INSTRUCTIONS

1. Using the Detail Trimmer

- Attach the detail trimmer head to the main unit.
- For a close trim, use the detail trimmer without any comb attachment. Gently press the blade against the skin and move the trimmer in the direction opposite to hair growth.

- For longer lengths, attach the adjustable 4-position comb. Slide the comb to select one of the 5 length settings (1mm to 4mm).
- Move the trimmer slowly against the direction of hair growth, ensuring the comb remains flat against the skin.
- Ideal for shaping beards, mustaches, sideburns, and cleaning up necklines.

2. Using the Linear Trimmer (Nose & Ear)

- Attach the linear nose and ear trimmer head to the main unit.
- **For Nose Hair:** Gently insert the trimmer tip into the nostril. Move the trimmer in a circular motion to trim visible hairs. Do not insert too deeply.
- **For Ear Hair:** Carefully guide the trimmer around the outer ear and into the ear canal opening to trim visible hairs. Do not insert too deeply into the ear canal.
- **For Eyebrows:** Use the trimmer to carefully shape and trim stray eyebrow hairs.

MAINTENANCE

1. Cleaning

- Always turn off the trimmer before cleaning.
- The trimmer heads are rinsable. Detach the head from the main unit and rinse it under running water to remove hair clippings.
- Do not rinse the main body of the trimmer, as it is not waterproof.
- Allow the trimmer head to air dry completely before reattaching or storing.
- Periodically, use a small brush (not included) to remove stubborn hair from the blades.

2. Storage

- Store the trimmer and its attachments in the provided storage pouch when not in use.
- Ensure the trimmer is clean and dry before storing.
- If storing for an extended period, remove the AA battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is dead or incorrectly inserted.	Replace with a fresh AA battery, ensuring correct polarity.
Trimmer runs slowly or pulls hair.	Battery is low; blades are clogged with hair.	Replace battery. Clean trimmer head thoroughly.
Trimmer head does not attach securely.	Head is not aligned correctly.	Ensure the head is properly aligned and twisted clockwise until it clicks.

SPECIFICATIONS

- **Model:** PG165
- **Power Source:** 1 x AA Battery (Alkaline recommended)
- **Blade Material:** Alloy Steel

- **Dimensions:** 1.25 x 1.25 x 5.5 inches
- **Weight:** 3.2 ounces (without battery)
- **Minimum Cutting Length:** 1 Millimeter
- **Maximum Cutting Length:** 4 Millimeters (with adjustable comb)
- **Included Components:** Detail Trimmer, Linear Trimmer, Adjustable Comb, Storage Pouch

WARRANTY AND SUPPORT

This Remington PG165 Precision Grooming System comes with a **2-year limited warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For product support, questions, or warranty service, please visit the official Remington website or contact their customer service.

www.RemingtonProducts.com