

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Craig](#) /
- › [Craig Micro Cassette Voice Recorder CR8003 Instruction Manual](#)

## Craig CR8003

# Craig Micro Cassette Voice Recorder CR8003 Instruction Manual

Model: CR8003

## INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Craig Micro Cassette Voice Recorder, model CR8003. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

## PRODUCT OVERVIEW

The Craig CR8003 is a portable micro cassette voice recorder designed for convenient audio capture and playback. It features a Voice Activated System (VAS), two-speed control, and an LED recording indicator.



This image displays the Craig CR8003 Micro Cassette Voice Recorder. It is a black, rectangular device with a wrist strap attached to the top left. The front panel features the 'CRAIG' logo at the top, a clear window for viewing the cassette tape, and an orange 'VAS' (Voice Activated System) indicator. Below this, text indicates 'VOICE ACTIVATED SYSTEM 2 SPEED CONTROL'. Further down, a 'RECORD' indicator and a speaker grille are visible. The right side of the device shows a 'DIRECTION' arrow and control buttons.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the unit.
2. Slide the cover open.

3. Insert two (2) AA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

**Note:** The unit can also be powered by a DC3V AC/DC adapter (not included) via the DC jack.

## OPERATING INSTRUCTIONS

---

### 1. Loading a Micro Cassette

1. Press the EJECT button to open the cassette compartment door.
2. Insert a micro cassette tape with the open side facing the playback head.
3. Gently close the cassette compartment door until it clicks into place.

### 2. Recording

- **Standard Recording:** Press the RECORD button. The LED recording indicator will illuminate. Speak clearly into the built-in microphone.
- **Voice Activated System (VAS):** To enable VAS, slide the VAS switch to the 'ON' position. The recorder will automatically start recording when sound is detected and pause when silence occurs. The LED indicator will show recording activity.
- To stop recording, press the STOP button.

### 3. Playback

- Press the PLAY button to begin playback. Audio will be heard through the built-in speaker.
- **Speed Control:** Use the 2-speed control switch to adjust the playback speed as desired.
- **Pause:** Press the PAUSE button to temporarily stop playback. Press it again to resume.
- **Fast Forward/Rewind:** Use the F.FWD (Fast Forward) and REW (Rewind) buttons to navigate through the tape.
- To stop playback, press the STOP button.

### 4. Using External Devices

- **Headphones:** Connect 3.5mm headphones to the headphone jack for private listening.
- **External Microphone:** Connect an external microphone to the microphone jack for alternative audio input.

## MAINTENANCE

---

- Keep the unit clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Regularly clean the tape heads and pinch roller with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and prevent tape damage.
- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Store the recorder in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit does not power on.	Dead or incorrectly inserted batteries; no DC power.	Replace batteries, check polarity; ensure DC adapter is properly connected and functional.
Poor recording/playback quality.	Dirty tape heads; worn-out tape; low battery power.	Clean tape heads; try a new micro cassette; replace batteries.
Tape does not move or jams.	Tape is tangled or damaged; mechanism obstruction.	Check tape for damage; ensure tape is properly spooled; gently remove any visible obstructions.
VAS not activating.	VAS switch is off; ambient noise too low.	Ensure VAS switch is in the 'ON' position; increase volume of sound source.

## SPECIFICATIONS

**Model Number:** CR8003

**Brand:** Craig

**Product Dimensions:** 1.1 x 2.75 x 5 inches

**Item Weight:** 8 ounces

**Batteries:** 2 AA batteries required (not included)

**Power Input:** DC3V (AC/DC adapter not included)

**Hardware Interface:** Headphone

**Microphone Form Factor:** Built-In

**Headphones Jack:** 3.5 millimeters

**Features:** Voice Activated System (VAS), High sensitivity recording, Two speeds play/record control, LED recording indicator, Pause, Forward & Rewind function, Built-in speaker

**Date First Available:** June 18, 2010

**Manufacturer:** Craig Electronics

## WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Craig Electronics website. Warranty terms and conditions may vary.

## SUPPORT

If you require further assistance or have questions not covered in this manual, please visit the Craig Electronics support page or contact their customer service department. You can often find contact information on the manufacturer's website or product packaging.

**Craig Store:** Visit the Craig Store on Amazon

## Related Documents - CR8003

	<p><a href="#">Craig CMP616F 4GB Digital MP3/Personal Video Player Owner's Manual</a></p> <p>This owner's manual for the Craig CMP616F 4GB Digital MP3/Personal Video Player provides comprehensive guidance on safety, operation, file transfer, media playback (music, video, photos), voice recording, troubleshooting, specifications, and warranty information.</p>
	<p><a href="#">Craig CMA3568 Portable Speaker with Bluetooth Wireless Technology - Owner's Manual</a></p>
<p>User manual for the Craig CMA3568 Portable Speaker with Bluetooth Wireless Technology.</p>	
<p>Includes setup, operation, specifications, and warranty information.</p>	
	
<p><a href="#">Craig CD681 Speaker Replacement Guide</a></p>	
<p>A step-by-step guide to replacing the speakers in a Craig CD681 turntable radio system.</p>	
	
<p><a href="#">Craig CHT894 Tower Speaker System Owner's Manual</a></p>	
<p>Owner's manual for the Craig CHT894 Tower Speaker System with Color Changing Lights and Bluetooth Wireless Technology. Includes safety instructions, operation guide, specifications, and warranty information.</p>	
	
<p><a href="#">Craig CMA3837 Portable Speaker User Manual</a></p>	
<p>User manual for the Craig CMA3837 portable speaker, covering operation, Bluetooth pairing, FM radio, USB and TF card playback, AUX input, microphone usage, troubleshooting, specifications, and warranty information.</p>	
	
<p><a href="#">Craig CHT910 Tower Stereo System Owner's Manual</a></p>	
<p>This owner's manual provides comprehensive instructions for the Craig CHT910 Tower Stereo System. It includes important safety information, installation guides, operation procedures, system connection details for various devices like iPod, iPhone, iPad, TV, DVD, VCR, MP3 players, and FM radio, a troubleshooting guide, general specifications, and limited warranty information.</p>	