

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TRESemme](#) /

› [TRESemme 5543U Professional Diffuser Hair Dryer User Manual](#)

TRESemme 5543U

TRESemme 5543U Professional Diffuser Hair Dryer

User Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- **Water Hazard:** Do not use this appliance while bathing or near water. Never immerse the appliance in water or other liquids.
- **Children:** Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Power Cord:** Keep the power plug and cord away from heated surfaces. Do not wrap the cord around the appliance.
- **After Use:** Always turn off and unplug the appliance immediately after use.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- **Attachments:** Use only attachments supplied by the manufacturer.

2. PRODUCT OVERVIEW AND COMPONENTS

The TRESemme 5543U Professional Diffuser Hair Dryer is designed for efficient and versatile hair styling. It features a powerful motor, ionic conditioning, and multiple attachments for various hair types and styles.

Main Unit and Attachments



Figure 2.1: The TRESemmé 5543U Hair Dryer shown with its included diffuser attachment. This image highlights the sleek black and gold design of the main unit and the textured surface of the diffuser.



Figure 2.2: A side view of the TRESemme 5543U Hair Dryer with the diffuser attachment securely fitted. This angle provides a clear view of the attachment mechanism and the overall profile of the dryer.



Figure 2.3: A detailed close-up of the diffuser attachment, showcasing its numerous prongs designed to lift and separate hair for enhanced curls and volume. The perforated surface allows for even heat distribution.



Figure 2.4: This image focuses on the concentrator nozzle end of the hair dryer, showing the narrow opening designed to direct airflow for precise styling and smoothing.



Figure 2.5: A close-up view of the control panel on the handle, featuring the three heat/speed settings (I, II, III) and the cool shot button, allowing users to easily adjust airflow and temperature.



Figure 2.6: This image shows the rear air intake grille of the hair dryer, which is designed to be easily removable for cleaning and maintenance, ensuring optimal performance.

Key Features:

- **2200W Professional Motor:** Provides powerful airflow for fast drying.
- **Ionic Conditioning Technology:** Reduces frizz and enhances shine for a smooth finish.
- **3 Heat/Speed Settings:** Offers versatile control for different hair types and styling needs.
- **Cool Shot Button:** Locks in your style for long-lasting results.
- **Concentrator Nozzle:** For precise styling and smoothing.
- **Diffuser Attachment:** Enhances natural curls and adds volume.
- **Removable Rear Filter:** For easy cleaning and maintenance.

3. SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Choose Attachment:** Select the desired attachment (concentrator nozzle or diffuser) based on your styling needs. Align the attachment with the barrel of the hair dryer and push it firmly into place until it clicks.
4. **Plug In:** Ensure your hands are dry, then plug the hair dryer into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The TRESemme 5543U offers flexible control for various drying and styling techniques.

Power and Temperature Settings:

- **Off (0):** Appliance is off.
- **Low Speed/Heat (I):** Gentle drying, suitable for fine or damaged hair.
- **Medium Speed/Heat (II):** Regular drying, suitable for normal hair.
- **High Speed/Heat (III):** Fast drying, suitable for thick or wet hair.
- **Cool Shot Button (*):** Press and hold this button to deliver a burst of cool air. Use this to set your style after drying.

General Drying:

1. Towel-dry your hair to remove excess water.
2. Select your desired heat and speed setting.
3. Direct the airflow from roots to ends, moving the dryer continuously to prevent heat damage.
4. For a smooth finish, use the concentrator nozzle and a round brush to direct air down the hair shaft.

Using the Diffuser for Curls and Volume:

1. Attach the diffuser to the hair dryer.
2. Set the dryer to a low heat and speed setting.
3. Gently place sections of your hair into the diffuser bowl, allowing your curls to rest on the prongs.
4. Lift the diffuser towards your scalp and hold it in place for a few seconds.
5. Continue this process, moving around your head until your hair is dry and curls are defined. Avoid disturbing the curls too much while drying.

5. MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your hair dryer.

1. **Unplug:** Always unplug the hair dryer from the power outlet before cleaning.
2. **Clean Exterior:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Clean Air Filter:** The rear air filter should be cleaned regularly to prevent overheating and maintain performance. Twist or pull off the rear grille (refer to Figure 2.6). Remove any accumulated dust or hair with a soft brush or vacuum cleaner. Replace the grille securely.
4. **Storage:** Allow the appliance to cool down completely before storing. Store in a cool, dry place, away from moisture. Do not wrap the power cord tightly around the appliance.

6. TROUBLESHOOTING

If you encounter any issues with your TRESemme 5543U Hair Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power supply. Faulty outlet. Appliance malfunction.	Check if the plug is securely inserted. Try a different power outlet. If still not working, contact customer support.
Airflow is weak or inconsistent.	Blocked air intake filter.	Unplug the dryer and clean the rear air filter as described in the Maintenance section.
Hair dryer overheats and shuts off.	Blocked air intake or outlet. Prolonged use.	Unplug the dryer and clean the air filter. Allow the appliance to cool down for at least 10-15 minutes before restarting. Ensure air vents are not blocked during use.
Unusual noise or smell.	Internal issue.	Immediately unplug the appliance. Do not use. Contact customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	5543U
Power	2200 Watts

Feature	Detail
Material	Plastic
Color	Black/Gold
Special Feature	Cool Shot Button, Ionic Conditioning
Recommended Uses	Straightening, Curling, Drying, Volumizing
Included Components	Hair Dryer, Diffuser Attachment, Concentrator Nozzle Attachment, Information Booklet
Hair Type	All
Dimensions (L x W x H)	100 x 100 x 100 cm (approximate)
Weight	589 grams (approximate)

8. WARRANTY AND SUPPORT

This TRESemme 5543U Professional Diffuser Hair Dryer comes with **athree-year warranty** from the date of purchase, covering manufacturing defects under normal household use.

For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided in the information booklet included with your purchase.

Please retain your proof of purchase for warranty validation.