

[Manuals.plus](#) /

› [Lavish Home](#) /

› Lavish Home 72-0820 Full Spectrum Sunlight Floor Lamp User Manual

Lavish Home 72-0820

Lavish Home 72-0820 Full Spectrum Sunlight Floor Lamp User Manual

Model: 72-0820

1. INTRODUCTION

Thank you for choosing the Lavish Home 72-0820 Full Spectrum Sunlight Floor Lamp. This lamp is designed to provide bright, natural light, helping to reduce eye strain and fatigue. Its modern design, flexible gooseneck, and energy-efficient bulb make it suitable for various tasks such as reading, crafting, studying, or professional use.



Image 1: The Lavish Home 72-0820 Floor Lamp in a typical living room environment.

2. SAFETY INFORMATION

- Read all instructions before assembly and use.
- Do not operate the lamp with a damaged cord or plug.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Do not expose the lamp to water or excessive moisture.
- Unplug the lamp from the power outlet before cleaning or replacing the bulb.
- Use only the specified bulb type (PL-27W) to avoid damage or fire hazard.
- Keep children and pets away from the lamp during operation.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Head with Flexible Gooseneck
- Base Pole 1
- Base Pole 2
- Lamp Base
- PL-27W Bulb
- Power Cord (integrated)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Lavish Home Floor Lamp:

1. **Thread Power Cord:** Take the power cord from the flexible neck pole and thread it through Base Pole 1.
2. **Connect Base Poles:** Once the power cord is through Base Pole 1, thread it through Base Pole 2. Screw Base Pole 1 and Base Pole 2 together securely.
3. **Connect to Lamp Base:** Take the end of the power cord from Base Pole 2 and connect it to the lamp base. Ensure you hear a click to confirm it's securely attached. Then, screw Base Pole 2 onto the lamp base until it is firm.
4. **Insert Bulb:** Open the lamp head cover. Place the PL-27W bulb into one side of the metal clip, then pull the other edge of the clip away from the bulb and release to secure it. Line up the pins and push firmly until you hear a click.
5. **Plug In:** Once the lamp is fully assembled, plug the power cord into a standard electrical outlet.

Assembly Video Guide

Video 1: Step-by-step assembly instructions for the Lavish Home 72-0820 Floor Lamp.

Smart Design Meets Powerful Lighting



PL-27W Bulb



Flexible Gooseneck



Rocker Style On/Off Switch



Weighted Base



Image 2: Key features of the lamp, including the PL-27W bulb, flexible gooseneck, rocker style on/off switch, and weighted base.

5. OPERATING INSTRUCTIONS

To operate your floor lamp:

- **Power On/Off:** Locate the rocker-style on/off switch on the lamp head. Flip the switch to turn the lamp on or off.
- **Adjusting the Light:** The lamp features a flexible gooseneck arm. Gently bend and position the gooseneck to direct the light exactly where needed. The height can be adjusted from approximately 50.2 inches (angled at 90 degrees) to 62.5 inches (straight neck).



Precision Lighting for Every Task

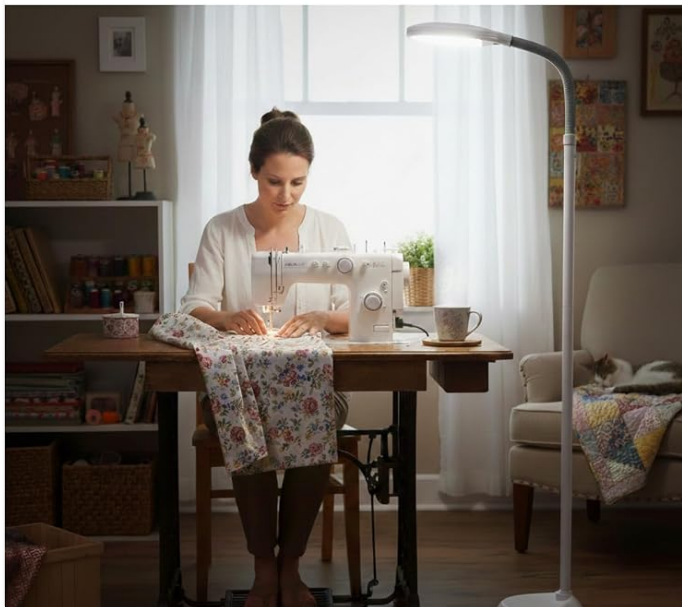


Image 3: Examples of the lamp's versatile use for various tasks.

6. MAINTENANCE

- **Bulb Replacement:** The lamp uses a PL-27W bulb. To replace, unplug the lamp, open the lamp head cover, and carefully remove the old bulb by pulling the metal clip away. Insert the new bulb as described in the 'Setup and Assembly' section.
- **Cleaning:** Ensure the lamp is unplugged before cleaning. Wipe the lamp's surfaces with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.

7. TROUBLESHOOTING

- **Lamp Not Turning On:**
 - Check if the power cord is securely plugged into the wall outlet and the lamp base.
 - Ensure the on/off switch is in the 'On' position.
 - Verify that the bulb is correctly inserted and not loose.

- Test the outlet with another appliance to confirm it is functional.
- If the bulb is old, it may need replacement.
- **Light Flickering:**
 - Ensure the bulb is fully seated in its socket.
 - The bulb may be nearing the end of its lifespan and require replacement.
- **Lamp is Unstable:**
 - Ensure all pole sections are tightly screwed together and the base is firmly attached.
 - Place the lamp on a flat, stable surface.

8. SPECIFICATIONS

Feature	Detail
Model Number	72-0820
Brand	Lavish Home
Color	Beige
Material	Metal, Plastic
Product Dimensions (D x W x H)	9"D x 9"W x 60"H
Adjustable Height	50.2" (angled) to 62.5" (straight)
Light Source Type	CFL
Bulb Type	PL-27W (included)
Color Temperature	6400K (Full Spectrum)
Wattage	27 watts
Voltage	120 Volts
Switch Type	Rocker
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor

Meticulously Crafted for Ideal Height

Dimensions: Straight Neck: (L) 10.2" x (W) 8.7" x (H) 62.5";
Angled at 90-Degrees: (H) 50.2"

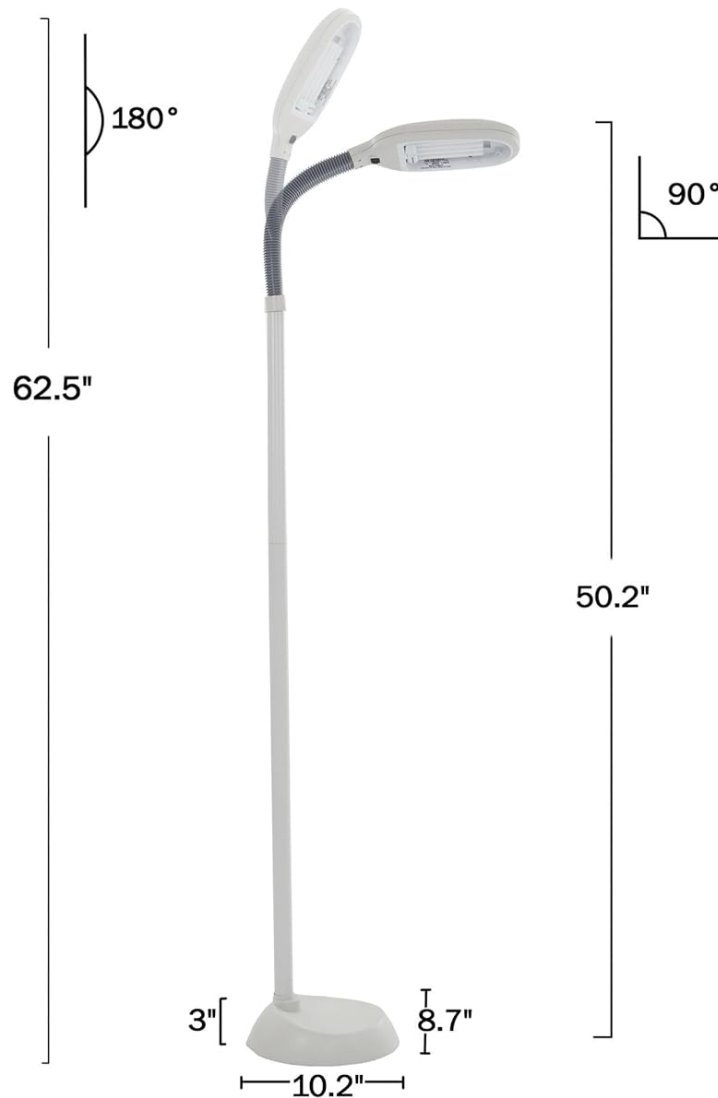


Image 4: Detailed dimensions of the lamp in both straight and angled configurations.

9. WARRANTY

This product is covered by the manufacturer's standard warranty. Please refer to the product packaging or contact Lavish Home customer service for specific warranty details and terms.

10. SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Lavish Home customer service. Contact information can typically be found on the product packaging or the official Lavish Home website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question