

Oki Data 44469702

Oki Data Type C17 C330/530/MC361/MC561 Magenta Toner Cartridge User Manual

Model: **44469702** | Brand: **Oki Data**

1. PRODUCT OVERVIEW

The Oki Data Type C17 Magenta Toner Cartridge is an essential component for your Oki Data C330, 331, 530, 531, MC361, and MC561 series printers. This genuine OEM cartridge is engineered to deliver crisp, clear, and professional-quality magenta prints, ensuring vibrant color reproduction for all your documents and images. With an approximate yield of 3,000 pages, it provides reliable and consistent performance for your printing needs.

- **Genuine OEM Quality:** Ensures compatibility and optimal performance with specified Oki Data printers.
- **Reliable Performance:** Designed to perform consistently and dependably throughout its lifespan.
- **Efficient Toner Usage:** Engineered for effective toner utilization, maximizing page yield.
- **High Page Yield:** Produces approximately 3,000 pages, suitable for regular printing demands.



Image 1.1: The Oki Data Type C17 Magenta Toner Cartridge (part number 44469702) shown with its retail packaging. The packaging indicates compatibility with C330dn/C530dn printers and highlights it as a genuine Oki consumable for HD quality printing. The cartridge itself is gray with a prominent blue locking mechanism.

2. SETUP AND INSTALLATION

Follow these steps to properly install the Oki Data Type C17 Magenta Toner Cartridge into your compatible Oki printer. Always refer to your printer's specific user manual for detailed instructions on opening the printer and accessing the toner compartment.

1. **Prepare the Printer:** Ensure your printer is powered on and open the front cover or access panel to expose the toner cartridge slots. Allow the printer to cool down if it has been recently in use.
2. **Remove Old Cartridge (if applicable):** Carefully grasp the handle of the used magenta toner cartridge and pull it straight out of the printer. Place the old cartridge in a protective bag for recycling.
3. **Unpack New Cartridge:** Remove the new Oki Data Type C17 Magenta Toner Cartridge from its packaging. Avoid touching the green drum surface or the electrical contacts.

- 4. **Gently Shake Cartridge:** Gently rock the new toner cartridge horizontally several times to distribute the toner evenly inside.
- 5. **Remove Protective Seals:** Carefully remove any protective tapes, seals, or covers from the cartridge as indicated by the packaging or cartridge itself. Do not force or tear any components.
- 6. **Insert New Cartridge:** Align the new magenta toner cartridge with the corresponding slot in the printer. Gently push the cartridge firmly into place until it clicks securely. Ensure it is fully seated.
- 7. **Close Printer Cover:** Close the printer's front cover or access panel. The printer will typically perform a self-calibration or initialization process.
- 8. **Print Test Page:** Once the printer is ready, print a test page to confirm proper installation and print quality.

3. OPERATING GUIDELINES

Once installed, the Oki Data Type C17 Magenta Toner Cartridge operates automatically as part of your printer's system. No specific user interaction is required for its daily function beyond standard printing tasks. The printer's software will monitor toner levels and alert you when the cartridge is nearing depletion.

- **Toner Level Monitoring:** Your printer's utility software or control panel will display estimated toner levels. Replace the cartridge when the printer indicates low toner or print quality degrades significantly.
- **Print Quality:** For optimal print quality, use genuine Oki Data paper and ensure your printer drivers are up to date.
- **Environmental Conditions:** Operate your printer in a stable environment, avoiding extreme temperatures or humidity, which can affect toner performance.

4. MAINTENANCE AND STORAGE

Proper handling and storage of your toner cartridge can extend its shelf life and ensure consistent print quality.

- **Storage:** Store new, unused toner cartridges in their original sealed packaging in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing cartridges vertically.
- **Handling:** When handling the cartridge, avoid touching the drum surface or electrical contacts, as oils from your skin can affect print quality.
- **Recycling:** Always recycle used toner cartridges responsibly. Oki Data often provides recycling programs; check their official website for details.
- **Cleaning:** Do not attempt to clean the toner cartridge itself. If print quality issues arise, refer to the troubleshooting section or your printer's manual for cleaning procedures related to the printer's internal components.

5. TROUBLESHOOTING

If you encounter issues with print quality or cartridge recognition, consider the following common troubleshooting steps:

Problem	Possible Cause	Solution
Faded or Light Prints	Low toner level; uneven toner distribution.	Gently rock the cartridge to redistribute toner. If problem persists, replace the cartridge.
Streaks or Lines on Prints	Contaminated drum or internal printer components.	Do not touch the cartridge drum. Refer to your printer's manual for drum cleaning procedures.

Problem	Possible Cause	Solution
Cartridge Not Recognized	Improper installation; dirty electrical contacts.	Reinstall the cartridge, ensuring it clicks into place. Clean printer's electrical contacts with a lint-free cloth if accessible.
Printer Error Message	Cartridge issue; printer malfunction.	Check the error code against your printer's manual. Power cycle the printer. Ensure genuine Oki cartridge is used.

If troubleshooting steps do not resolve the issue, contact Oki Data customer support or consult a qualified service technician.

6. SPECIFICATIONS

Feature	Detail
Product Name	Oki Data Type C17 Toner Cartridge
Part Number (P/N)	44469702
Ink Color	Magenta
Page Yield (Approx.)	3,000 pages
Compatible Printer Models	Oki Data C330, C331, C530, C531, MC361, MC561
Material Type	Plastic
Item Weight	7.2 ounces (0.45 pounds)
Product Dimensions (L x W x H)	2.25 x 12.25 x 2.25 inches
Included Components	1x Laser Printer Toner Cartridge

7. WARRANTY INFORMATION

Specific warranty details for Oki Data toner cartridges are typically provided with the product packaging or can be found on the official Oki Data website. As a genuine OEM product, this cartridge is generally covered by Oki Data's standard consumables warranty, which protects against defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims.

For the most current and detailed warranty policy, please visit the official Oki Data support website or contact their customer service directly.

8. CUSTOMER SUPPORT

For technical assistance, product inquiries, or support regarding your Oki Data Type C17 Magenta Toner Cartridge or compatible Oki printer, please contact Oki Data customer support through their official channels.

- **Official Website:** Visit www.okidata.com for support resources, FAQs, and contact information.
- **Service Centers:** Information on authorized service centers can be found on the Oki Data website.

When contacting support, please have your printer model, cartridge part number (44469702), and a description of the issue ready to facilitate faster assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question