

[Manuals.plus](#) /

› [Xavax](#) /

› Xavax 00092695 Digital Kitchen Scale User Manual

Xavax 00092695

Xavax 00092695 Digital Kitchen Scale

User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Xavax 00092695 Digital Kitchen Scale. Please read this manual thoroughly before using the device and keep it for future reference.

SAFETY INFORMATION

- Do not immerse the scale in water or other liquids.
- Clean the scale with a damp cloth only.
- Do not overload the scale beyond its maximum capacity.
- Keep the scale away from extreme temperatures and direct sunlight.
- This appliance is for household use only.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Xavax 00092695 Digital Kitchen Scale
- User Manual (this document)
- Batteries (typically 2x AAA or similar, may be included)

PRODUCT OVERVIEW

The Xavax 00092695 is a flat digital kitchen scale with a safety glass platform, designed for precise weighing of ingredients. It features an LCD display and touch-sensitive controls.



Image: Front view of the Xavax 00092695 Digital Kitchen Scale, showing the glass platform and the LCD display with control buttons.



Image: The Xavax 00092695 Digital Kitchen Scale placed on a kitchen counter next to other kitchen items, demonstrating its compact size and integration into a kitchen environment.

Key Components:

- **Weighing Platform:** Safety glass surface for placing items.
- **LCD Display:** Shows weight, units, and timer information.
- **Control Buttons:** Typically include Power/Tare, Unit, and Timer functions.
- **Battery Compartment:** Located on the underside of the scale.

SETUP

1. Battery Installation

1. Turn the scale upside down.
2. Locate the battery compartment cover.
3. Open the cover and insert the required batteries (e.g., 2x AAA) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.

2. Placement

- Place the scale on a hard, flat, and stable surface to ensure accurate readings.
- Avoid placing the scale on soft or uneven surfaces, which can affect accuracy.
- Keep the scale away from strong electromagnetic fields or vibrations.

OPERATING INSTRUCTIONS

1. Turning On/Off

- To turn on: Press the **ON/TARE** button. The display will show "0" or "0.0" when ready.
- To turn off: Press and hold the **ON/TARE** button for a few seconds, or the scale will automatically shut off after a period of inactivity (auto-off function).

2. Weighing Items

1. Place the scale on a flat, stable surface.
2. Press **ON/TARE** to turn on the scale. Ensure the display shows "0".
3. Gently place the item(s) to be weighed onto the center of the weighing platform.
4. Read the weight displayed on the LCD screen.



Image: The Xavax 00092695 Digital Kitchen Scale displaying a weight of 780g for pineapple slices on its glass platform.

3. Tare Function (Zeroing)

The tare function allows you to weigh multiple ingredients in the same container or to subtract the weight of a container.

1. Place an empty container on the weighing platform. The display will show its weight.
2. Press the **ON/TARE** button. The display will reset to "0".
3. Add the first ingredient to the container. The display will show the weight of the ingredient only.
4. To add more ingredients, press **ON/TARE** again after each ingredient to reset the display to "0".

4. Unit Conversion

To change the unit of measurement (e.g., grams, pounds, ounces):

- With the scale on, press the **UNIT** button repeatedly to cycle through the available units.
- The selected unit will be displayed on the LCD screen.

5. Timer Function

This scale includes a basic timer function for convenience.

1. Press the **CLOCK/TIMER** button to activate the timer.
2. Use the **ZERO** and **UNIT** buttons (or dedicated timer adjustment buttons if present) to set the desired time.
3. Press **CLOCK/TIMER** again to start the countdown.
4. An alarm will sound when the timer reaches zero. Press any button to stop the alarm.

MAINTENANCE

1. Cleaning

- Wipe the scale surface with a soft, damp cloth.
- For stubborn stains, use a mild detergent and then wipe with a clean, damp cloth.
- Do not use abrasive cleaners or immerse the scale in water.
- Ensure the scale is completely dry before storage or next use.

2. Storage

- Store the scale in a cool, dry place.
- Avoid placing heavy objects on the scale when not in use.
- If the scale will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on	Dead or incorrectly installed batteries	Check battery polarity; replace batteries.
Inaccurate readings	Uneven surface; overloaded scale; scale not tared	Place on a flat, stable surface; do not exceed max capacity; use tare function.
"Lo" or "Err" displayed	Low battery; overload indication	Replace batteries; remove excess weight from the platform.

SPECIFICATIONS

Feature	Detail
Model Number	00092695
Brand	Xavax
Material	Safety Glass (Platform)

Feature	Detail
Display Type	LCD
Special Functions	Auto Zero, Easy to Clean, Overload Indicator, Anti-slip feet, Timer Function
Product Weight	594 g (1.31 lbs)
Recommended Use	Kitchen

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Xavax customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the official Xavax store for more information: [Xavax Store](#)