

Toastmaster TOV350W

Toastmaster TOV350W 1000-Watt 4-Slice Countertop Oven and Grill User Manual

Model: TOV350W

1. INTRODUCTION

Thank you for purchasing the Toastmaster TOV350W 1000-Watt 4-Slice Countertop Oven and Grill. This appliance is designed for versatility and convenience in your kitchen, allowing you to toast, bake, broil, and reheat a variety of foods. With its compact design and user-friendly controls, it's an ideal addition for everyday cooking needs. Please read this manual thoroughly before operating your new appliance to ensure safe and efficient use.

Key features of your Toastmaster TOV350W include:

- 4-slice capacity, suitable for toast or small baking tasks.
- 1000 watts of power for efficient cooking.
- Full-range temperature control for precise cooking.
- 30-minute countdown timer with a stay-on function.
- Non-stick interior for easy cleaning.
- Convenient slide-out crumb tray.
- Includes a two-position slide rack and baking pan.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or potholders when handling hot materials.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.

5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
15. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
16. Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
17. Do not place paper, cardboard, plastic, or other flammable materials in the oven.
18. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
19. Extreme caution should be exercised when using containers constructed of other than metal or glass.
20. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
21. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

3. PRODUCT OVERVIEW AND PARTS IDENTIFICATION

Familiarize yourself with the components of your Toastmaster TOV350W oven:



An image showing the white Toastmaster TOV350W countertop oven from a slight angle, highlighting the oven door, handle, temperature and timer dials, and the interior rack and baking pan.

- **Oven Door and Handle:** For accessing the oven interior.
- **Temperature Control Dial:** Used to select the desired cooking temperature.
- **Timer Dial:** Sets the cooking duration, up to 30 minutes, with a 'Stay On' option.

- **Power Indicator Light:** Illuminates when the oven is operating.
- **Wire Rack:** For toasting and baking. Can be placed in two positions.
- **Baking Pan:** For baking and broiling.
- **Crumb Tray:** Located at the bottom, slides out for easy cleaning.

4. SETUP AND FIRST USE

Unpacking

1. Carefully remove your oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or labels from the unit.
3. Retain the packaging for future storage or disposal.

Placement

1. Place the oven on a flat, stable, heat-resistant surface.
2. Ensure there is adequate ventilation around the oven (at least 4 inches of space on all sides and above). Do not place it directly against a wall or under cabinets.
3. Keep the oven away from flammable materials such as curtains, tablecloths, or paper products.

Initial Cleaning

1. Before first use, wipe the interior and exterior of the oven with a damp cloth.
2. Wash the wire rack, baking pan, and crumb tray in warm, soapy water. Rinse thoroughly and dry completely. These accessories are dishwasher safe.
3. Do not immerse the main unit, cord, or plug in water or any other liquid.

First Use (Burn-Off)

It is normal for a new appliance to emit a slight odor or smoke during its first use. This is due to the burning off of manufacturing residues. To minimize this, follow these steps:

1. Plug the oven into a standard electrical outlet.
2. Set the Temperature Control Dial to its highest setting.
3. Set the Timer Dial to 'Stay On' or for 15 minutes.
4. Operate the oven in a well-ventilated area for approximately 15 minutes.
5. Allow the oven to cool completely before using it for cooking.

5. OPERATING INSTRUCTIONS

General Operation

1. Place the wire rack and/or baking pan in the desired position inside the oven.
2. Place food directly on the wire rack or in the baking pan.
3. Close the oven door securely.
4. Plug the oven into a standard electrical outlet.
5. Turn the Temperature Control Dial to the desired temperature setting.
6. Turn the Timer Dial to the desired cooking time. The power indicator light will illuminate.
7. When the timer reaches 'OFF', a bell will sound, and the oven will turn off. If using the 'Stay On' function,

manually turn the timer to 'OFF' when cooking is complete.

8. Carefully remove cooked food using oven mitts.

Toasting

1. Place the wire rack in the upper position.
2. Place up to four slices of bread directly on the wire rack.
3. Close the oven door.
4. Turn the Temperature Control Dial to the 'Toast' setting (or a medium-high temperature).
5. Turn the Timer Dial to the desired toast shade (light, medium, dark) or a specific time.
6. The oven will turn off automatically when the timer expires.

Baking

1. Place the wire rack in the lower position for most baking tasks.
2. Place food in the baking pan, then place the baking pan on the wire rack.
3. Close the oven door.
4. Turn the Temperature Control Dial to the desired baking temperature (e.g., 350°F / 175°C).
5. Turn the Timer Dial to the required baking time. For longer baking times, use the 'Stay On' function and monitor manually.
6. When baking is complete, turn the Timer Dial to 'OFF' if using 'Stay On'.

Broiling/Grilling

The 'Grill' function on this appliance is typically referred to as 'Broil' in countertop ovens.

1. Place the wire rack in the upper position.
2. Place food in the baking pan. For best results, line the baking pan with aluminum foil to catch drippings.
3. Place the baking pan on the wire rack.
4. Close the oven door.
5. Turn the Temperature Control Dial to the 'Broil' setting (usually the highest temperature).
6. Turn the Timer Dial to the desired broiling time. Broiling often requires shorter times and close monitoring to prevent burning.
7. Flip food halfway through broiling if necessary for even cooking.
8. When broiling is complete, turn the Timer Dial to 'OFF'.

6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your oven.

1. Always unplug the oven from the electrical outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
3. **Interior:** The oven features a non-stick interior. Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaning pad can be used. Avoid using metal scouring pads.
4. **Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs. Wash the tray in warm, soapy water, rinse, and dry thoroughly. The crumb tray is dishwasher safe.
5. **Wire Rack and Baking Pan:** These accessories are dishwasher safe. Alternatively, wash them in warm,

soapy water, rinse, and dry completely.

6. Ensure all parts are completely dry before plugging the oven back in or storing it.
7. Do not immerse the main unit, cord, or plug in water or any other liquid.

Storage

When not in use, store the oven in a clean, dry place. Ensure the oven is cool and clean before storing.

7. TROUBLESHOOTING

If you encounter issues with your Toastmaster TOV350W oven, please refer to the following common problems and solutions:

- **Oven does not turn on:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the Temperature Control Dial and Timer Dial are set correctly (not on 'OFF').
 - Check your household circuit breaker or fuse box.
- **Food not cooking evenly:**
 - Ensure food is placed centrally on the rack or in the pan.
 - Preheat the oven for 5-10 minutes before placing food inside.
 - Rotate food halfway through cooking if necessary.
 - Verify the correct temperature and time settings for your recipe.
- **Excessive smoke during operation:**
 - This may occur during first use (see 'First Use' section).
 - Ensure the oven and crumb tray are clean and free of food debris or grease buildup.
 - Avoid using excessive oil or fat when cooking.
- **Timer not working or bell not sounding:**
 - Ensure the timer dial is wound past the 10-minute mark before setting the desired time to engage the mechanism.
 - If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact Toastmaster customer service for assistance.

8. SPECIFICATIONS

Attribute	Specification
Brand	Toastmaster
Model Number	TOV350W
Power	1000 Watts

Color	White
Material	Metal
Dimensions (L x W x H)	Approximately 16 x 12 x 9 inches (40.64 x 30.48 x 22.86 cm)
Weight	Approximately 1 lb (0.45 kg)
Capacity	4-slice

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Toastmaster website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require technical support or have questions not covered in this manual, please contact Toastmaster customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.